


REMOVAL

1. REMOVE REAR WHEEL
2. REMOVE REAR AXLE SHAFT (See page [SA-63](#))
3. REMOVE BRAKE CALIPER AND DISC
(See page [BR-34](#))
4. DISCONNECT ABS SPEED SENSOR

Remove the bolt and disconnect the ABS speed sensor.

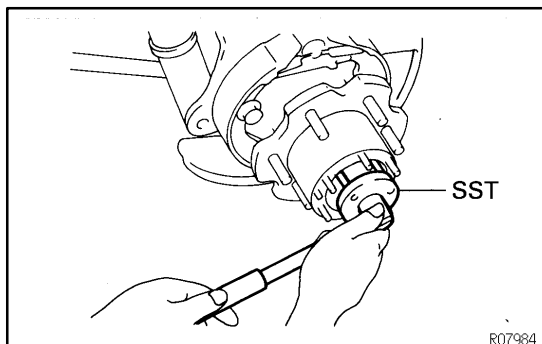

5. REMOVE REAR AXLE BEARING LOCK NUT

- (a) Remove the 2 screws from the lock nut.
- (b) Using SST, remove the lock nut.
SST 09509-2501 1

6. REMOVE REAR AXLE HUB

- (a) Pull out the axle hub, remove the lock nut plate and outer bearing.
- (b) Remove the axle hub.