



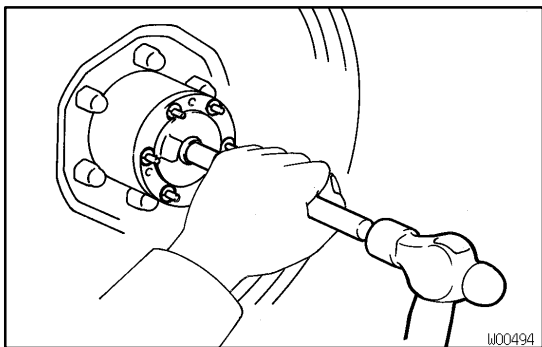

REMOVAL

REMOVE REAR AXLE SHAFT

- (a) Remove the 6 set nuts and plate washers.
Torque: 34 N·m (340 kgf·cm, 25 ft·lbf)
- (b) Using a brass bar and hammer, strike the center part of the axle shaft to remove the 6 cone washers.

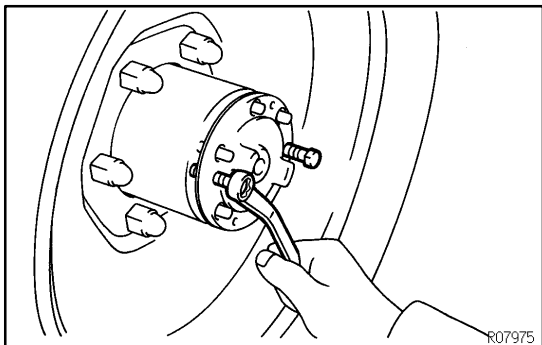

- (c) Install and gradually tighten 2 bolts evenly and pull the axle shaft.
- (d) Remove the 2 bolts from the rear axle shaft.
- (e) Remove the rear axle shaft and gasket.

NOTICE:

Be careful not to damage the oil seal.