



REPLACEMENT


1. DRAIN DIFFERENTIAL OIL
2. DISCONNECT REAR PROPELLER SHAFT
(See page [PR-3](#))

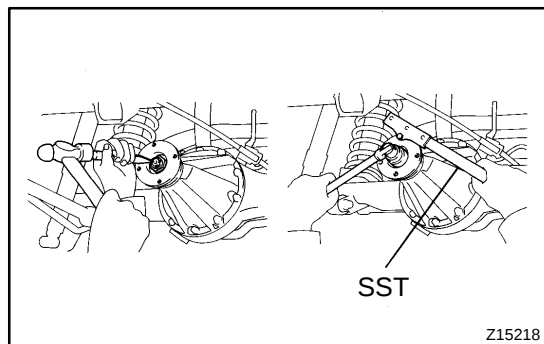


3. REMOVE COMPANION FLANGE
 - (a) Using a chisel and hammer, loosen the staked part of the nut.
 - (b) Using SST to hold the flange, remove the nut and plate washer.
SST 09330-00021

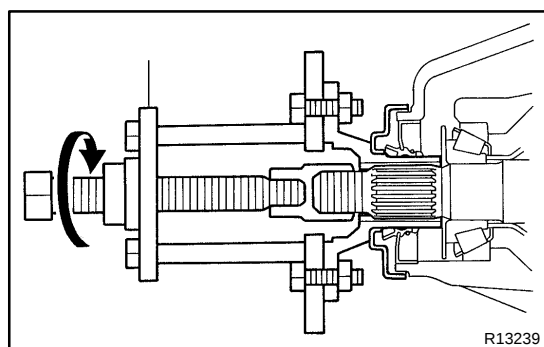


- (c) Using SST, remove the companion flange.
SST 09950-30010 (09951-03010, 09953-03010, 09954-03010, 09955-03030, 09956-03020)

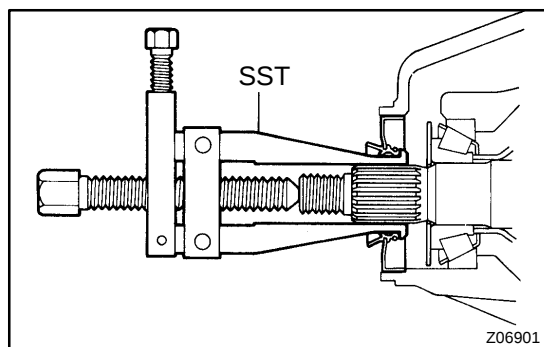

4. REMOVE OIL SEAL AND OIL SLINGER
 - (a) Using SST, remove the oil seal.
SST 09308-10010
 - (b) Remove the oil slinger.

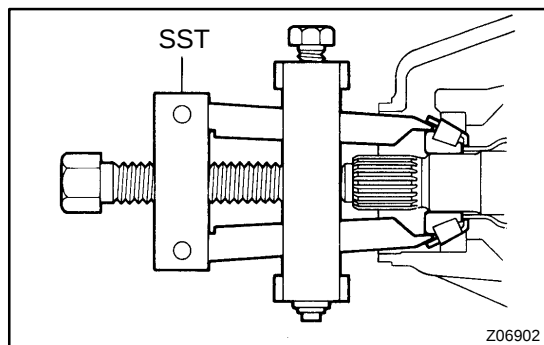

5. REMOVE FRONT BEARING
Using SST, remove the front bearing from the drive pinion.
SST 09556-22010

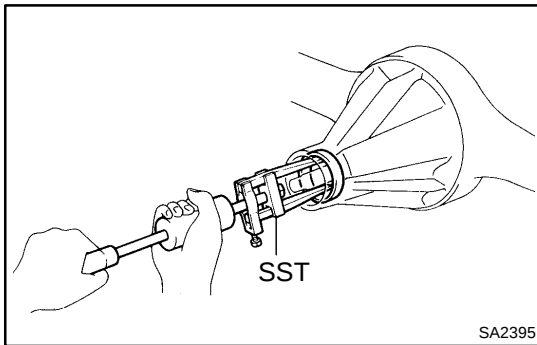
**6. REMOVE BEARING OUTER RACE**

Using SST, remove the bearing outer race.

SST 09308-00010


NOTICE:

Do not scratch the taper surface of the outer race.

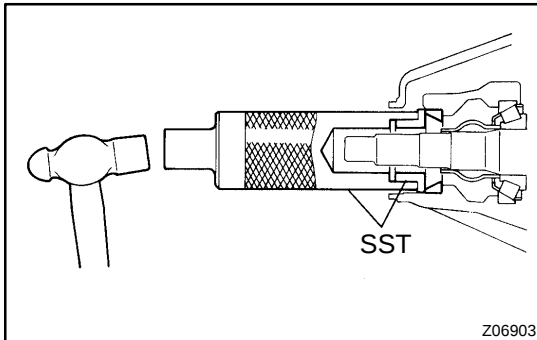7. REMOVE BEARING SPACER**8. INSTALL NEW BEARING SPACER****9. INSTALL BEARING OUTER RACE**

Using SST, install the bearing outer race.

SST 09316-6001 1 (09316-00011, 09316-00021)

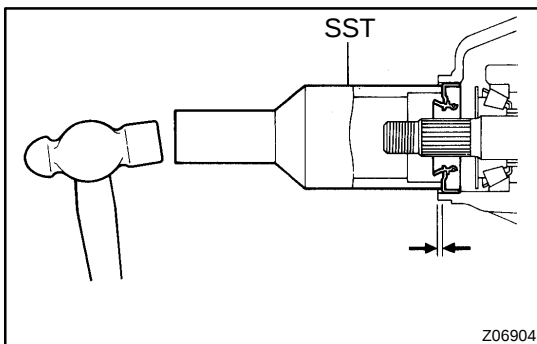10. INSTALL FRONT BEARING**11. INSTALL OIL SLINGER AND OIL SEAL**


(a) Install the oil slinger.

(b) Using SST, install a new oil seal, as shown.

SST 09214-7601 1

Oil seal drive in depth: 1.0 mm (0.039 in.)

(c) Apply MP grease to the oil seal lip.

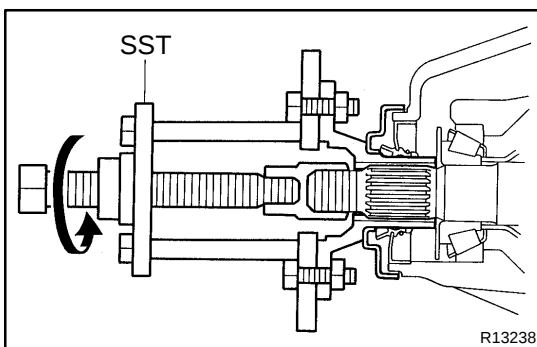
**12. INSTALL COMPANION FLANGE**

(a) Using SST, install the companion flange on the drive pinion.

SST 09950-30010 (09951-03010, 09953-03010, 09954-03010, 09955-03030, 09956-03020)

(b) Place the plate washer on the companion flange.

(c) Apply light coat of gear oil on threads of a new companion flange nut.

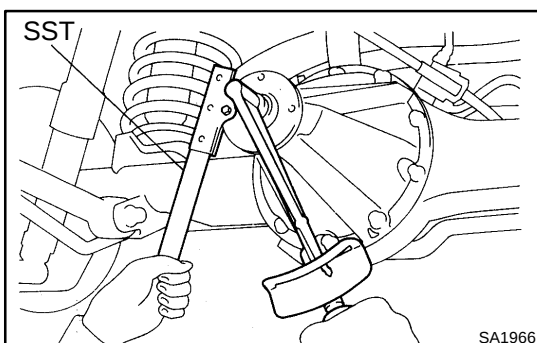

(d) Using SST to hold the flange, torque the nut.

SST 09330-00021


Torque: 245 N·m (2,500 kgf·cm, 181 ft·lbf)

13. ADJUST DRIVE PINION PRELOAD

(See page [SA-73](#))

14. STAKE DRIVE PINION NUT**15. CONNECT REAR PROPELLER SHAFT**

(See page [PR-5](#))

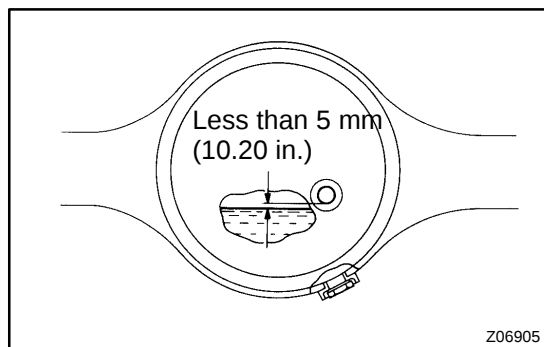

- 16. FILL DIFFERENTIAL WITH GEAR OIL**
Torque: 49 N·m (500 kgf·cm, 39 ft·lbf)
Oil type: Hypoid gear oil API GL-5
Recommended oil viscosity:
Above -18°C (0°F) SAE 90
Below -18°C (0°F) SAE 80W-90 or 80W
Capacity:
3.25 liters (3.4 US qts, 2.9 Imp. qts)