



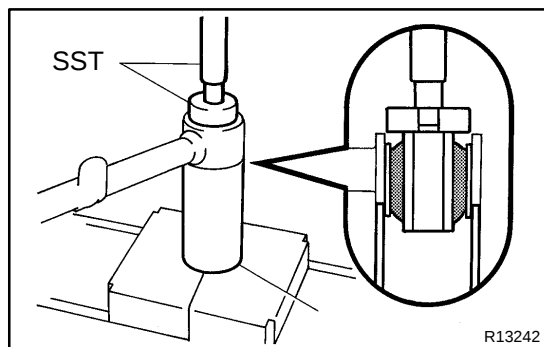


REPLACEMENT

1. REPLACE UPPER CONTROL ARM BUSHING

- (a) Using SST and a press, remove the bushing.
 SST 09226-10010, 09950-60010 (09951-00490),
 09950-70010 (09951-07100)

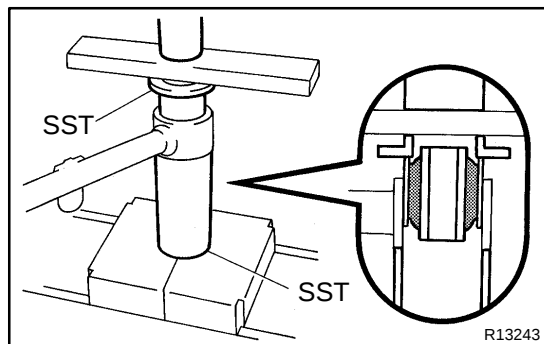


- (b) Using SST and a press, install a new bushing.
 SST 09226-10010, 09506-35010

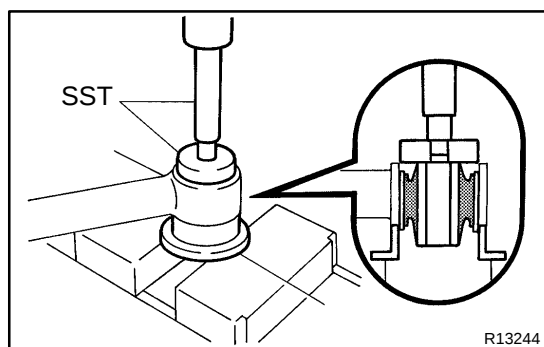

2. REPLACE LOWER CONTROL ARM BUSHING

- (a) Using SST and a press, remove the bushing.
 SST 09506-35010, 09950-60010 (09951-00540),
 09950-70010 (09951-07100)

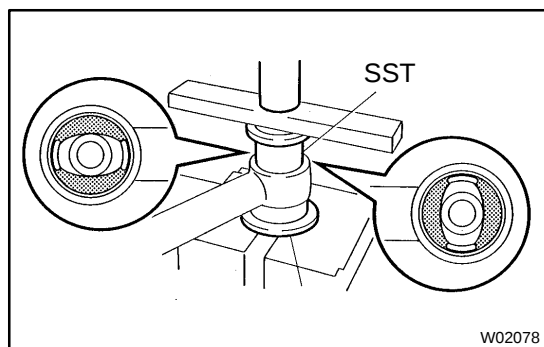

- (b) Using SST and a press, install a new bushing, as shown.
 SST 09316-2001 1, 09506-35010