



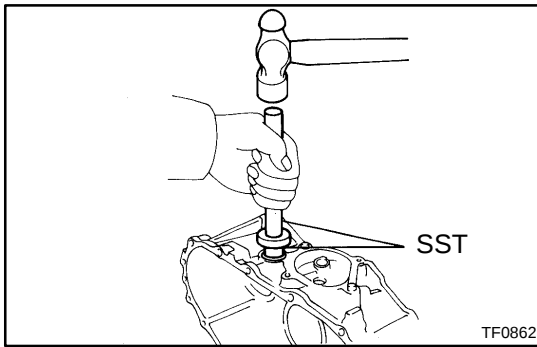

REPLACEMENT


1. REPLACE SHIFT LEVER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.
- (b) Using SST and a hammer, drive in a new oil seal.
SST 0608-00081, 09950-70010 (09951-07150)

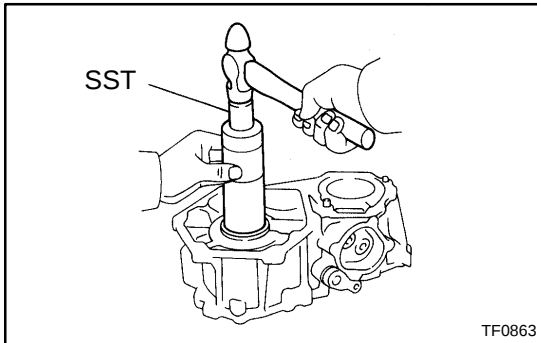

2. REPLACE INPUT SHAFT OIL SEAL

- (a) Using SST and a hammer, drive out the oil seal.
SST 09316-6001 1 (09316-00011)

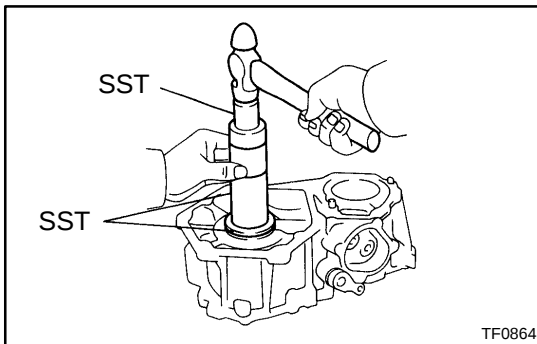

- (b) Using SST and a hammer, drive in a new oil seal.
SST 09316-6001 1 (09316-00011, 09316-00031)