


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

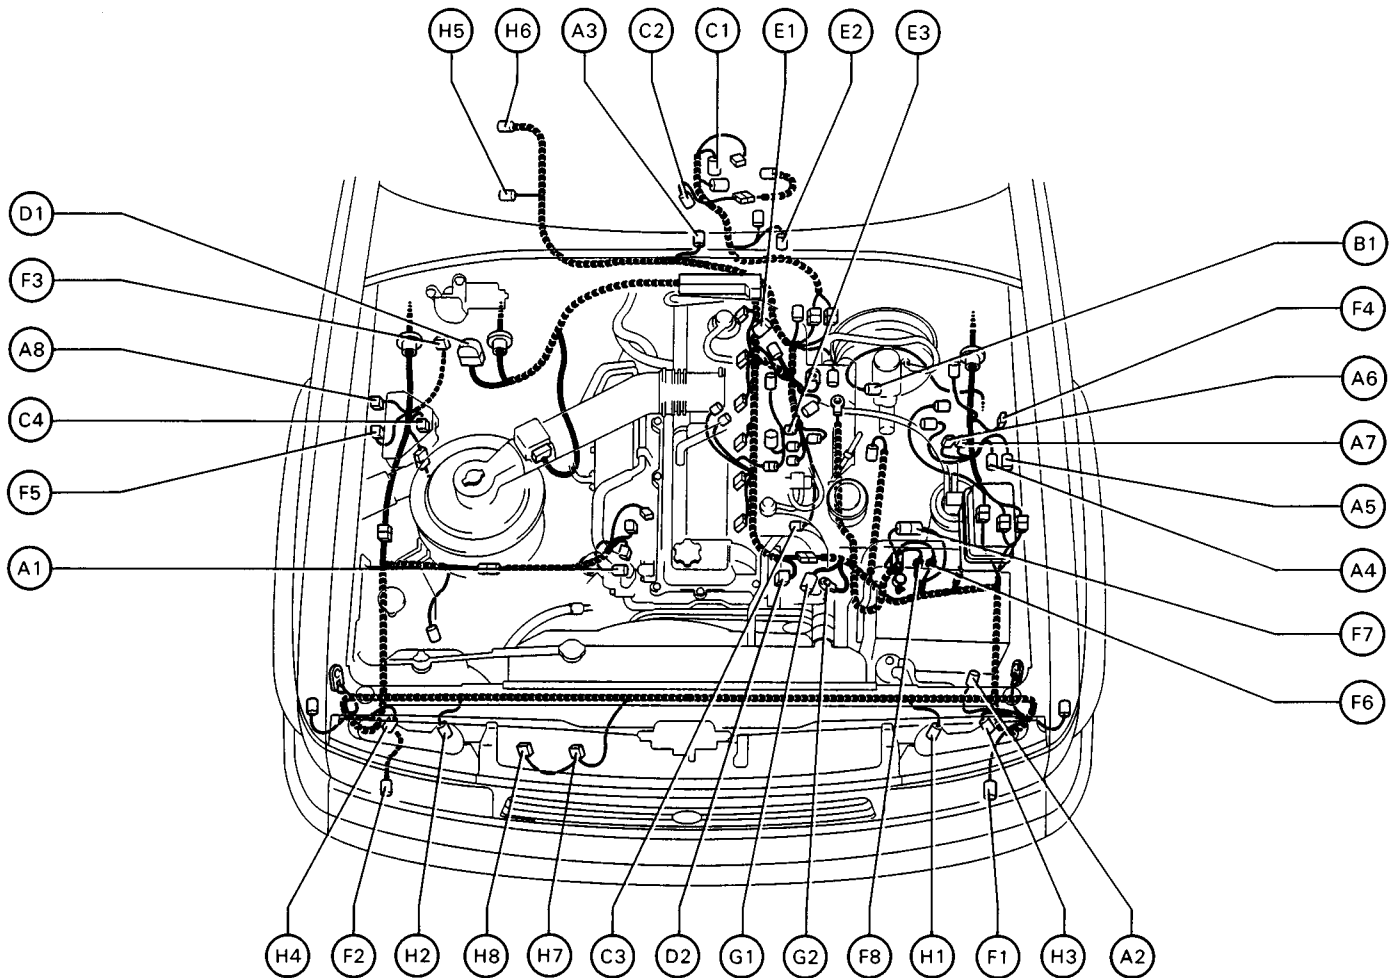

- A 1 A/C Magnetic Clutch
- A 2 A/C Dual Pressure SW
- A 3 A/T Fluid Temp. Sensor
- A 4 ABS Actuator
- A 5 ABS Actuator
- A 6 ABS Relay
- A 7 ABS Relay
- A 8 Auto Antenna Motor

- B 1 Brake Fluid Level Warning SW

- C 1 Center Diff. Lock Control Motor
- C 2 Center Diff. Lock Indicator SW
- C 3 Crankshaft Position Sensor
- C 4 Cruise Control Actuator

- D 1 Data Link Connector 1
- D 2 Distributor


- E 1 EGR Gas Temp. Sensor
- E 2 Electronically Controlled Transmission Solenoid
- E 3 Engine Coolant Temp. Sensor

- F 1 Front Turn Signal Light LH
- F 2 Front Turn Signal Light RH
- F 3 Front Wiper Motor
- F 4 Fuel Pump Relay
- F 5 Fuel Pump Resistor
- F 6 Fusible Link (AM1)
- F 7 Fusible Link (AM2)
- F 8 Fusible Link (Main)

- G 1 Generator
- G 2 Generator

- H 1 Headlight Hi LH
- H 2 Headlight Hi RH
- H 3 Headlight Lo LH
- H 4 Headlight Lo RH
- H 5 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 6 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 7 Horn LH
- H 8 Horn RH

Position of Parts in Engine Compartment

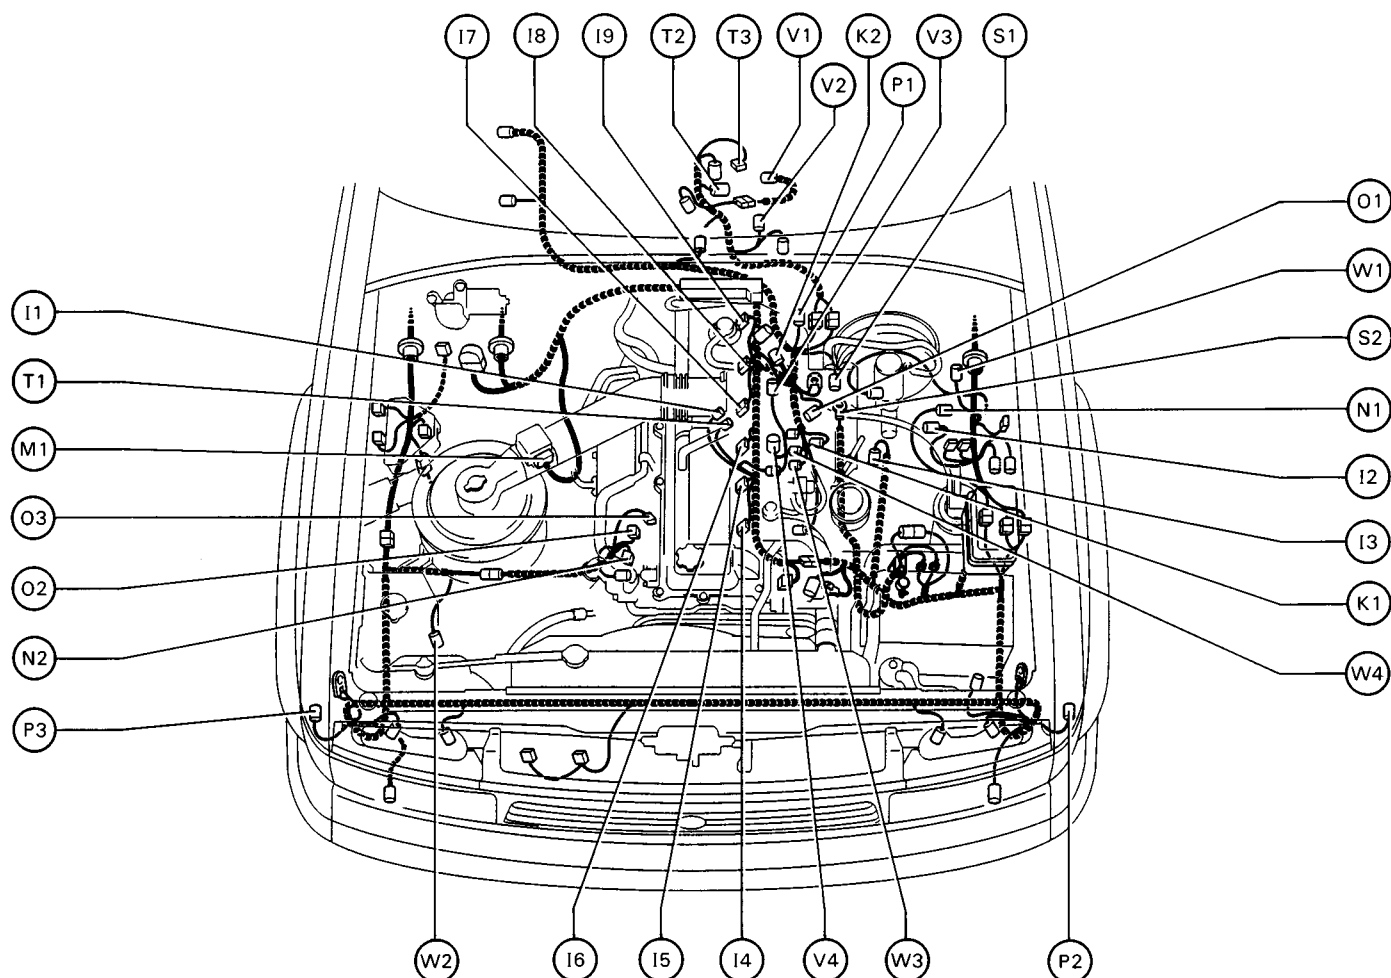

I 1 Idle Air Control Valve
 I 2 Igniter
 I 3 Ignition Coil
 I 4 Injector No. 1
 I 5 Injector No. 2
 I 6 Injector No. 3
 I 7 Injector No. 4
 I 8 Injector No. 5
 I 9 Injector No. 6

K 1 Knock Sensor 1
 K 2 Knock Sensor 2

M 1 Mass Air Flow

N 1 Noise Filter (Ignition System)
 N 2 Noise Filter (Oil Pressure Sender)

O 1 Oil Level Warning SW
 O 2 Oil Pressure Sender
 O 3 Oil Pressure Sender

P 1 Park/Neutral Position SW
 P 2 Parking Light LH
 P 3 Parking Light RH

S 1 Starter
 S 2 Starter


T 1 Throttle Position Sensor
 T 2 Transfer L4 Position SW
 T 3 Transfer Neutral Position SW

V 1 Vehicle Speed Sensor (Combination Meter)
 V 2 Vehicle Speed Sensor (Electronically Controlled Transmission)
 V 3 VSV (EGR)
 V 4 VSV (Fuel Pressure Control)

W 1 Washer Change Valve
 W 2 Washer Motor
 W 3 Water Temp. Sender
 W 4 Water Temp. SW (A/C)

G ELECTRICAL WIRING ROUTING


Position of Parts in Instrument Panel

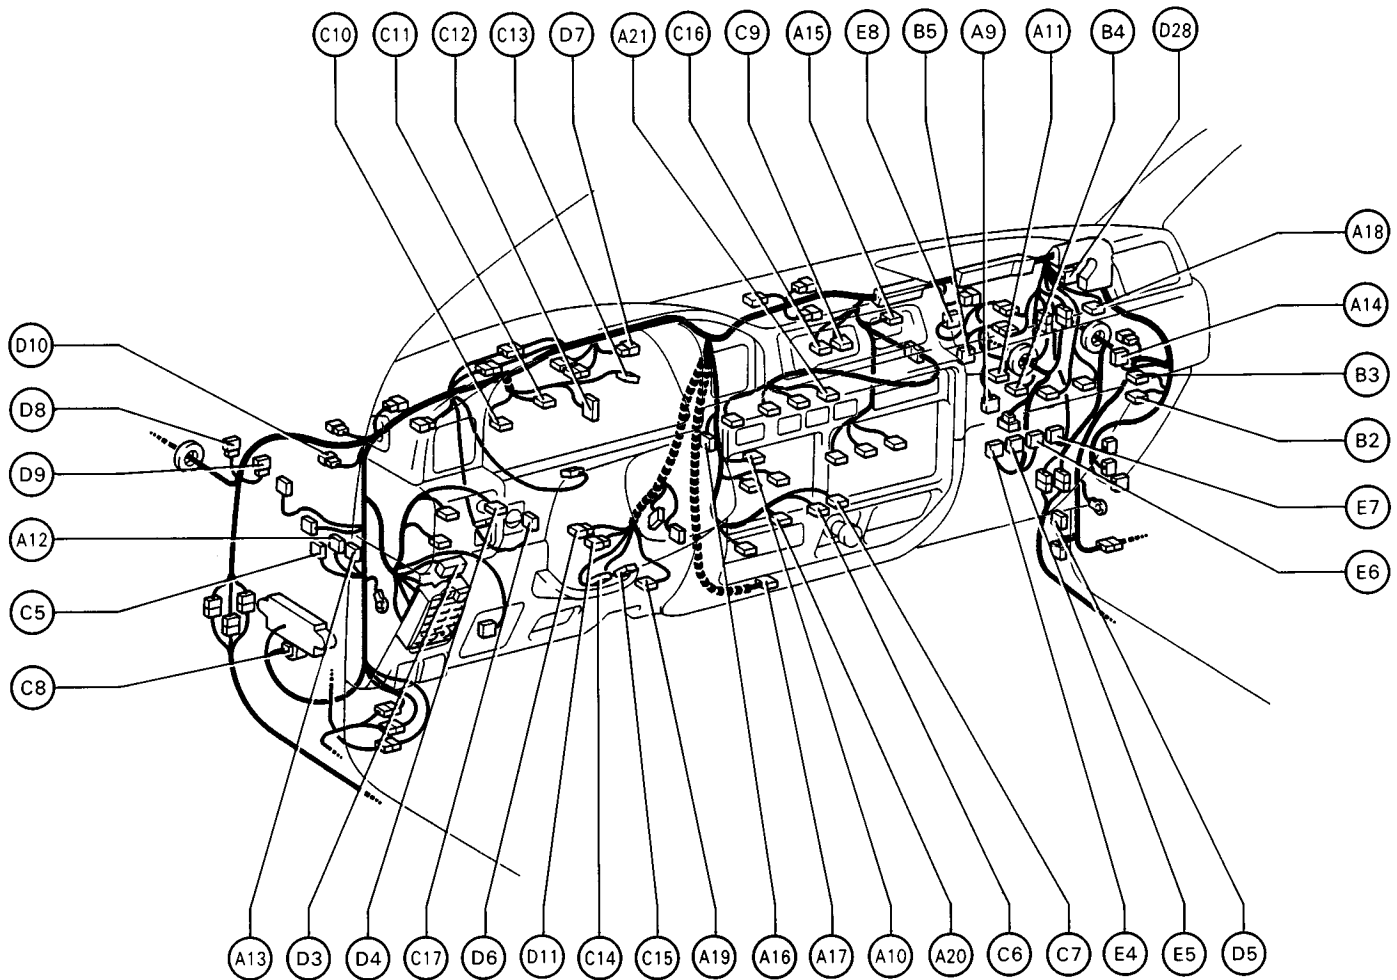

- A 9 A/C Amplifier
- A 10 A/C System Amplifier
- A 11 A/C Thermistor
- A 12 ABS ECU
- A 13 ABS ECU
- A 14 Air Inlet Control Servo Motor
- A 15 Air Mix Control Servo Motor
- A 16 Air Vent Mode Control Servo Motor
- A 17 Airbag Sensor Assembly
- A 18 Airbag Squib (Front Passenger's Airbag Assembly)
- A 19 Airbag Squip (Steering Wheel Pad)
- A 20 Ashtray Illumination
- A 21 Auto Antenna Control SW
- B 2 Blower Motor (A/C)
- B 3 Blower Motor (Heater)
- B 4 Blower Resistor
- B 5 Blower Speed Control Relay
- C 5 Center Diff. Lock Control Relay
- C 6 Cigarette Lighter
- C 7 Cigarette Lighter Illumination
- C 8 Circuit Opening Relay
- C 9 Clock
- C 10 Combination Meter

- C 11 Combination Meter
- C 12 Combination Meter
- C 13 Combination Meter
- C 14 Combination SW
- C 15 Combination SW
- C 16 Cooling Fan (Radio and Player)
- C 17 Cruise Control ECU
- D 3 Data Link Connector 3
- D 4 Diff. Lock Control SW
- D 5 Diff. Lock ECU
- D 6 Diode (Front Washer)
- D 7 Diode (Headlight)
- D 8 Diode (Interior Light)
- D 9 Diode (Interior Light)
- D 10 Diode (Interior Light)
- D 11 Diode (Rear Washer)
- D 28 Diode (Neutral Detection)
- E 4 Engine Control Module
- E 5 Engine Control Module
- E 6 Engine Control Module
- E 7 Engine Control Module
- E 8 Engine Control Temp. Cut Relay

Position of Parts in Instrument Panel

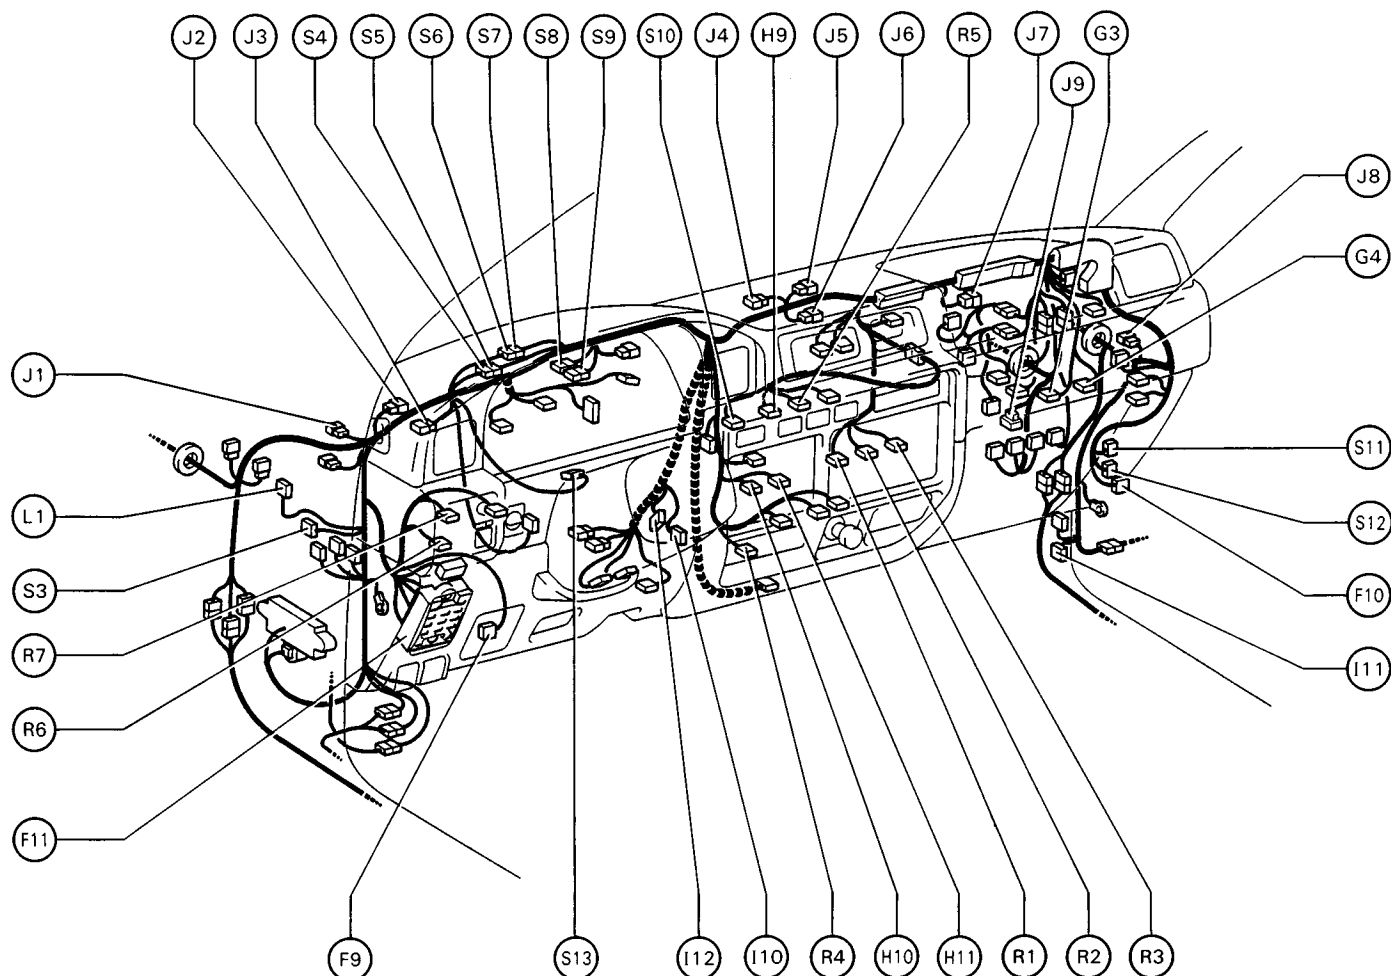

F 9 Front Speaker LH
F 10 Front Speaker RH
F 11 Fuse Block

G 3 Glove Box Light
G 4 Glove Box Light SW

H 9 Hazard SW
H 10 Heater Control SW and A/C SW
H 11 Heater Control SW and A/C SW

I 10 Ignition Key Cylinder Light
I 11 Ignition Key Cylinder Light Relay
I 12 Ignition SW, Unlock Warning SW and Key Interlock Solenoid

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector


L 1 Light Retainer Relay

R 1 Radio and Player
R 2 Radio and Player
R 3 Radio and Player
R 4 Rear Heater SW
R 5 Rear Window Defogger SW
R 6 Remote Control Mirror SW
R 7 Rheostat

S 3 Seat Belt Warning Relay
S 4 Short Connector (SRS)
S 5 Short Connector (SRS)
S 6 Short Connector (SRS)
S 7 Short Connector (SRS)
S 8 Short Connector (A/C)
S 9 Short Connector (A/C)
S 10 Short Pin (Center Diff. Lock)
S 11 Stereo Component Amplifier
S 12 Stereo Component Amplifier
S 13 Stop Light SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

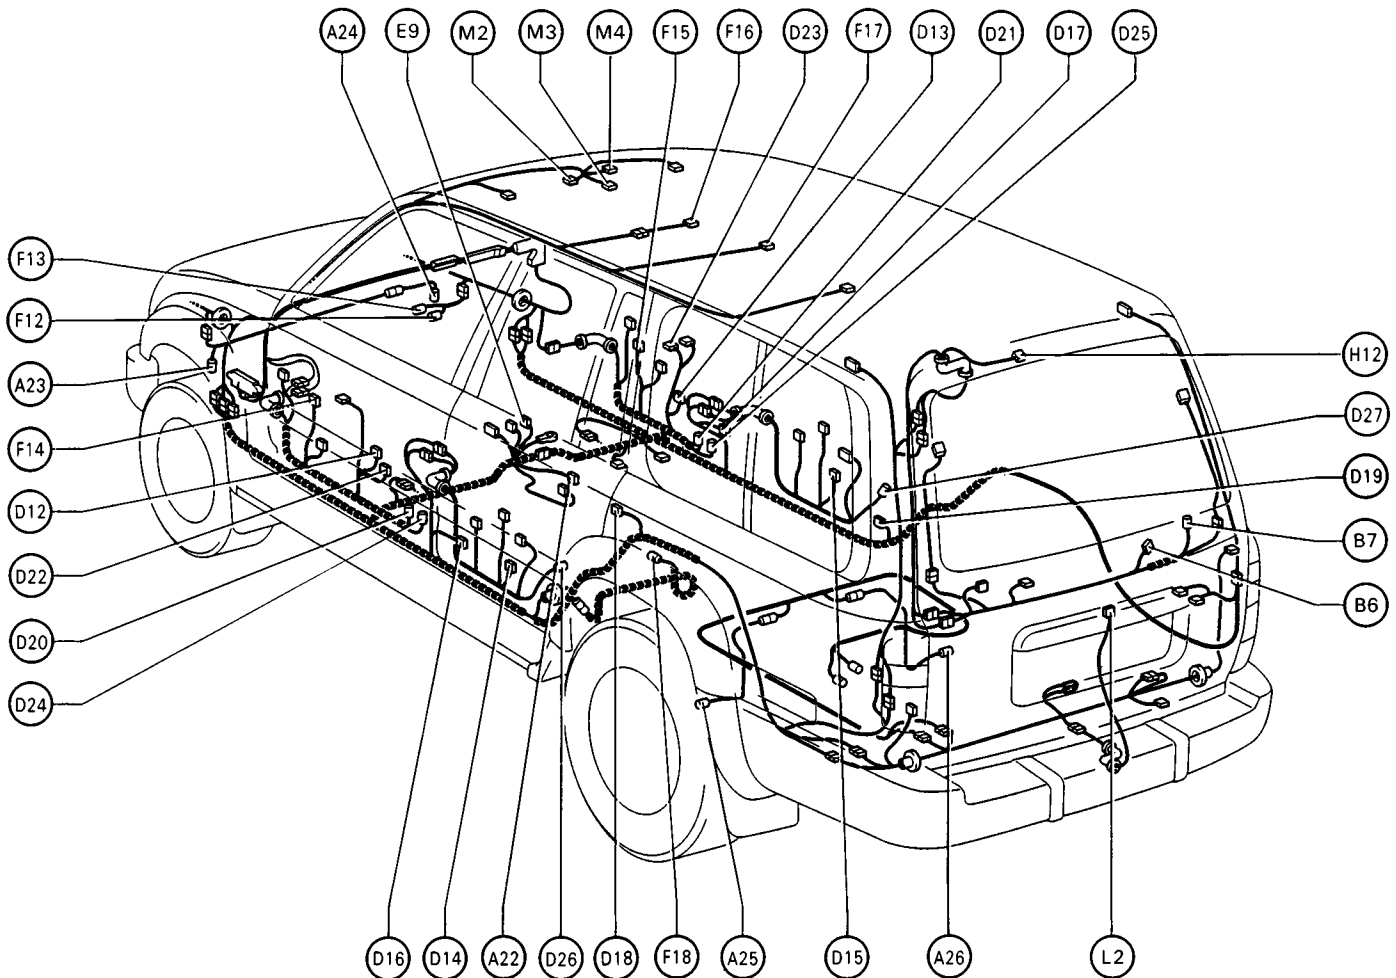

A 22 ABS Deceleration Sensor
 A 23 ABS Speed Sensor Front LH
 A 24 ABS Speed Sensor Front RH
 A 25 ABS Speed Sensor Rear LH
 A 26 ABS Speed Sensor Rear RH

B 6 Back Door Courtesy SW
 B 7 Back Door Lock Motor

D 12 Door Courtesy Light Front LH
 D 13 Door Courtesy Light Front RH
 D 14 Door Courtesy Light Rear LH
 D 15 Door Courtesy Light Rear RH
 D 16 Door Courtesy SW Front LH
 D 17 Door Courtesy SW Front RH
 D 18 Door Courtesy SW Rear LH
 D 19 Door Courtesy SW Rear RH
 D 20 Door Key Lock and Unlock SW LH
 D 21 Door Key Lock and Unlock SW RH
 D 22 Door Lock Control Relay
 D 23 Door Lock Control SW RH

D 24 Door Lock Motor and Door Unlock Detection SW Front LH
 D 25 Door Lock Motor and Door Unlock Detection SW Front RH
 D 26 Door Lock Motor Rear LH
 D 27 Door Lock Motor Rear RH

E 9 Electronically Controlled Transmission Pattern Select SW


F 12 Front Diff. Lock Control Motor
 F 13 Front Diff. Lock Position SW
 F 14 Front Door Speaker LH
 F 15 Front Door Speaker RH
 F 16 Front Interior Light (w/ Moon Roof)
 F 17 Front Interior Light (w/o Moon Roof)
 F 18 Fuel Sender and Pump

H 12 High Mounted Stop Light

L 2 License Plate Light

M 2 Moon Roof Control Relay
 M 3 Moon Roof Control SW and Personal Light
 M 4 Moon Roof Limit SW and Motor


Position of Parts in Body

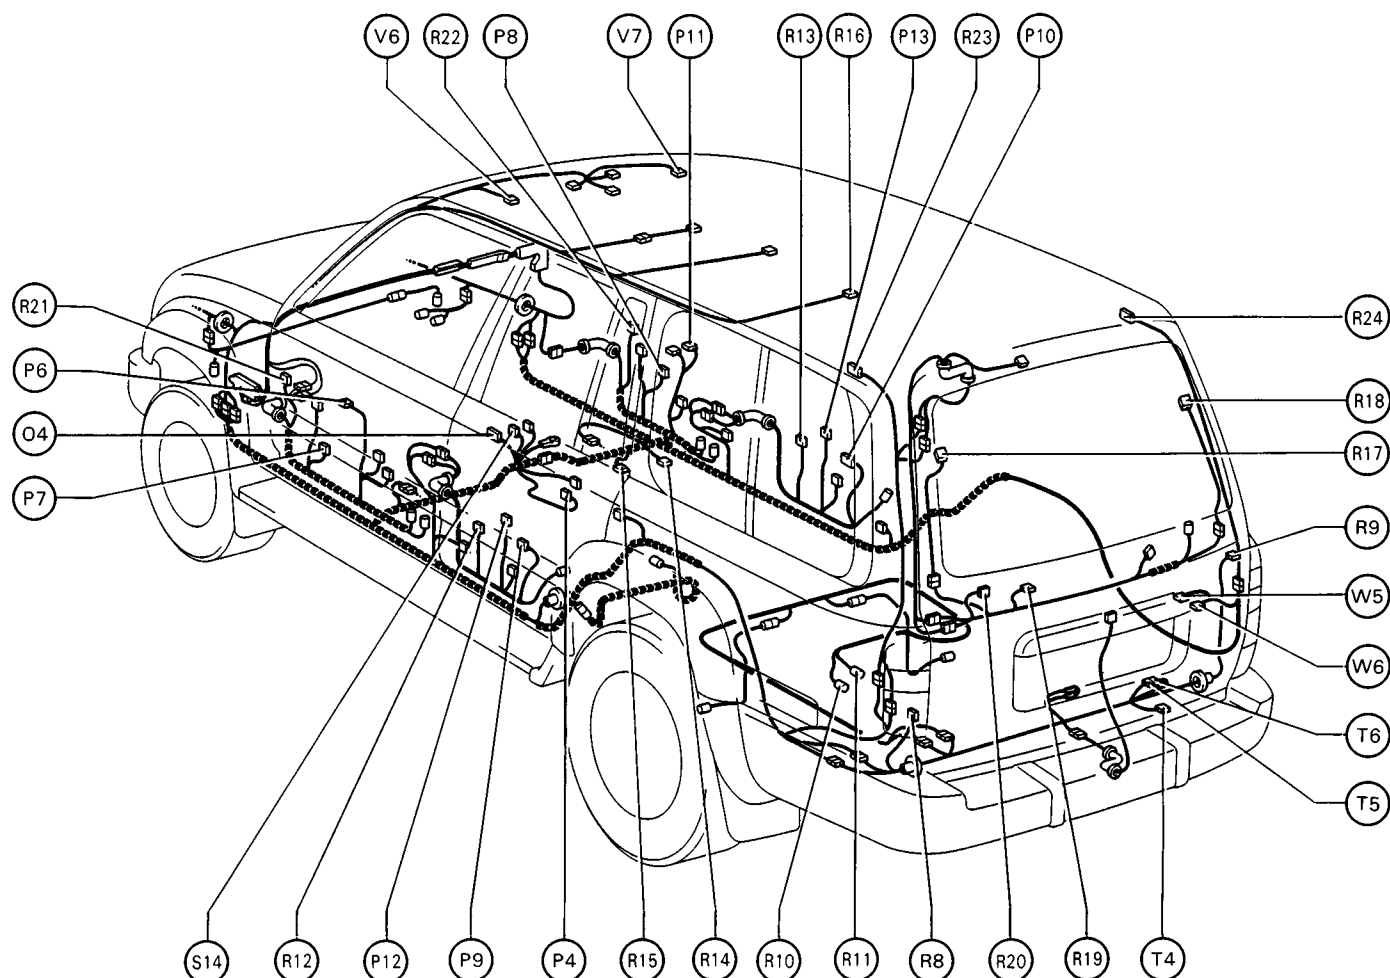

O 4	O/D Main SW	R 17	Rear Window Defogger (+)
P 4	Parking Brake SW	R 18	Rear Window Defogger (-)
P 6	Power Window Master SW	R 19	Rear Wiper Motor
P 7	Power Window Motor Front LH	R 20	Rear Wiper Relay
P 8	Power Window Motor Front RH	R 21	Remote Control Mirror LH
P 9	Power Window Motor Rear LH	R 22	Remote Control Mirror RH
P 10	Power Window Motor Rear RH	R 23	Roof Speaker LH
P 11	Power Window SW Front RH	R 24	Roof Speaker RH
P 12	Power Window SW Rear LH	S 14	Shift Lock ECU
P 13	Power Window SW Rear RH	T 4	Trailer Socket (Tail and Stop Light)
R 8	Rear Combination Light LH	T 5	Trailer Socket (Turn Signal Light)
R 9	Rear Combination Light RH	T 6	Trailer Socket (Turn Signal Light)
R 10	Rear Diff. Lock Control Motor	V 6	Vanity Light LH
R 11	Rear Diff. Lock Position SW	V 7	Vanity Light RH
R 12	Rear Door Speaker LH	W 5	Woofer (Speaker)
R 13	Rear Door Speaker RH	W 6	Woofer Amplifier
R 14	Rear Heater		
R 15	Rear Heater Relay		
R 16	Rear Interior Light		

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

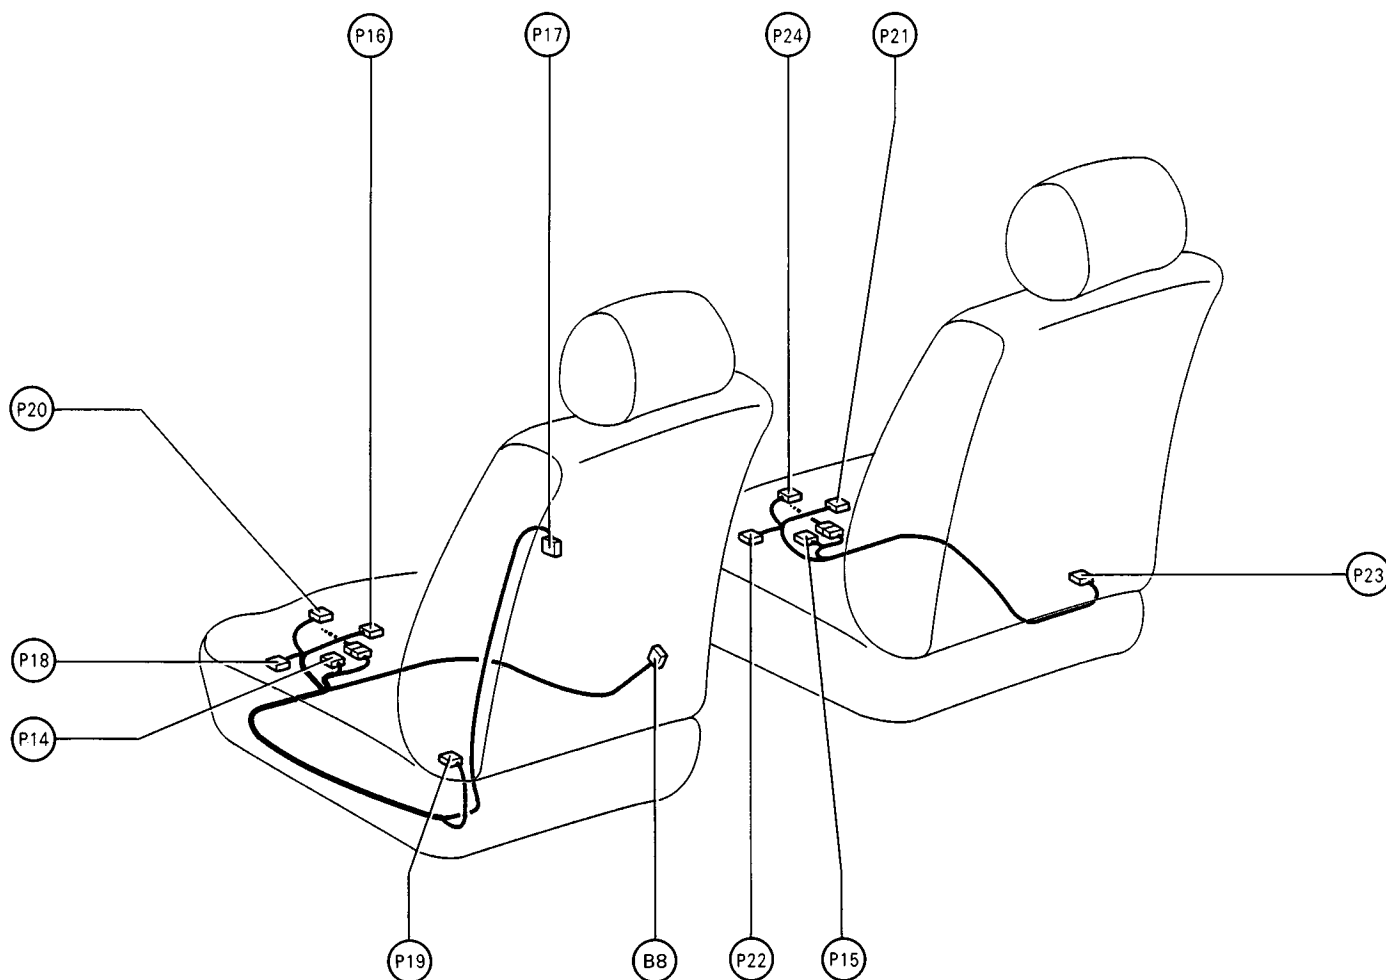

B 8 Buckle SW LH

P 14 Power Seat Control SW (Driver's Seat)

P 15 Power Seat Control SW (Passenger's Seat)

P 16 Power Seat Motor (Driver's Seat Front Vertical Control)

P 17 Power Seat Motor (Driver's Seat Lumbar Support Control)

P 18 Power Seat Motor (Driver's Seat Rear Vertical Control)

P 19 Power Seat Motor (Driver's Seat Reclining Control)

P 20 Power Seat Motor (Driver's Seat Slide Control)

P 21 Power Seat Motor (Passenger's Seat Front Vertical Control)

P 22 Power Seat Motor (Passenger's Seat Rear Vertical Control)

P 23 Power Seat Motor (Passenger's Seat Reclining Control)

P 24 Power Seat Motor (Passenger's Seat Slide Control)

