




GROUND POINT



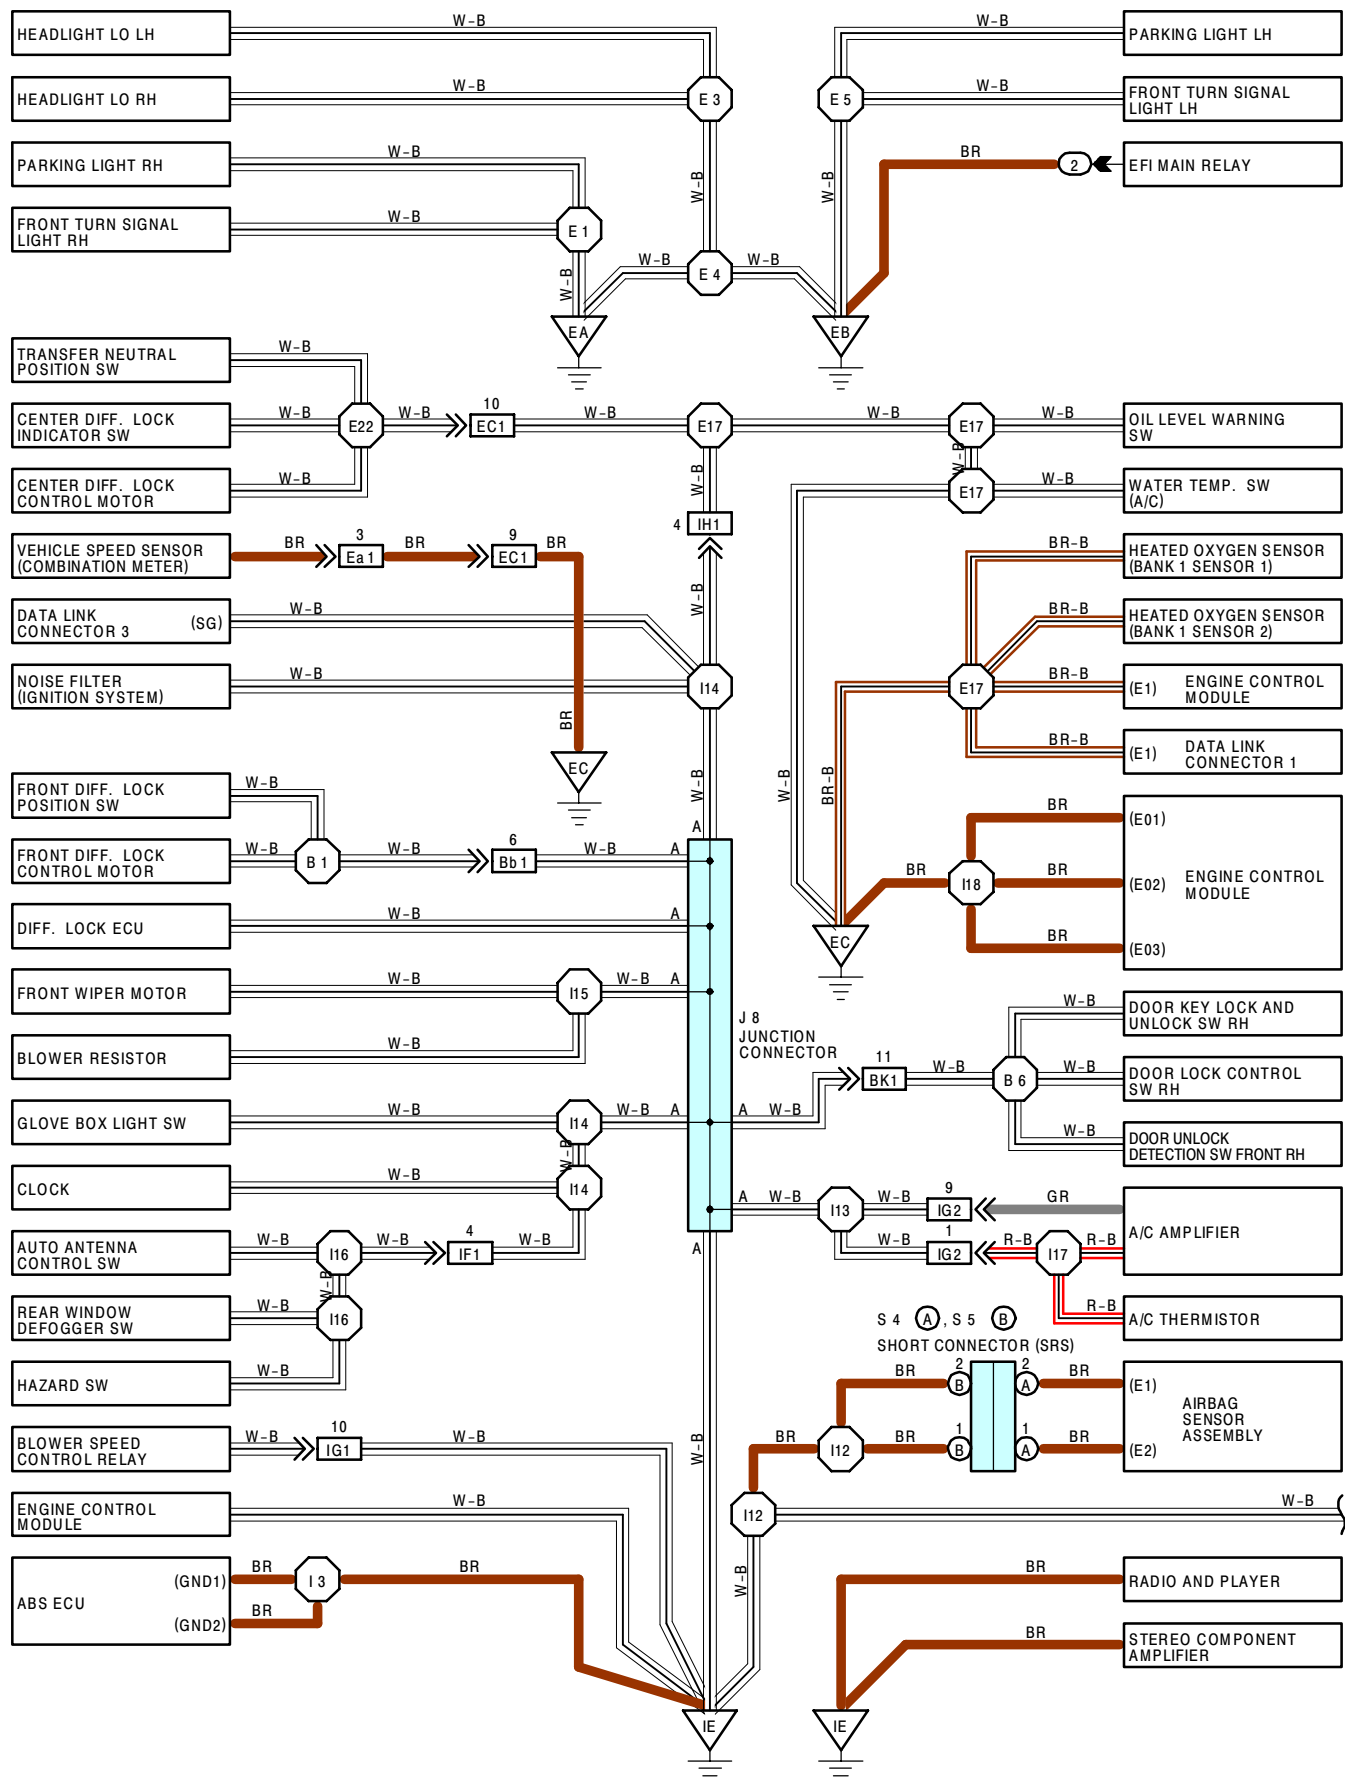


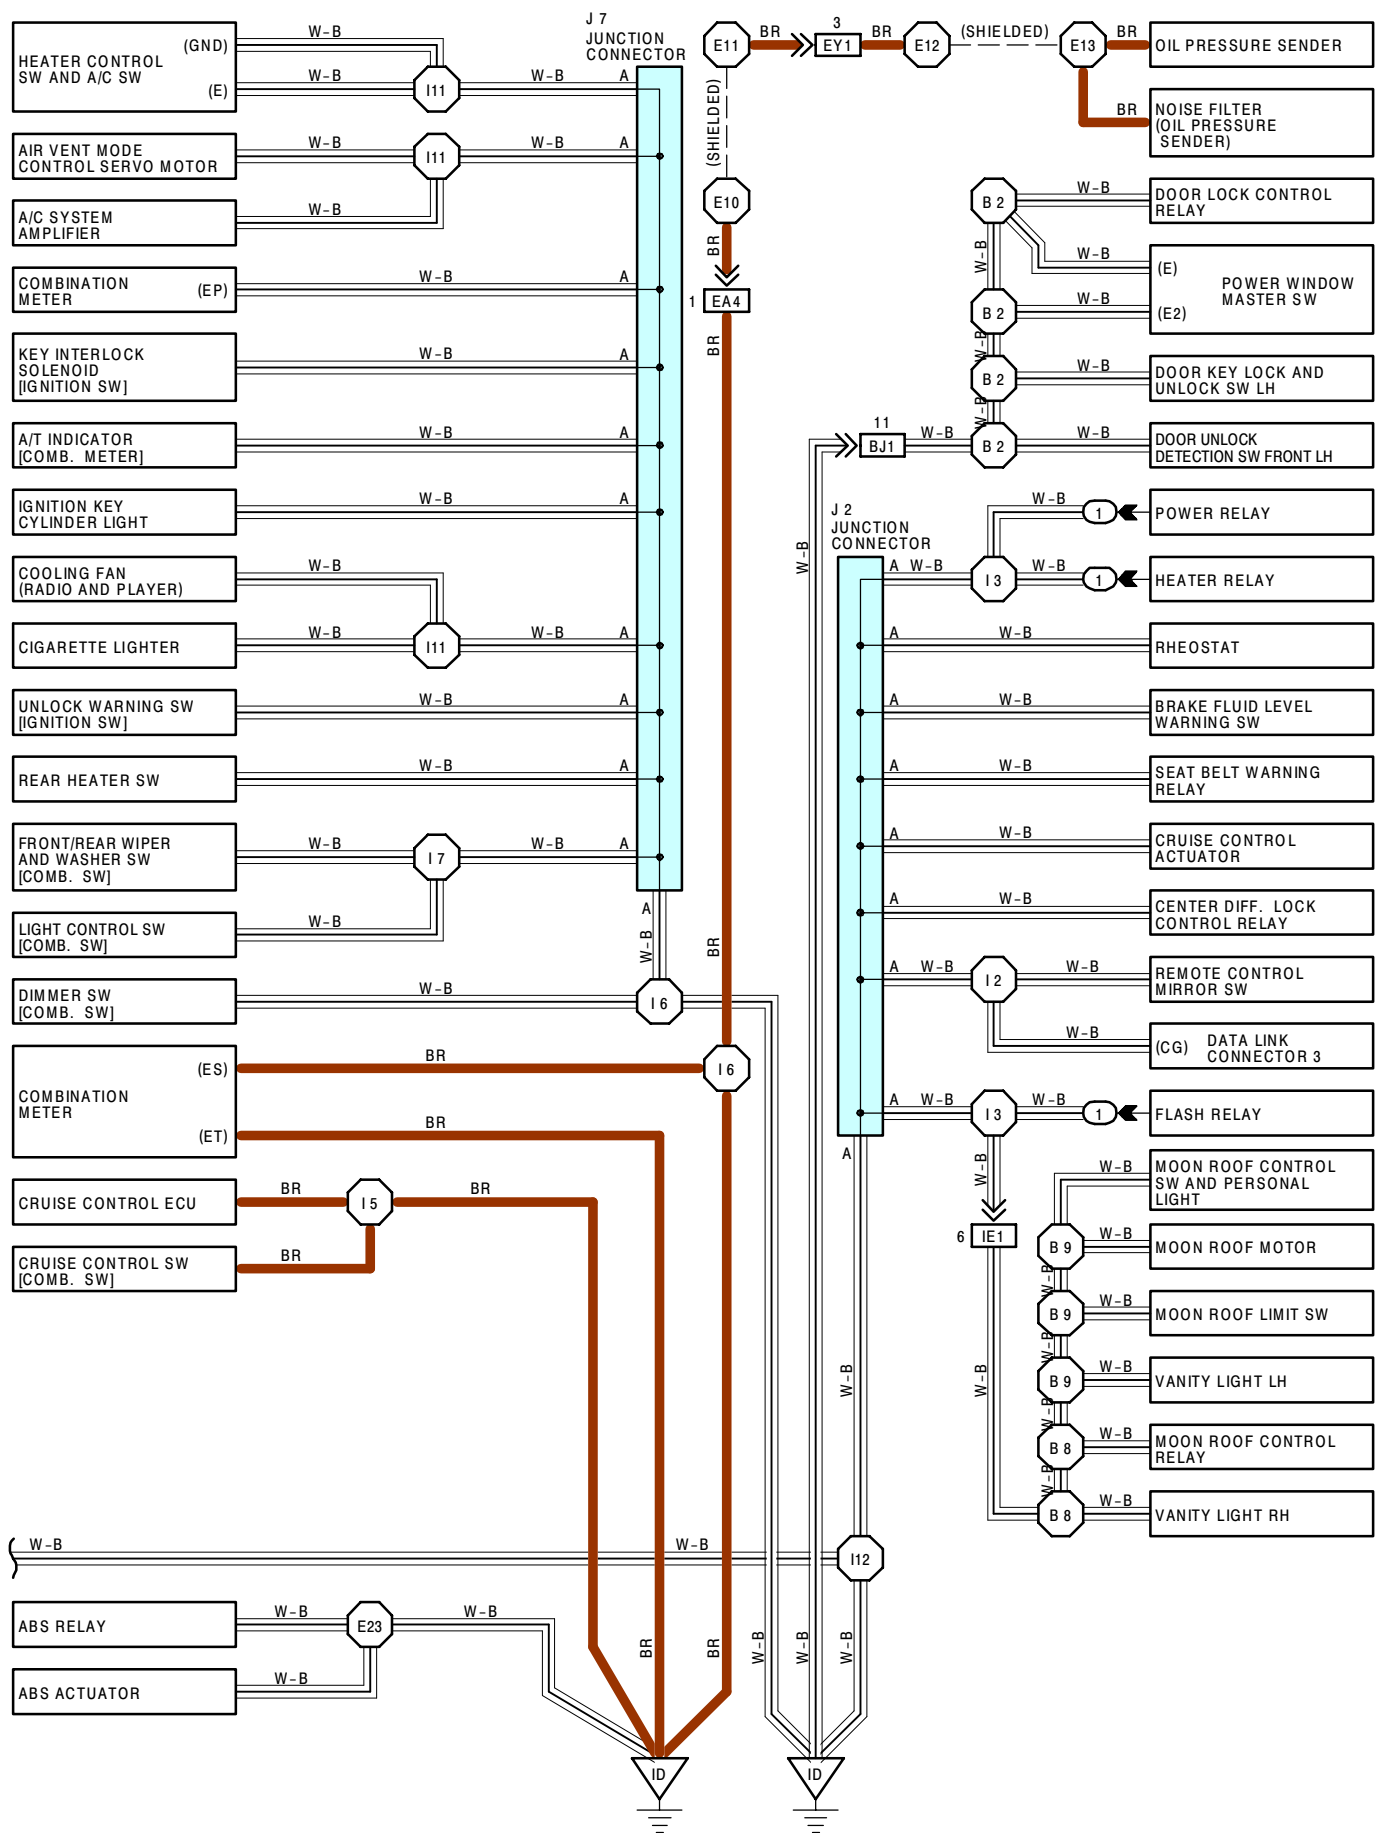

GROUND POINT

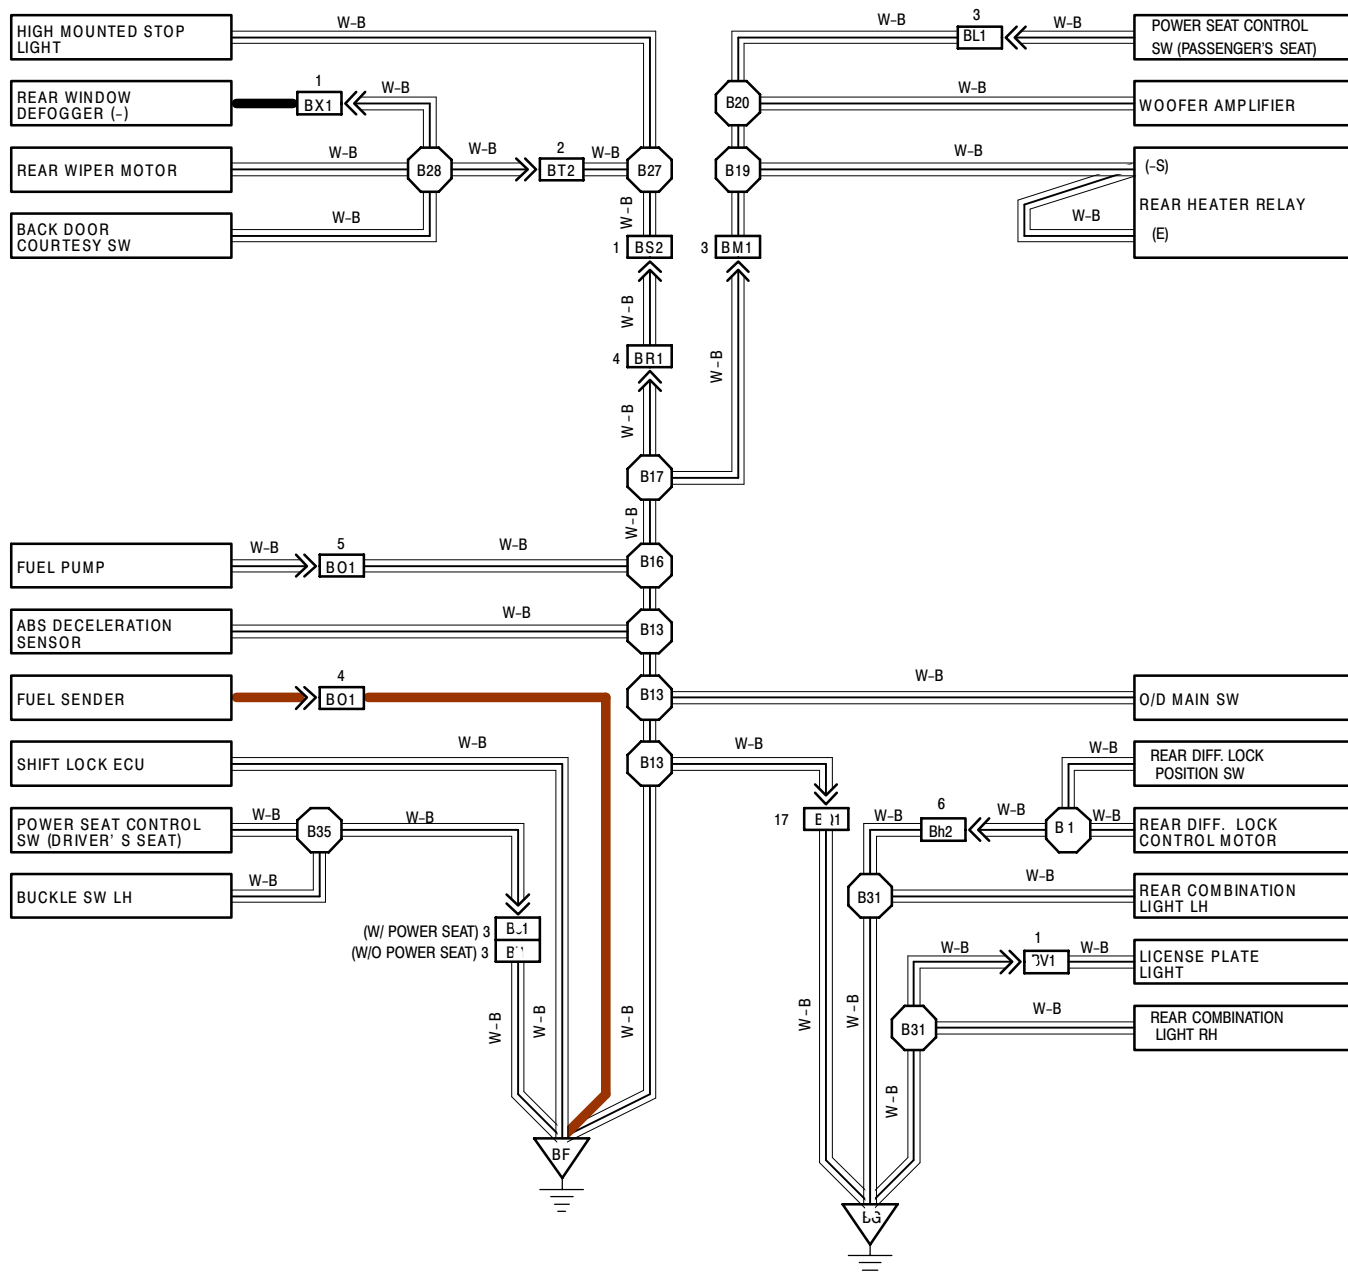


J2 BLUE

 


(HINT: SEE PAGE 7)

 J7 BLUE




(HINT: SEE PAGE 7)

 J8 BLUE




(HINT: SEE PAGE 7)

S4 (A) YELLOW

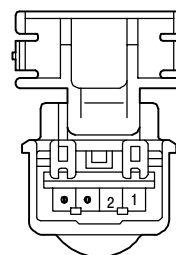

S5 (5) YELLOW

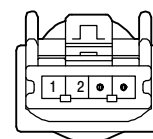

 : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 2	25	J 8	25	S 5	B 25
J 7	25	S 4	A 25		

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF THE FENDER)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA4	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
EY1	30	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
Ea1	30	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)
IE1	32	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IG1	32	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IG2	32	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IH1	32	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BJ1	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	34	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BM1	34	FLOOR NO. 2 WIRE AND FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE)
BO1	34	FLOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 2 WIRE (BESIDE THE FUEL TANK)
BQ1	34	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR1	34	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS2	34	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BT2	36	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BV1	36	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)
BX1	36	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)
Bb1	36	COWL WIRE AND FRAME WIRE (RIGHT FENDER)
Bc1	38	FLOOR NO. 1 WIRE AND SEAT NO. 1 WIRE (UNDER THE DRIVER'S SEAT)
Bh2	36	FLOOR NO. 3 WIRE AND FRAME NO. 2 WIRE (LEFT QUARTER PANEL INNER)
Bj1	38	FLOOR NO. 2 WIRE AND SEAT NO. 1 WIRE (UNDER THE PASSENGER'S SEAT)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	34	UNDER THE CENTER CONSOLE BOX
BG	34	LOWER BACK PANEL CENTER

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	30	ENGINE ROOM MAIN WIRE	I14	32	COWL WIRE
E 3			I15		
E 4			I16		
E 5			I17		
E10			I18		
E11	30	OIL PRESSURE SWITCH WIRE	B 1	36	FRAME WIRE
E12			B 2		
E13			B 6		
E17			B 8		
E22			B 9		
E23	32	COWL WIRE	B13	36	FLOOR WIRE
I 2			B16		
I 3			B17		
I 5			B19		
I 6			B20		
I 7			B27	36	FLOOR NO. 2 WIRE
I11			B28		
I12			B31		
I13			B35		
				38	BACK DOOR NO. 1 WIRE
				36	BACK DOOR NO. 2 WIRE
				36	FLOOR NO. 3 WIRE
				38	SEAT NO. 1 WIRE