



H POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

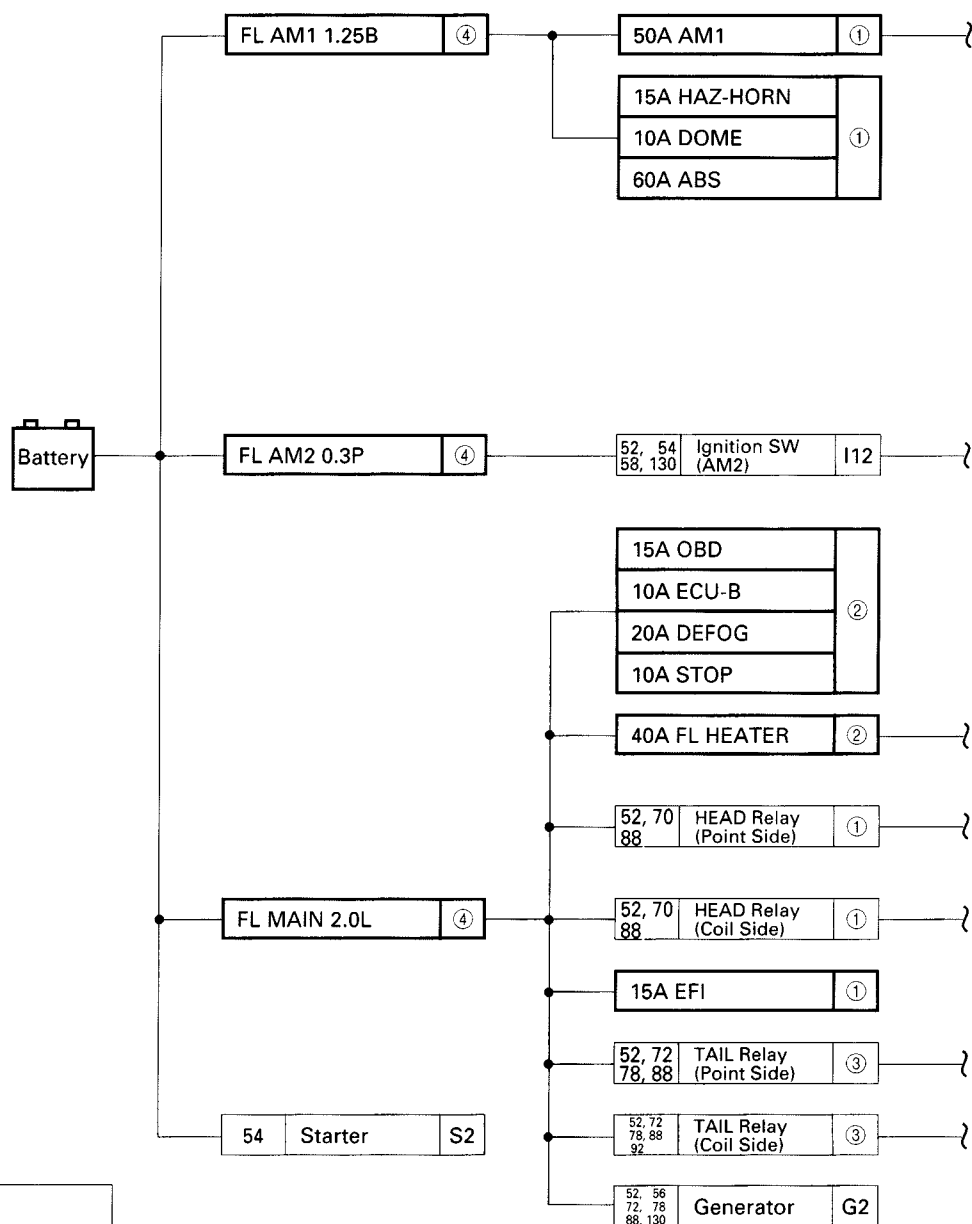


Example

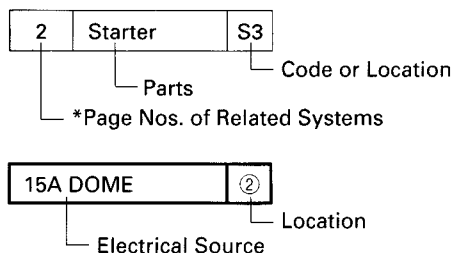

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)

② : Fuse Block (F11 See page 20)

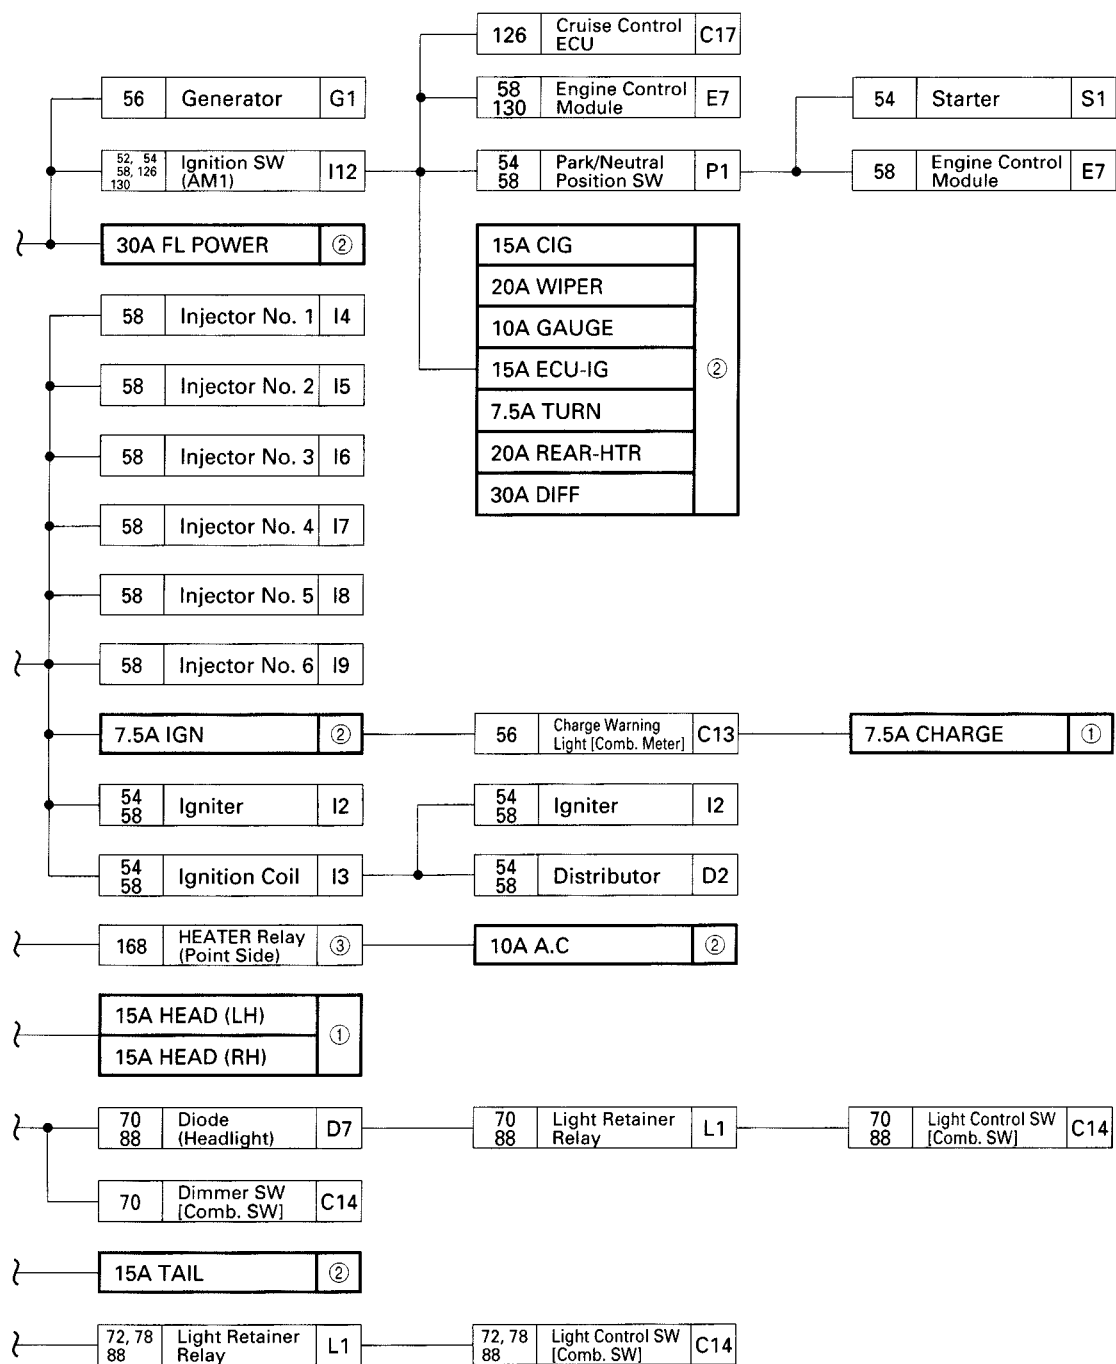

③ : R/B No. 1 (See page 20)

④ : Fusible Link (F6, F7, F8 See page 22)

H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		168	121		117	168		121		168		143	78	78 117	121	162	168					82	112			
					Parts		Code or Location		CB or Fuse		A/C Pressure SW	ABS Actuator	ABS Relay	Auto Antenna Motor	A/C Amplifier	A/C System Amplifier	ABS ECU	Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Airbag Sensor Assembly	Ashtray Illumination	Auto Antenna Control SW	ABS Deceleration Sensor	Brake Fluid Level Warning SW	Blower Motor (A/C)	Blower Motor (Heater)	Blower Resistor	Blower Speed Control Relay	Back Door Courtesy SW
			A2	A4							A6	A7	A8	A9	A10	A12	A13	A14	A16	A17	A20	A21	A22	B1	B2	B3	B4	B5	B6
①	7.5A	CHARGE																											
	15A	EFI																											
	15A	HEAD (LH)																											
	15A	HEAD (RH)																											
	15A	HAZ-HORN																											
	10A	DOME																											
②	60A	ABS		●	●	●						●																●	
	15A	CIG					●									●		●											
	15A	TAIL															●	●											
	10A	STOP									●																		
	20A	DEFOG										●																	
	20A	WIPER																											
	10A	GAUGE	●	●		●		●	●	●	●	●	●	●					●						●				
	7.5A	TURN																											
	15A	ECU-IG										●							●										
	20A	REAR-HTR																											
	7.5A	IGN														●													
	10A	A.C																											
	30A	DIFF																											
	30A	FL POWER																											
	40A	FL HEATER																					●	●	●	●			●
	10A	ECU-B										●				●													
	15A	OBD																											

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)
③ : R/B No. 1 (See page 20)

② : Fuse Block (F11 See page 20)

H POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		152	91	82		94	82										98 108 112	112				150			
			Diff. Lock ECU	Diode (Front Washer)	Diode (Interior Light)			Diode (Rear Washer)	Door Courtesy Light Front LH	Door Courtesy Light Front RH	Door Courtesy Light Rear LH	Door courtesy Light Rear RH	Door Courtesy SW Front LH	Door Courtesy SW Front RH	Door Courtesy SW Rear LH	Door Courtesy SW Rear RH	Door Lock Control Relay	Door Lock Motor and Door Unlock Detection SW Front LH	Door Lock Motor and Door Unlock Detection SW Front RH	Door Lock Motor Rear LH	Door Lock Motor Rear RH	Diode (Neutral Detection)				
	CB or Fuse																									
	D5	D6																					D8	D9	D10	D11
①	7.5A	CHARGE																								
	15A	EFI																								
	15A	HEAD (LH)																								
	15A	HEAD (RH)																								
	15A	HAZ-HORN																								
	10A	DOME			●	●	●		●	●	●	●	●	●	●	●										
	60A	ABS																								
②	15A	CIG																								
	15A	TAIL																								
	10A	STOP																								
	20A	DEFOG																								
	20A	WIPER		●				●																		
	10A	GAUGE	●														●								●	
	7.5A	TURN																								
	15A	ECU-IG																								
	20A	REAR-HTR																								
	7.5A	IGN																								
	10A	A.C																								
	30A	DIFF	●																							
	30A	FL POWER															●	●	●	●	●					
	40A	FL HEATER																								
	10A	ECU-B																								
	15A	OBD																								

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)
③ : R/B No. 1 (See page 20)

② : Fuse Block (F11 See page 20)

[illegible]

H POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)
③ : R/B No. 1 (See page 20)

② : Fuse Block (F11 See page 20)

[illegible]

H POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		160	82	138	94	104		140	78 156	58, 74 106, 121 126, 130	106	130 150	150	72 74 76	86	162	58	82				
			Parts		Code or Location		CB or Fuse		Rear Heater Rear Heater Relay Rear Interior Light Rear Window Defogger Rear Wiper Motor Rear Wiper Relay Remote Control Mirror LH Remote Control Mirror RH Seat Belt Warning Relay Stereo Component Amplifier Stop Light SW Shift Lock ECU Transfer L4 Position SW Transfer Neutral Position SW Trailer Socket (Tail and Stop Light) Trailer Socket (Turn Signal Light) Vehicle Speed Sensor (Combination Meter) VSV (EGR) VSV (Fuel Pressure Control) Vanity Light LH Vanity Light RH														
	CB or Fuse		R14	R15	R16	R17	R19	R20	R21	R22	S3	S11	S13	S14	T2	T3	T4	T5	V1	V3	V4	V6	V7
①	7.5A	CHARGE																					
	15A	EFI																					
	15A	HEAD (LH)																					
	15A	HEAD (RH)																					
	15A	HAZ-HORN																					
	10A	DOME			●						●	●						●				●	●
	60A	ABS																					
②	15A	CIG						●	●		●		●				●						
	15A	TAIL									●						●						
	10A	STOP										●	●				●						
	20A	DEFOG				●																	
	20A	WIPER					●	●															
	10A	GAUGE								●				●	●		●		●				
	7.5A	TURN															●						
	15A	ECU-IG											●										
	20A	REAR-HTR	●	●																			
	7.5A	IGN																					
	10A	A.C																					
	30A	DIFF																					
	30A	FL POWER																					
	40A	FL HEATER																					
	10A	ECU-B																					
	15A	OBD																					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)
③ : R/B No. 1 (See page 20)

② : Fuse Block (F11 See page 20)

[illegible]

