




CENTER DIFFERENTIAL LOCK

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

*1 : CENTER DIFF. LOCK

*2 : A/T P

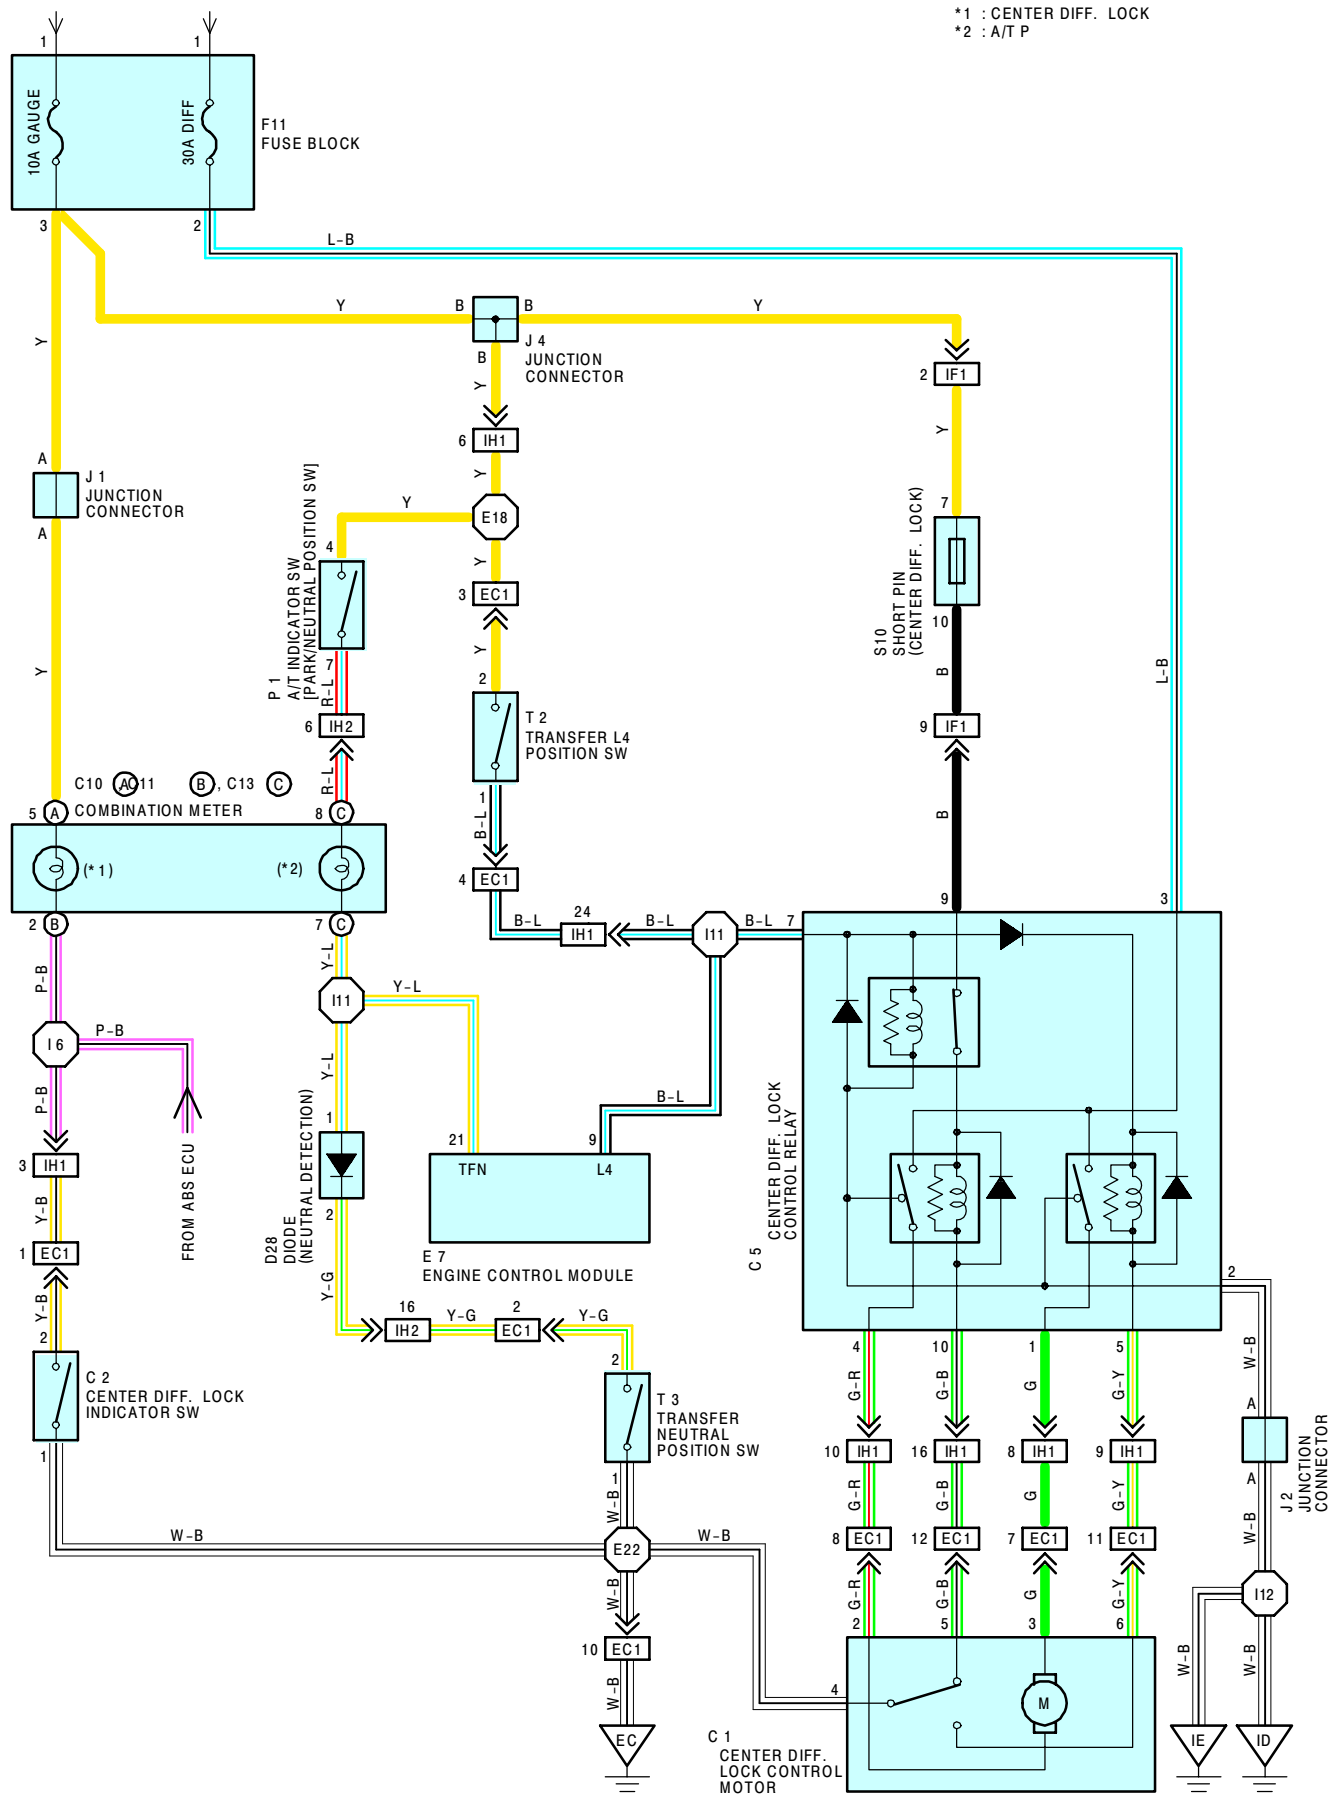

SERVICE HINTS

C5 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

7-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION AND FOUR-WHEEL DRIVE CONTROL LEVER AT **L4** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 1	22	D28	24	P 1	23
C 2	22	E 7	24	S10	25
C 5	24	F11	25	T 2	23
C10	A 24	J 1	25	T 3	23
C11	B 24	J 2	25		
C13	C 24	J 4	25		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IH1	32	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IH2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E18	30	ENGINE WIRE	I11	32	COWL WIRE
E22	30	TRANSMISSION WIRE	I12		
I 6	32	COWL WIRE			


C 1

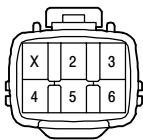


C 2 GRAY

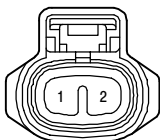


C 5

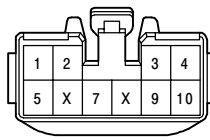


C10 (A) GRAY

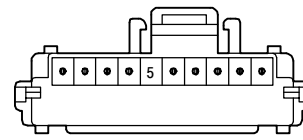


C11 (B) BLUE

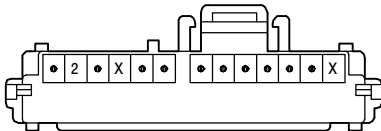

C13 (C)

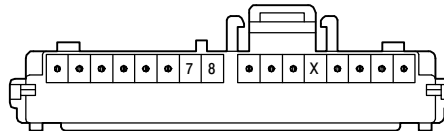


E 7 DARK GRAY

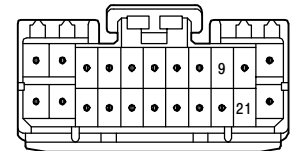

F11


(SEE PAGE 20)

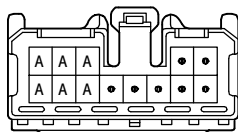

(HINT : SEE PAGE 7)


J 1

 J 2 BLUE




(HINT : SEE PAGE 7)

J 4

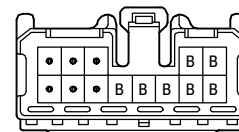


(HINT : SEE PAGE 7)


P 1 GRAY

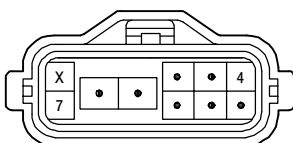

S10

 

T 2 GRAY

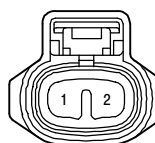

T 3 GRAY

