


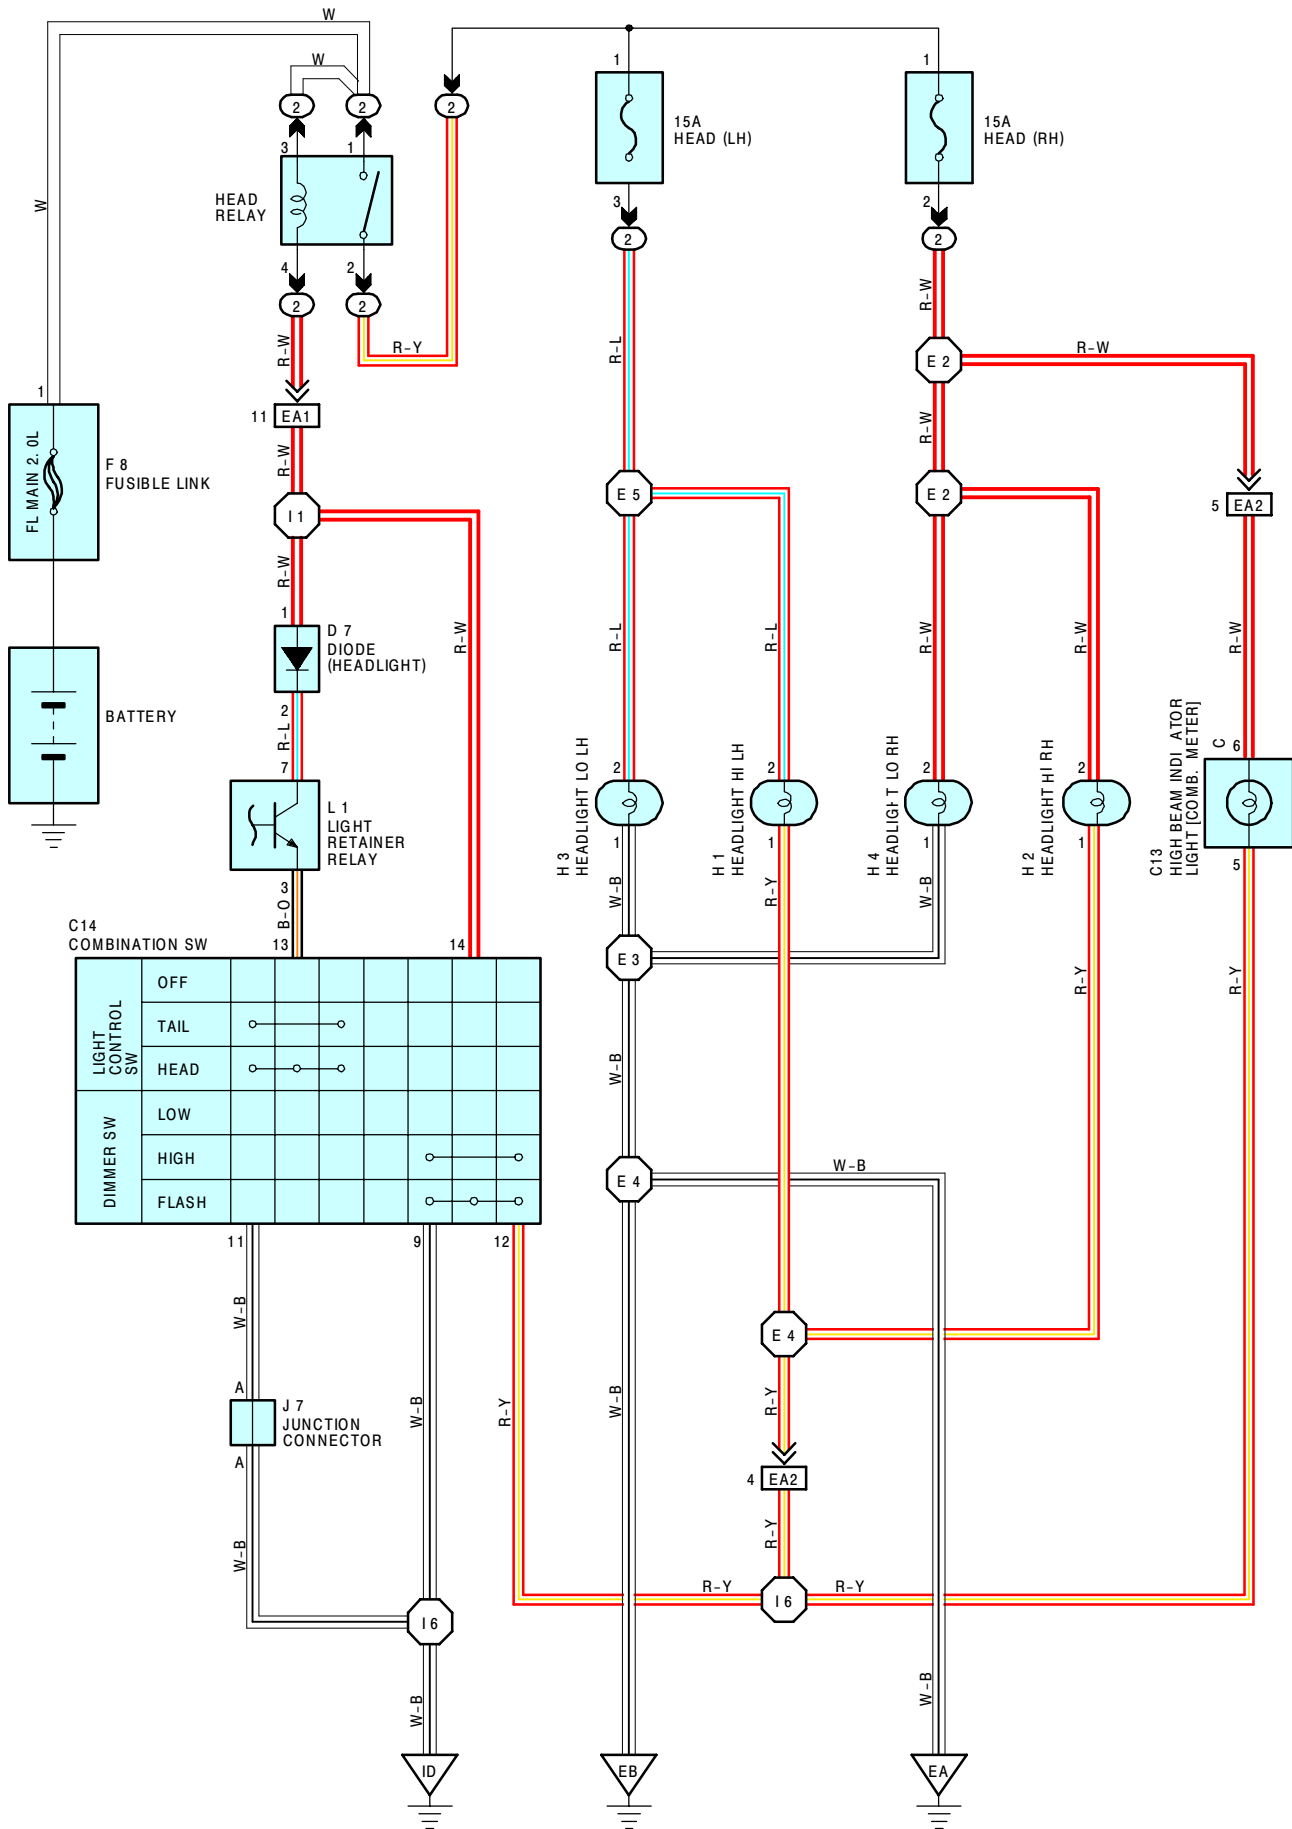

HEADLIGHT



SERVICE HINTS

HEAD RELAY

(2) 1 - (2) 2 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION
(WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

C14 LIGHT CONTROL SW [COMB. SW]

13-11 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION

C14 DIMMER SW [COMB. SW]

14-9 : CLOSED WITH THE DIMMER SW AT **FLASH** POSITION

12-9 : CLOSED WITH THE DIMMER SW AT **HIGH** OR **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	24	H 1	22	J 7	25
C14	24	H 2	22	L 1	25
D 7	24	H 3	22		
F 8	22	H 4	22		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
ID	32	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	30	ENGINE ROOM MAIN WIRE	E 5	30	ENGINE ROOM MAIN WIRE
E 3			I 1	32	COWL WIRE
E 4			I 6		


C13

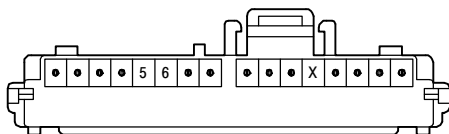


C14 BLACK

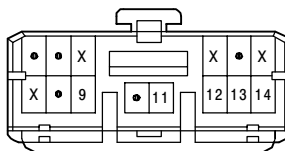

D 7 ORANGE

 

F 8

 


H 1, H 2 BLACK




H 3, H 4 BROWN



 J 7 BLUE



L 1

 

(HINT : SEE PAGE 7)