




STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

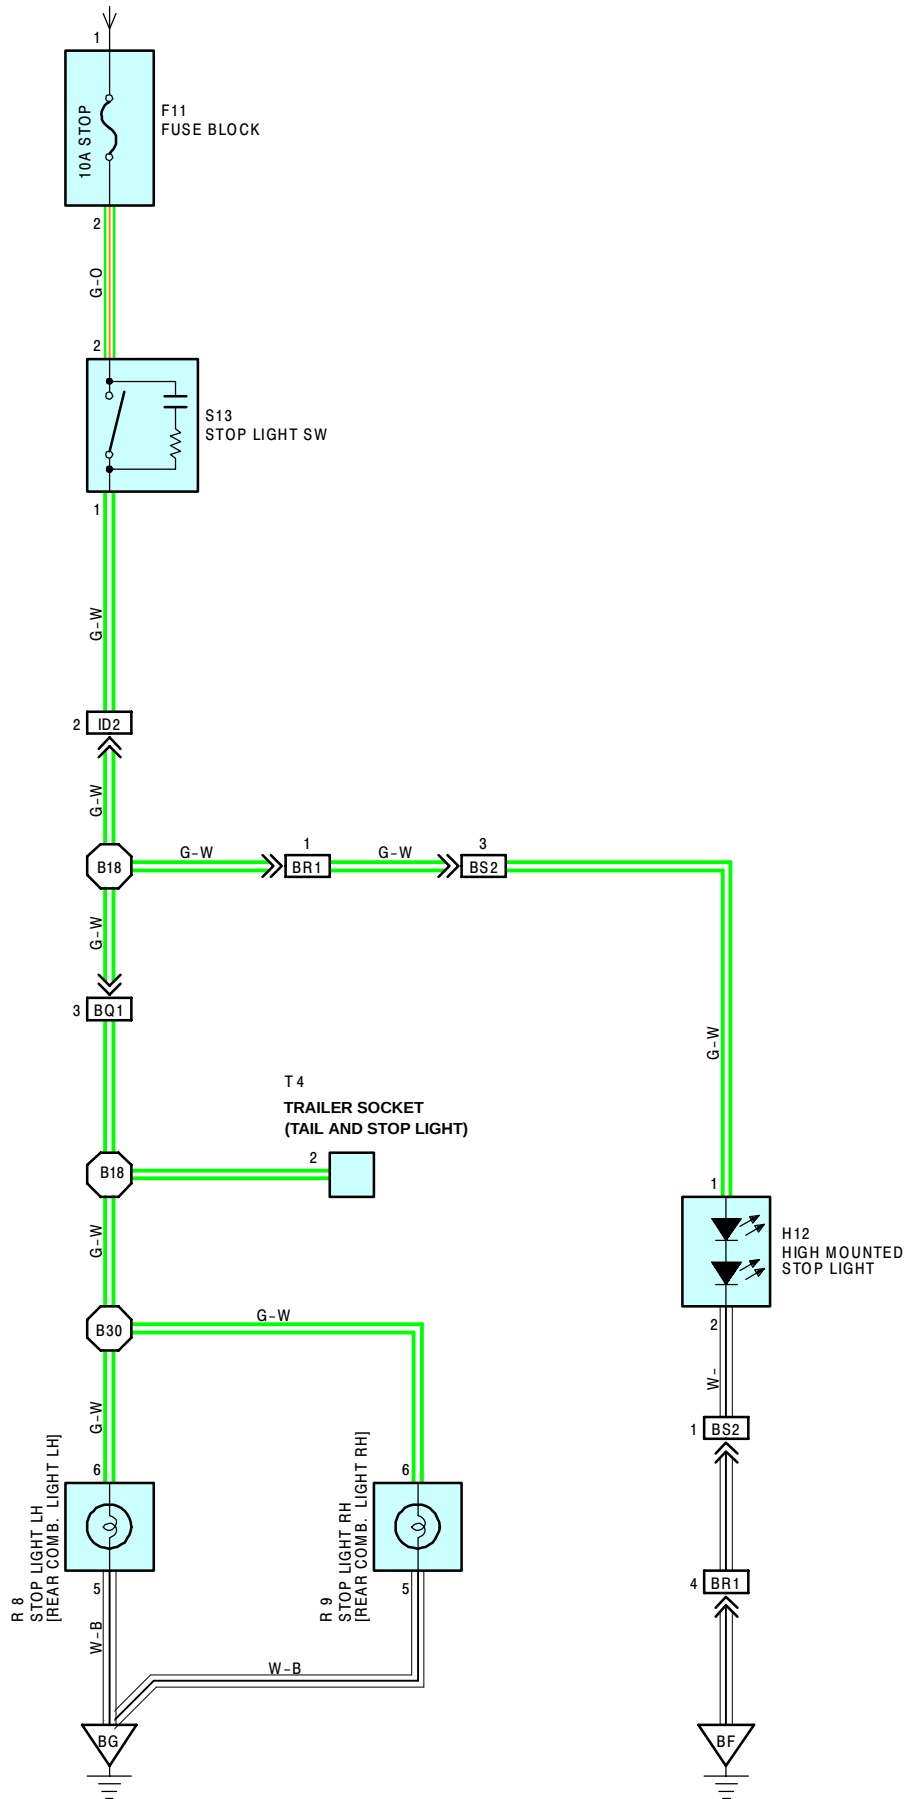

SERVICE HINTS

S13 STOP LIGHT SW

2-1 : CLOSED WITH THE BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	R 8	27	S13	25
H12	26	R 9	27	T 4	27

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	32	COWL WIRE AND FLOOR NO. 1 WIRE HARNESS (LEFT KICK PANEL)
BQ1	34	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR1	34	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS2	34	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BF	34	UNDER THE CENTER CONSOLE BOX
BG	34	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B18	36	FLOOR WIRE	B33	36	FLOOR NO. 3 WIRE
B30	36	FLOOR NO. 3 WIRE			

F11

H12

R 8, R 9

S13 BLACK

T 4 BLACK

(SEE PAGE 20)

