

DTC	Always ON	Malfunction in ECU
------------	------------------	---------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
Always ON	Either of the following (1) through (3) is detected: (1) The ECU connectors are OFF from the ECU. (2) There is a malfunction in the ECU internal circuit. (3) The voltage of terminal IG1 is more than 18.5 V.	<ul style="list-style-type: none"> • Battery • IC regulator • Power source circuit • ABS ECU


HINT:

There is a case that LEXUS hand-held tester cannot be used when ECU is abnormal.

Fail safe function:

If trouble occurs in the ECU, the ECU cuts off current to the ABS solenoid relay and prohibits ABS control.

WIRING DIAGRAM

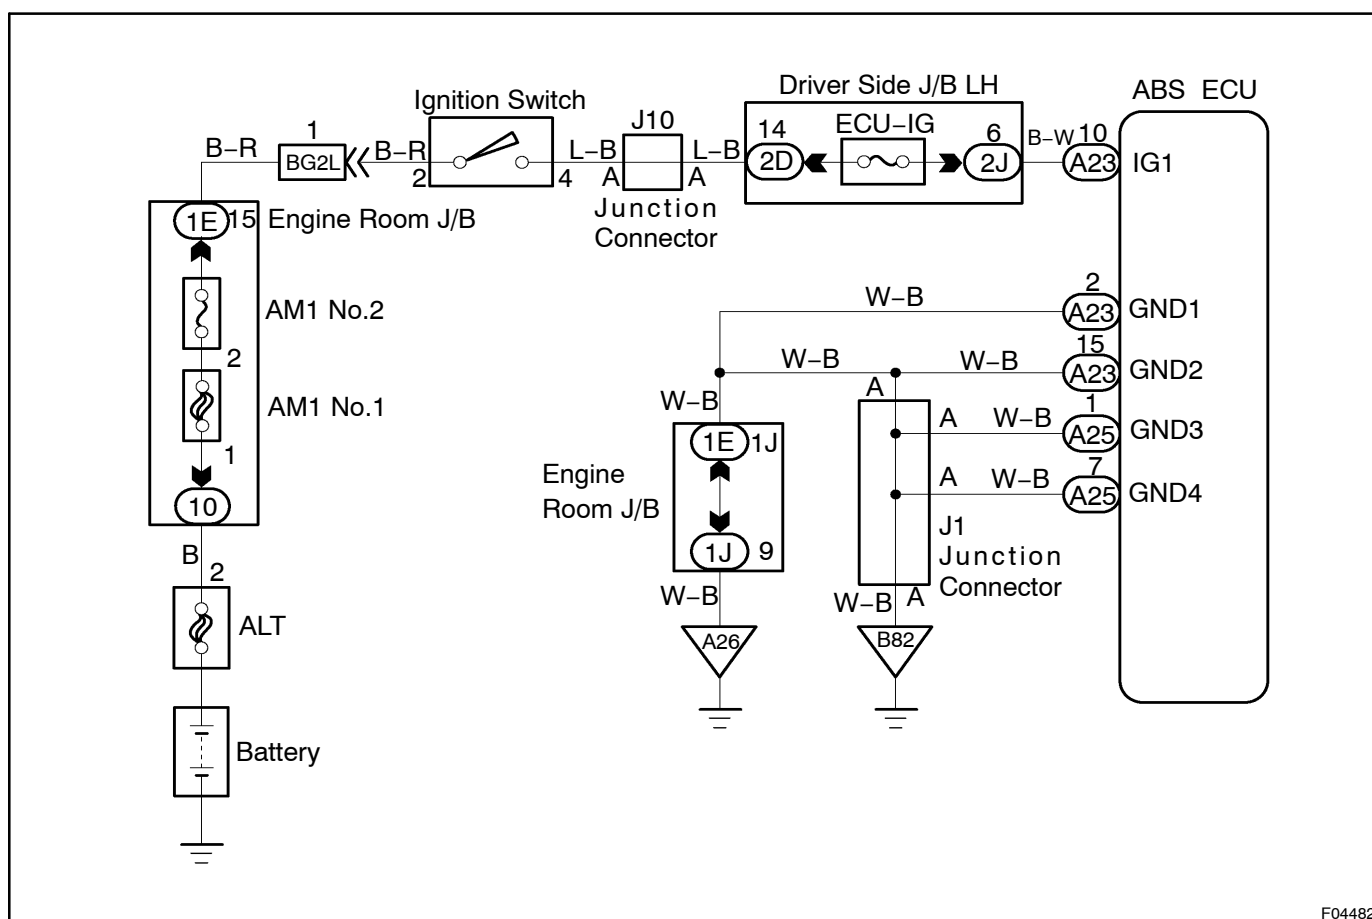

F04482

INSPECTION PROCEDURE

1	Check that the ECU connectors are securely connected to the ECU.
----------	---

NO

Connect the connector to the ECU.

YES

2	Is DTC output?
----------	-----------------------

Check DTC on page [DI-326](#).

YES

Repair circuit indicated by the output code .

NO

3	Is normal code displayed?
----------	----------------------------------

YES

Check ABS solenoid relay. Check for short circuit in harness and connector between ABS solenoid relay and DLC1 (See page [IN-33](#)).

NO

4	Does ABS warning light go off?
----------	---------------------------------------

YES

Check for open or short circuit in harness and connector between ECU-IG fuse and ECU (See page [IN-33](#)).

NO

5 Check battery positive voltage.**CHECK:**

- (a) Start the engine.
- (b) Check the battery positive voltage.

OK:

Voltage: 10 – 16 V

NG

Check and repair the charging system.

OK

6 Check operation of the ABS warning light.**IN CASE OF USING LEXUS HAND-HELD TESTER:****PREPARATION:**

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the LEXUS hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester.

CHECK:

Check that "ON" and "OFF" of the ABS warning light can be shown on the combination meter by the LEXUS hand-held tester.

IN CASE OF NOT USING LEXUS HAND-HELD TESTER:**PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the connector from the ABS ECU.
- (c) Turn the ignition switch ON.

CHECK:

Check the ABS warning light condition when pushing in and pulling out the short pin from the DLC1.

OK:

When the short pin is pulled out: ABS warning light goes off

When the short pin is pushed in: ABS warning light goes on

OK

Check and replace ABS ECU.

NG

Check for short circuit in harness and connector between combination meter and ABS ECU, combination meter and DLC1 (See page [IN-33](#)).
Check ABS solenoid relay circuit (See page [DI-346](#)).