


## BRAKE Warning Light Circuit

## CIRCUIT DESCRIPTION

The BRAKE warning light lights up when the brake fluid is insufficient and an abnormality occurs in the hydro brake booster.

## WIRING DIAGRAM

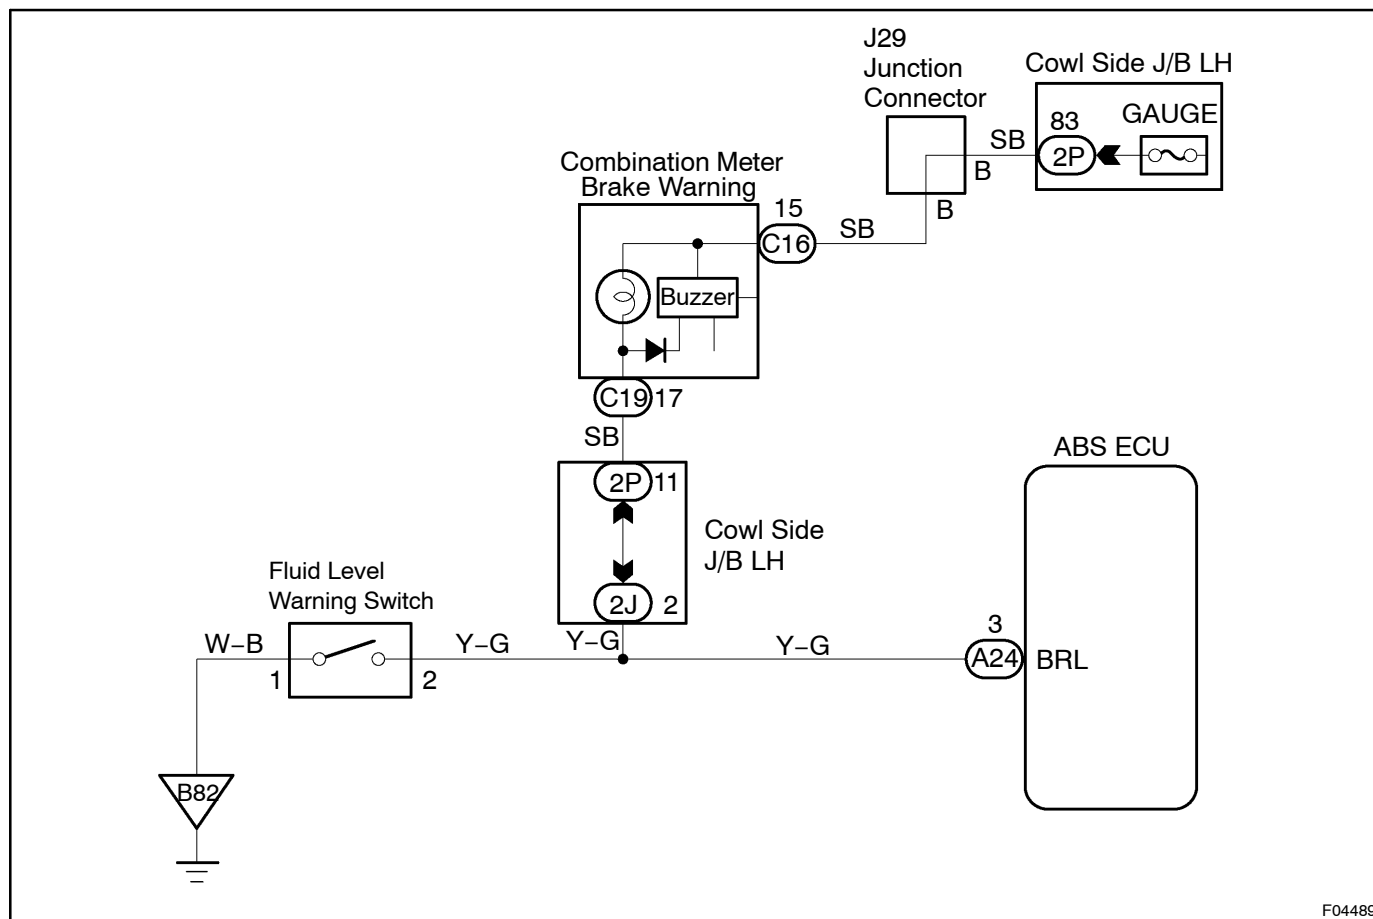

## INSPECTION PROCEDURE

1	Check parking brake switch circuit (See page <a href="#">BE-79</a> ).
---	---

NG

**Repair or replace parking brake switch circuit.**

**OK**

**2** Check brake fluid level warning switch circuit (See page [BE-79](#)).

NG

Repair or replace brake fluid level warning switch circuit.

OK

**3** Is DTC output for ABS ?

Check DTC on page [BE-60](#)

Yes

Repair circuit indicated by the output code.

No

**4** Check BRAKE warning light.

See combination meter troubleshooting on page [BE-2](#).

NG

Repair or replace combination meter.

OK

**5** Check multiplex communication system (See page [DI-746](#)).

NG

Repair or replace multiplex communication circuit.

OK

Check and replace ABS ECU.