


## Door courtesy switch circuit

### CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

### WIRING DIAGRAM

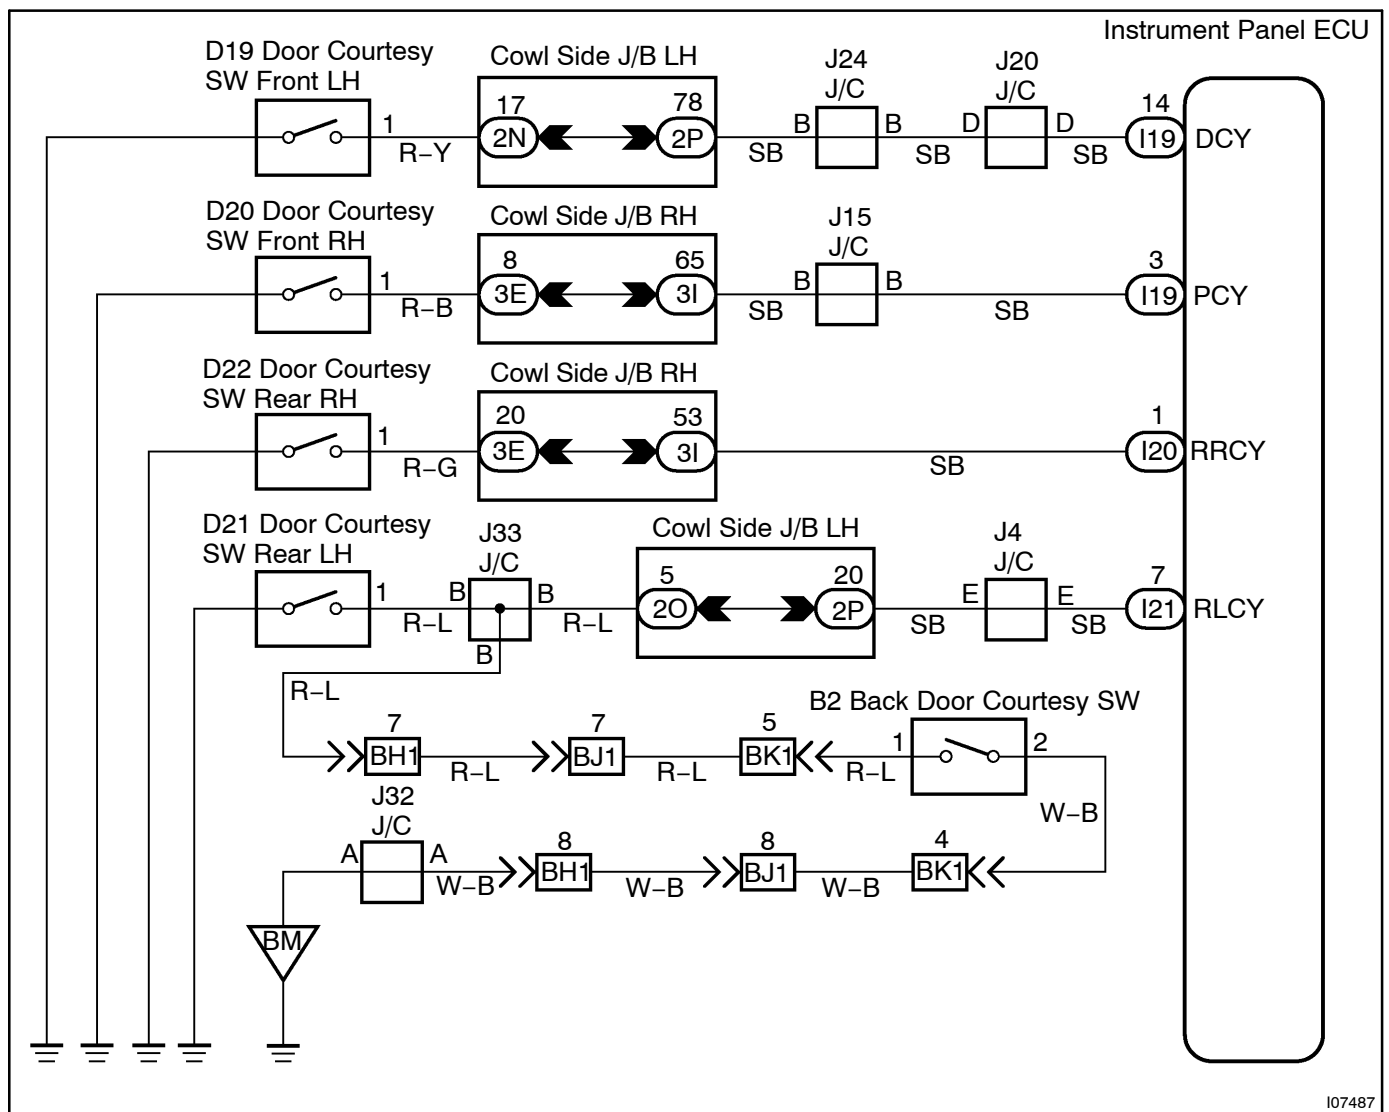

I07487

**INSPECTION PROCEDURE**

1	Check courtesy switch (See page <a href="#">BE-50</a> ).
---	--

NG	Replace the courtesy switch.
----	------------------------------

OK

2	Check wireharness and connector between courtesy light and body ECU, courtesy switch and body ECU.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-702](#)).