


## Door key lock and unlock switch circuit

### CIRCUIT DESCRIPTION

 
The door key lock and unlock switch is built in the door key cylinder. When the key is turned to the lock side, terminal 3 of the switch is grounded and when the key is turned to the unlock side, terminal 2 of the switch is grounded.

### WIRING DIAGRAM


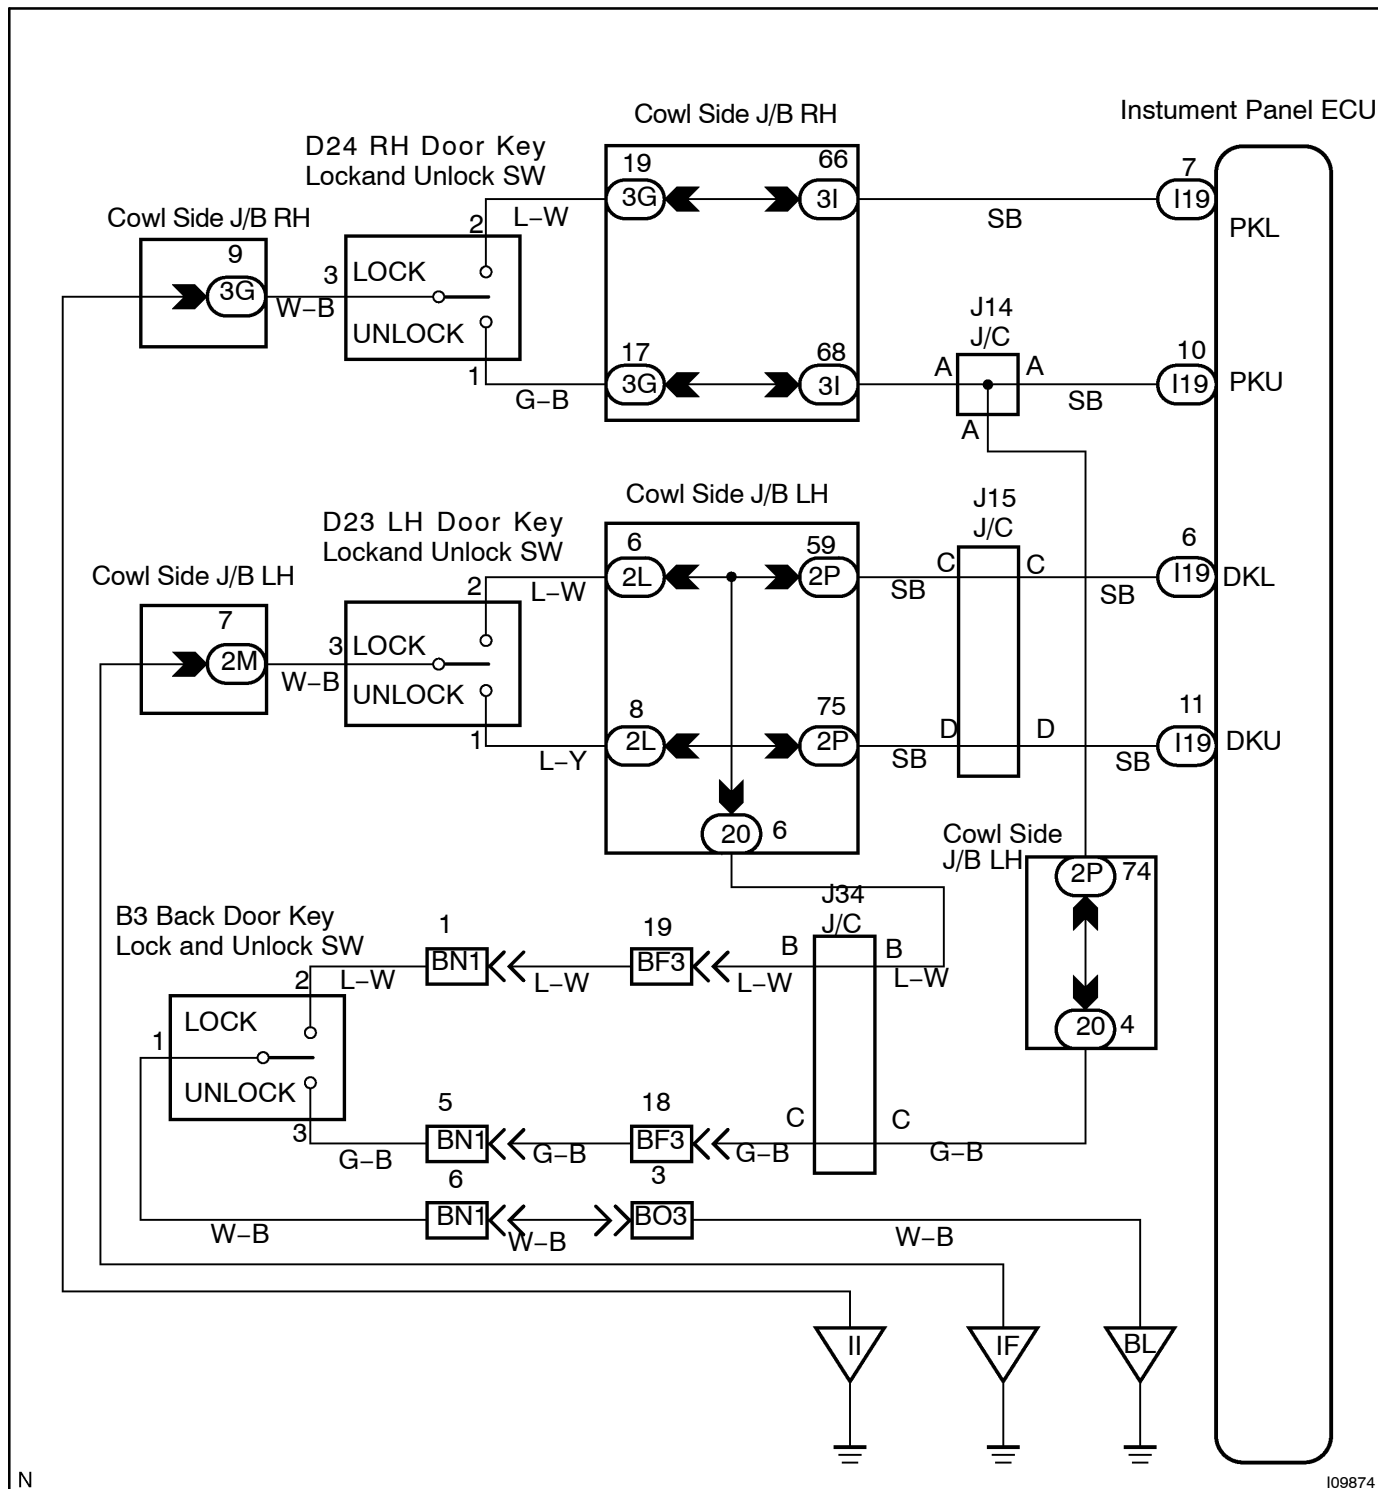


**INSPECTION PROCEDURE**

<b>1</b>	<b>Check the door key lock and unlock switch (See page <a href="#">BE-116</a>).</b>
----------	---



<b>2</b>	<b>Check wireharness and connector between door key lock and unlock switch and body ECU.</b>
----------	--

  

**Proceed to next circuit inspection shown on problem symptoms table (See page [DI-702](#)).**