


Light control switch circuit

WIRING DIAGRAM

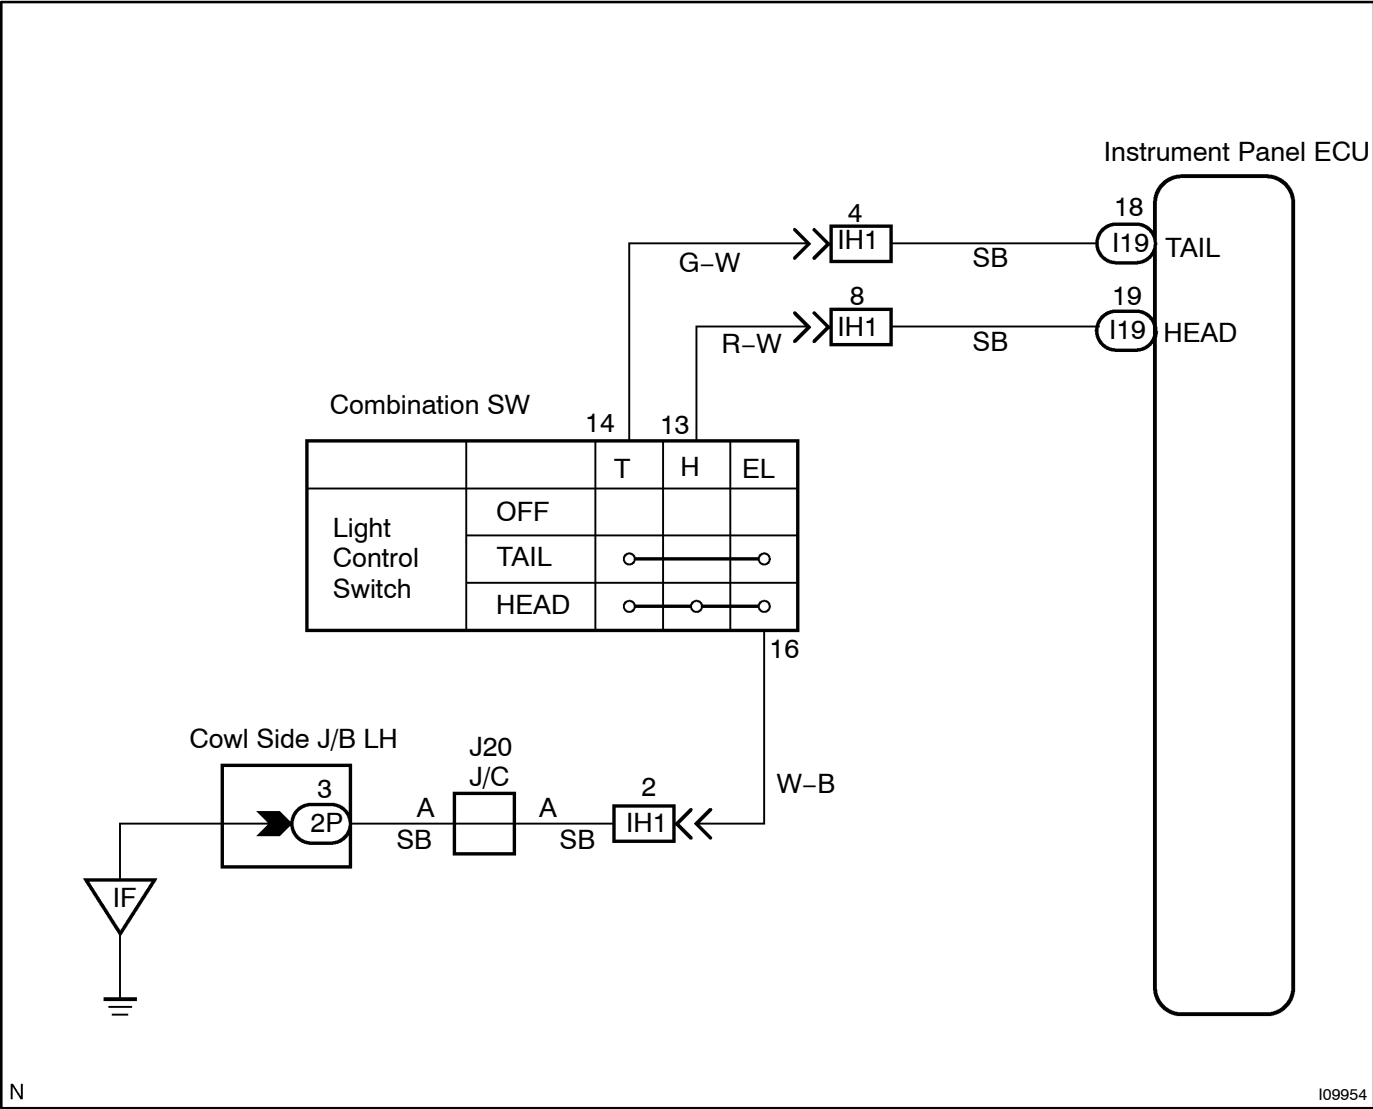

**INSPECTION PROCEDURE**

1	Check headlight control switch (See page <a href="#">BE-32</a> ).
---	---

NG	Replace the headlight control switch.
----	---------------------------------------

OK

2	Check wireharness and connector between headlight control switch and Body ECU.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-702](#)).