


Memory switch circuit (W/ memory)

WIRING DIAGRAM

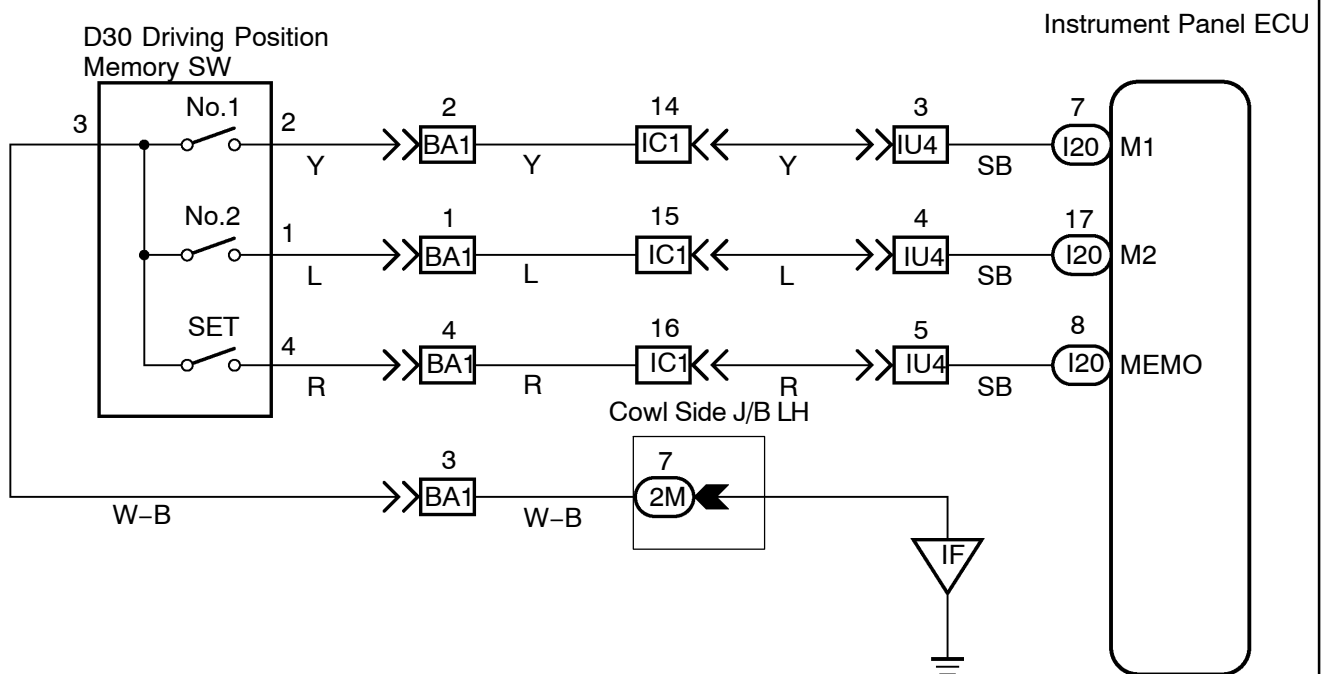

107491

INSPECTION PROCEDURE

1	Check memory switch (See page BE-133).
---	---

NG	Replace the memory switch.
----	----------------------------

OK

2	Check wireharness and connector between memory switch and Body ECU.
---	---

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-702](#)).