


## Power main relay circuit

### CIRCUIT DESCRIPTION

Power main relay will be "ON" by operating the power window switch.

### WIRING DIAGRAM

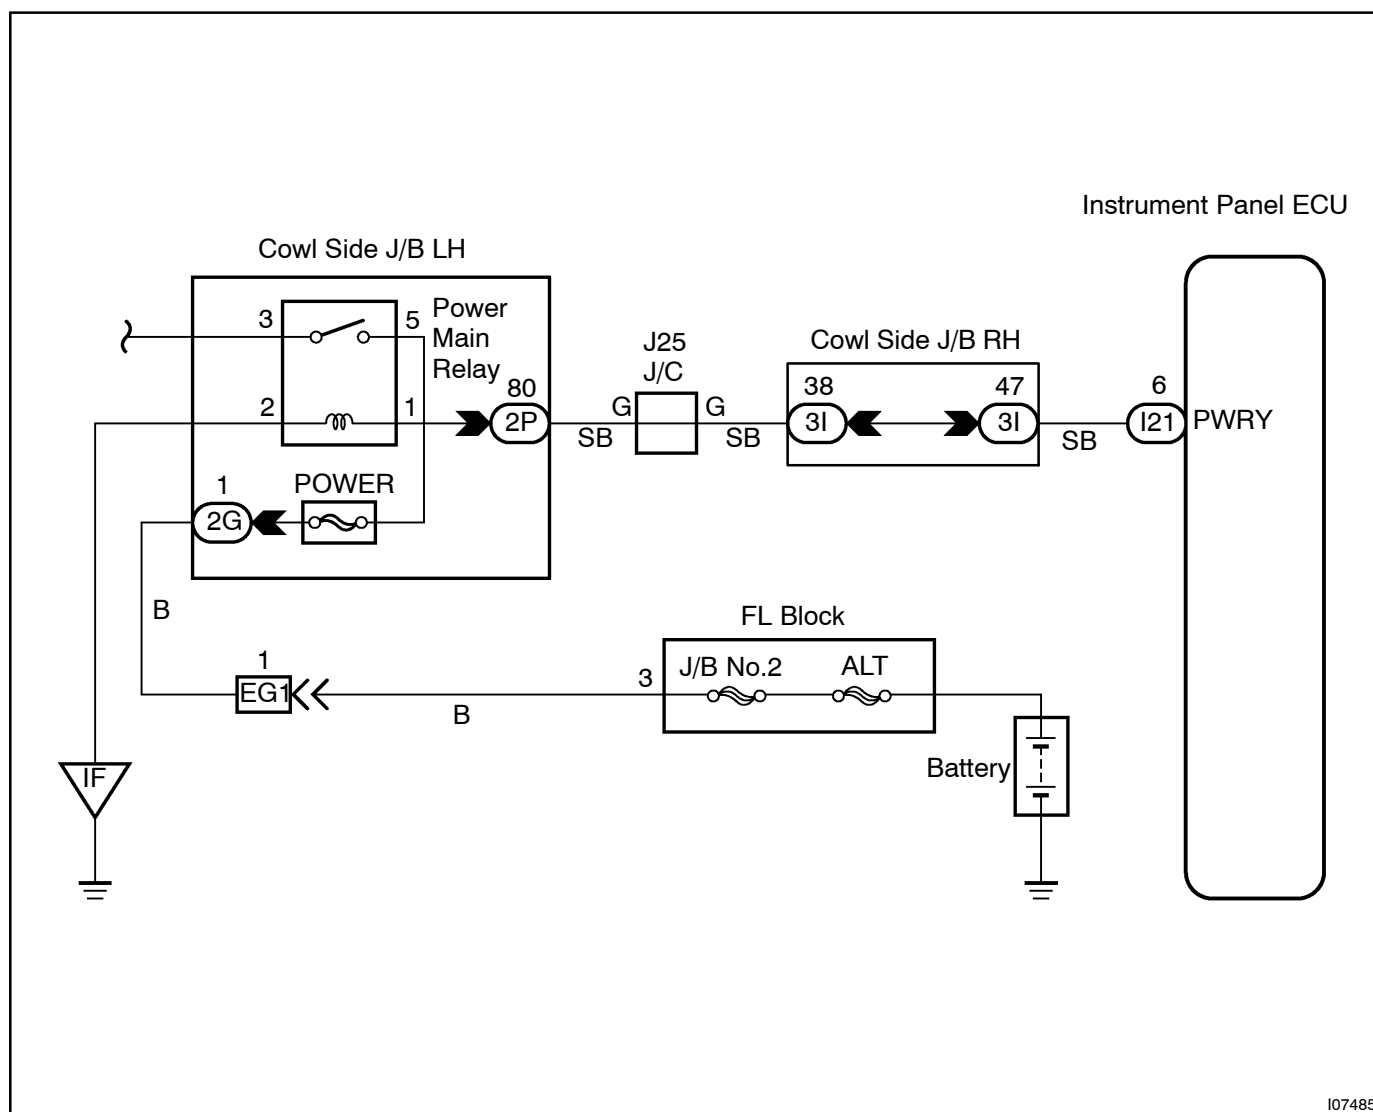

I07485

# INSPECTION PROCEDURE

1	Check power main relay (See page <a href="#">BE-32</a> ).
---	---

NG	Replace the power main relay.
----	-------------------------------

OK

2	Check wireharness and connector between power main relay and Body ECU, battery and power main relay.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-702](#)).