


## Stop light switch circuit

## CIRCUIT DESCRIPTION

The Body ECU is detecting the condition of the stop light switch.

## WIRING DIAGRAM

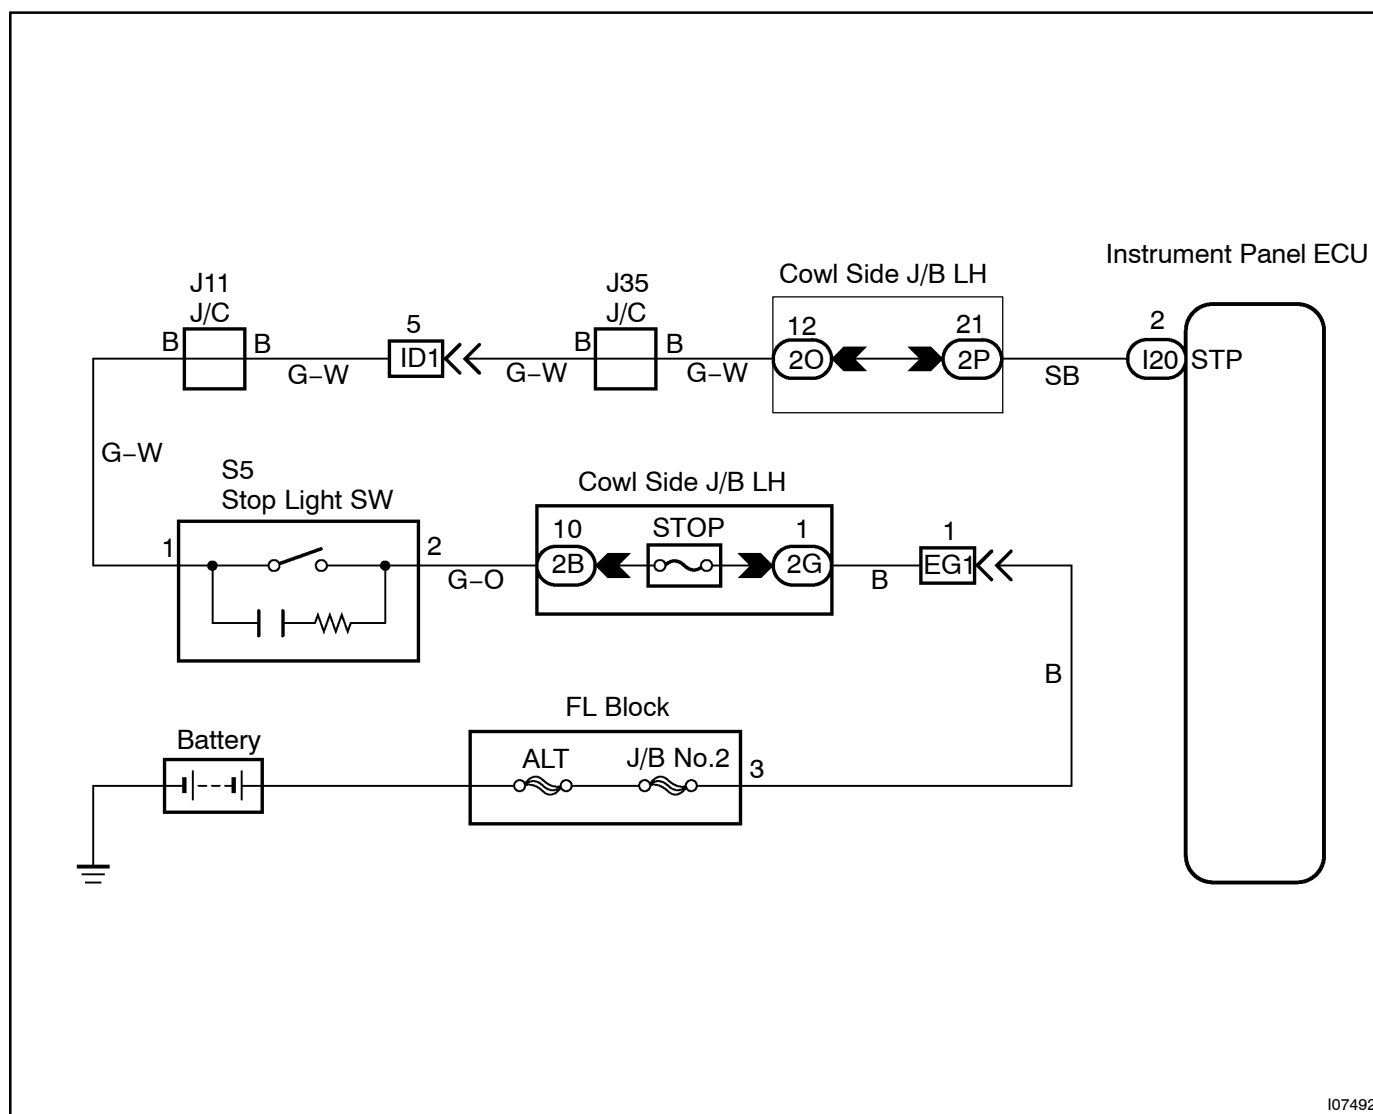

**INSPECTION PROCEDURE**

<b>1</b>	<b>Check stop light switch (See page <a href="#">BE-60</a>).</b>
----------	--

**NG****Replace the stop light switch.****OK**

<b>2</b>	<b>Check wireharness and connector between stop light switch and Body ECU, battery and stop light switch.</b>
----------	---

**NG****Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on  
problem symptoms table  
(See page [DI-702](#)).**