


## Taillight relay circuit

### CIRCUIT DESCRIPTION

Taillight relay will be "ON" by operating the taillight switch. The transistor which activates the tail light relay has two sorts: one activates by the tail light switch for fail safe and the other activates by CPU.

### WIRING DIAGRAM

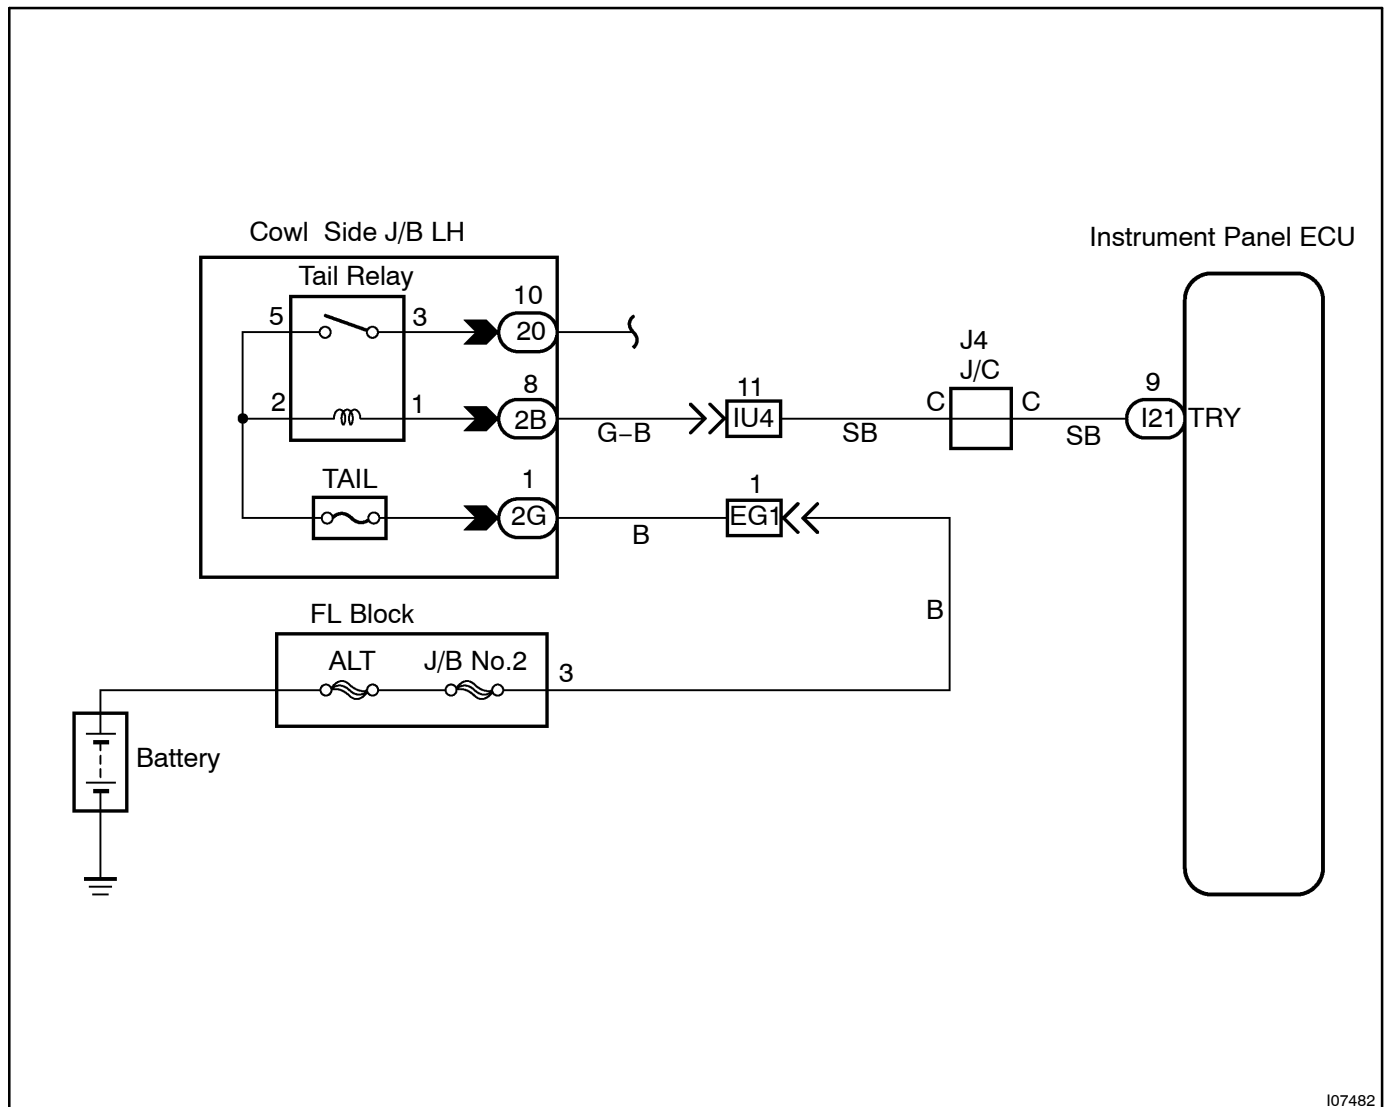

I07482

**INSPECTION PROCEDURE**

|   |  |
|---|--|
| 1 | Check taillight relay (See page <a href="#">BE-32</a> ). |
|---|--|

|    |                              |
|----|------------------------------|
| NG | Replace the taillight relay. |
|----|------------------------------|

OK

|   |  |
|---|--|
| 2 | Check wireharness and connector between taillight relay and Body ECU, battery and taillight relay. |
|---|--|

|    |   |
|----|---|
| NG | Repair or replace wireharness or connector. |
|----|---|

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-702](#)).