

## PARKING BRAKE LEVER ON-VEHICLE INSPECTION


BR079-03

### 1. CHECK PARKING BRAKE LEVER TRAVEL

Pull the parking brake lever all the way up, and count the number of clicks.

**Parking brake lever travel at 196 N (20 kgf, 44 lbf):  
4 – 6 clicks**

If incorrect, adjust the parking brake.

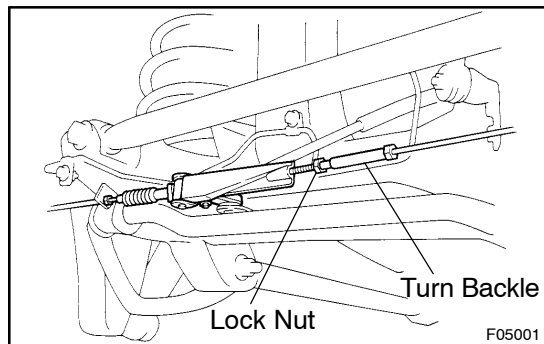

### 2. IF NECESSARY, ADJUST PARKING BRAKE

#### HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment see page [BR-35](#).

- (a) Loosen the lock nut and turn the turn backle until the lever travel is correct.
- (b) Tighten the lock nut.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**