



## INSTALLATION

### 1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface of the transmission housing to the installed surface of the torque converter clutch.

**Correct distance: More than 17.1 mm (0.673 in.)**

### 2. TRANSMISSION INSTALLATION

**Installation is in the reverse order of removal**

**(See page [AT-27](#)).**

**HINT:**

- Transmission control rod and park/neutral position switch (See page [DI-164](#))
- ATF level (See page [DI-164](#))
- Conduct the road test of the vehicle (See page [DI-164](#))