


REMOVAL

1. REMOVE FRONT WHEEL

Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)

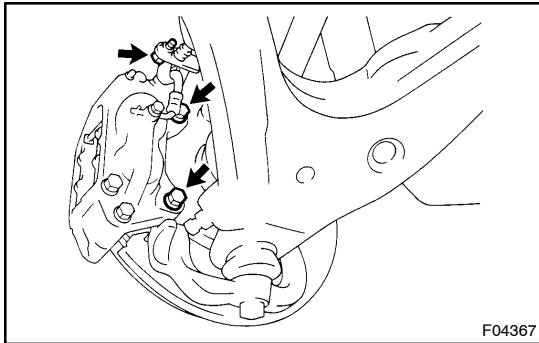

2. REMOVE BRAKE CALIPER

- (a) Remove the bolt and flexible hose from the steering knuckle.

Torque: 28 N·m (290 kgf·cm, 21 ft·lbf)

- (b) Remove the 2 bolts, washers and brake caliper.



Torque: 123 N·m (1,250 kgf·cm, 90 ft·lbf)

- (c) Support the brake caliper securely.

3. REMOVE SNAP RING

- (a) Using a screwdriver and hammer, remove the grease cap from the flange.

- (b) Using snap ring pliers, remove the snap ring.

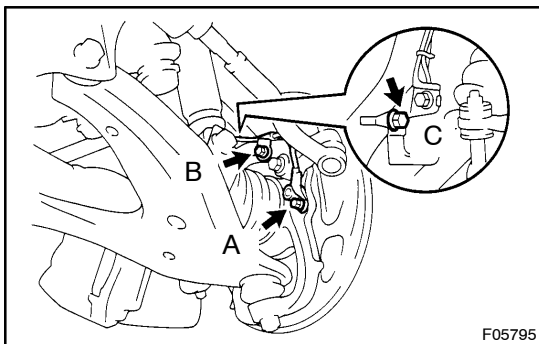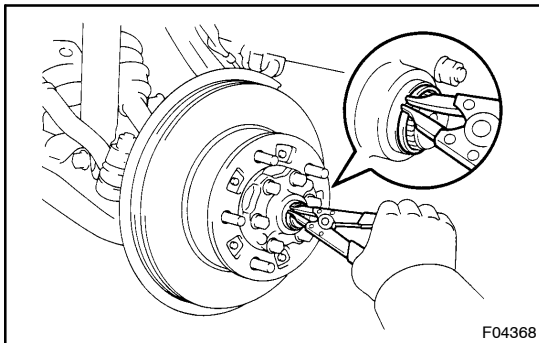

4. DISCONNECT ABS SPEED SENSOR AND WIRE HARNESS


Remove the 3 bolts and disconnect the ABS speed sensor and wire harness.

Torque:

A: 8.0 N·m (82 kgf·cm, 71 in·lbf)

B: 13 N·m (130 kgf·cm, 9 ft·lbf)

C: 28 N·m (290 kgf·cm, 21 ft·lbf)

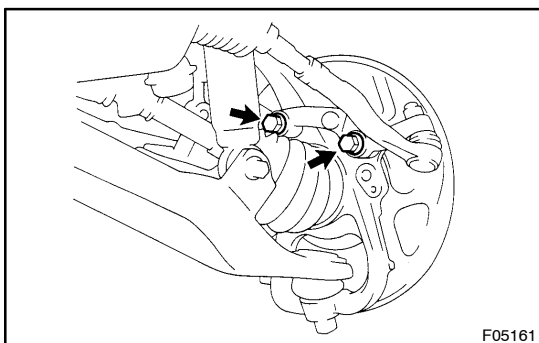

5. DISCONNECT STEERING KNUCKLE ARM

Remove the 2 bolts and disconnect the steering knuckle arm.

Torque: 147 N·m (1,500 kgf·cm, 108 ft·lbf)

HINT:


At the time of installation, please refer to the following items.

- Clean the threads of the 2 bolts and steering knuckle with toluene or trichloroethylene.

- Apply sealant to the bolt threads.
Sealant: Part No. 08833-00070, THREE BOND 1324 or equivalent

6. DISCONNECT STEERING KNUCKLE FROM LOWER SUSPENSION ARM

- (a) Remove the cotter pin and nut.
Torque: 159 N·m (1,625 kgf·cm, 118 ft·lbf)

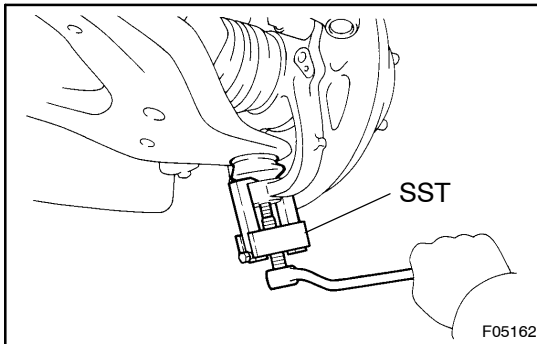


- (b) Using SST, disconnect the steering knuckle from the lower suspension arm.

SST 09628-62011

7. REMOVE STEERING KNUCKLE WITH AXLE HUB


- (a) Support the lower suspension arm with a jack.
(b) Remove the cotter pin and nut.
Torque: 110 N·m (1,125 kgf·cm, 81 ft·lbf)
(c) Temporarily install the nut to the lower suspension arm.

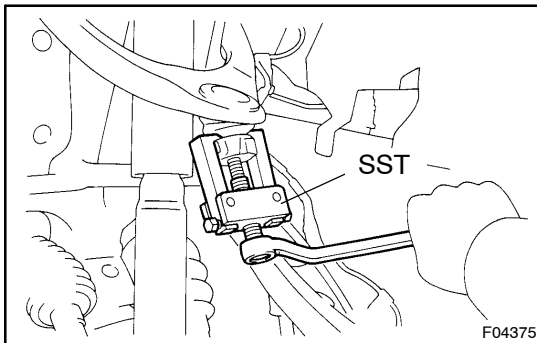

- (d) Using SST, disconnect the steering knuckle from the upper suspension arm.

SST 09628-62011

- (e) Remove the nut and steering knuckle with axle hub.

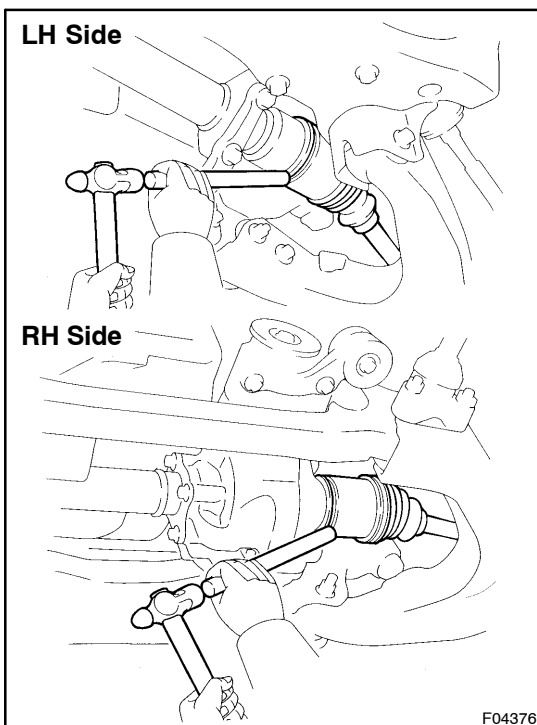

8. REMOVE DRIVE SHAFT

- (a) Using a brass bar and hammer, remove the drive shaft.

NOTICE:

Be careful not to damage the boot, dust cover and oil seal.

- (b) Using a screwdriver, remove the snap ring.

HINT:

At the time of installation, please refer to the following items.

- Coat the oil seal lip with MP grease.
- Before installation, set a new snap ring with opening side facing downward.
- After installation, check that the drive shaft cannot be pulled out by hand.