

# TROUBLESHOOTING

## PROBLEM SYMPTOMS TABLE

TR04H-02

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

Symptom	Suspect Area	See page
Noise	1. Oil (Level low) 2. Oil (Wrong) 3. Transfer faulty	TR-4 TR-4 TR-7
Oil leakage	1. Oil (Level too high) 2. Gasket (Damaged) 3. Oil seal (Worn or damaged) 4. O-ring (Worn or damaged)	TR-4 TR-7 TR-7 –
Tight corner braking	Center differential or transfer faulty	TR-7