



CELLULAR MOBILE TELEPHONE

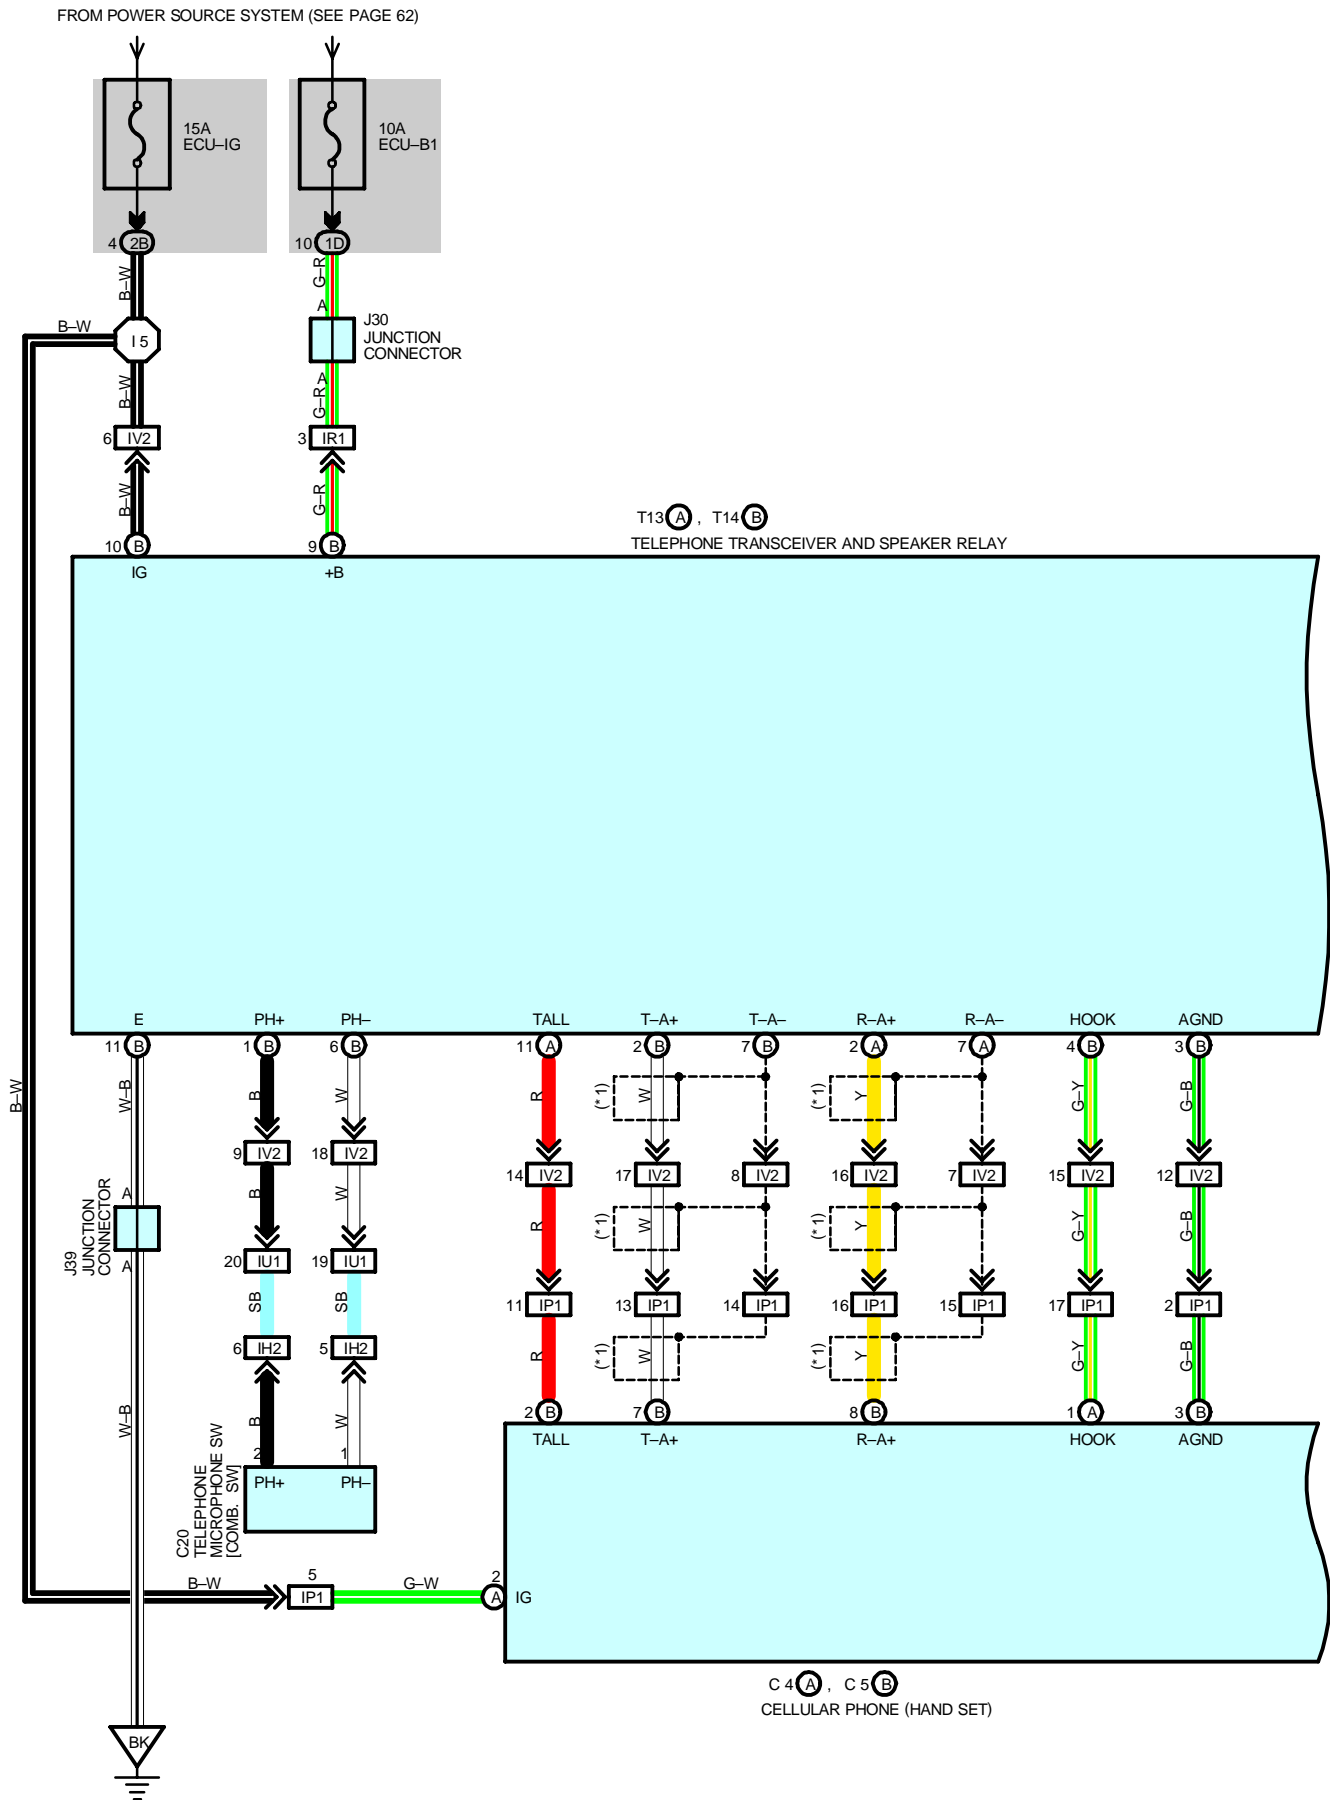

* 1 : SHIELDED

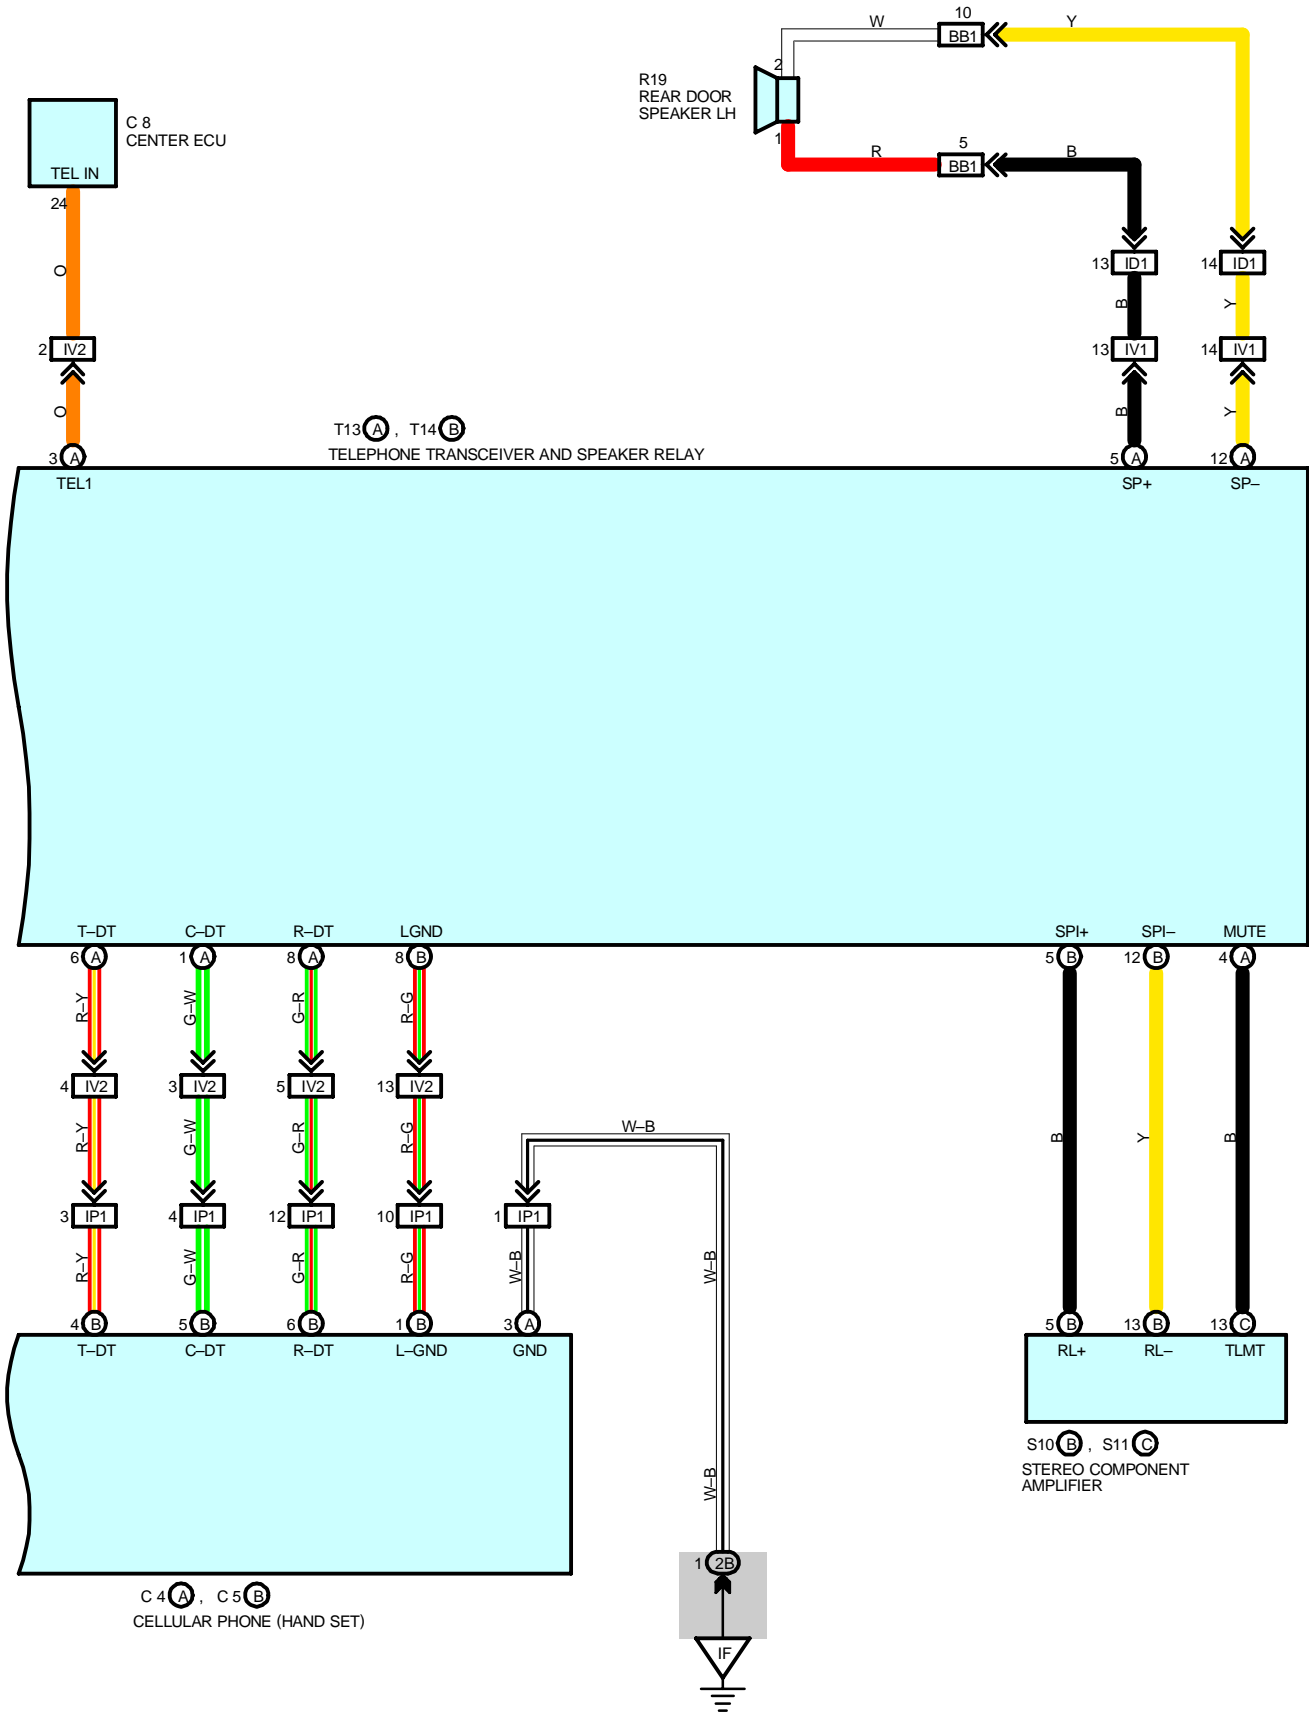

CELLULAR MOBILE TELEPHONE

SERVICE HINTS

T14 TELEPHONE TRANSCEIVER AND SPEAKER RELAY

- 9—GROUND : Always approx. **12** volts
- 10—GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 11—GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C4	A	38	J30	39		S11	C	41
C5	B	38	J39	40		T13	A	41
C8		38	R19	41		T14	B	41
C20		38	S10	B	41			

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	46	Dash Wire and Floor Wire (Left Kick Panel)
IH2	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IP1	50	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IR1	50	Engine Room No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IU1	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IV1	52	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IV2		
BB1	54	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
BK	54	Front Side Under the Front Passenger's Seat


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	48	Dash Wire			


C4 (A)



 
C5 (B)




C8

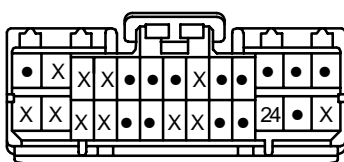

C20
BLACK

 


J30
BLUE

 

(Hint : See Page 7)

 J39




(Hint : See Page 7)


R19




S10 (B)

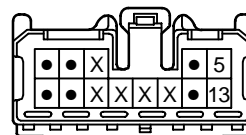

S11 (C)
GRAY

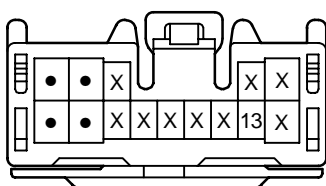

T13 (A)

 

T14 (B)

