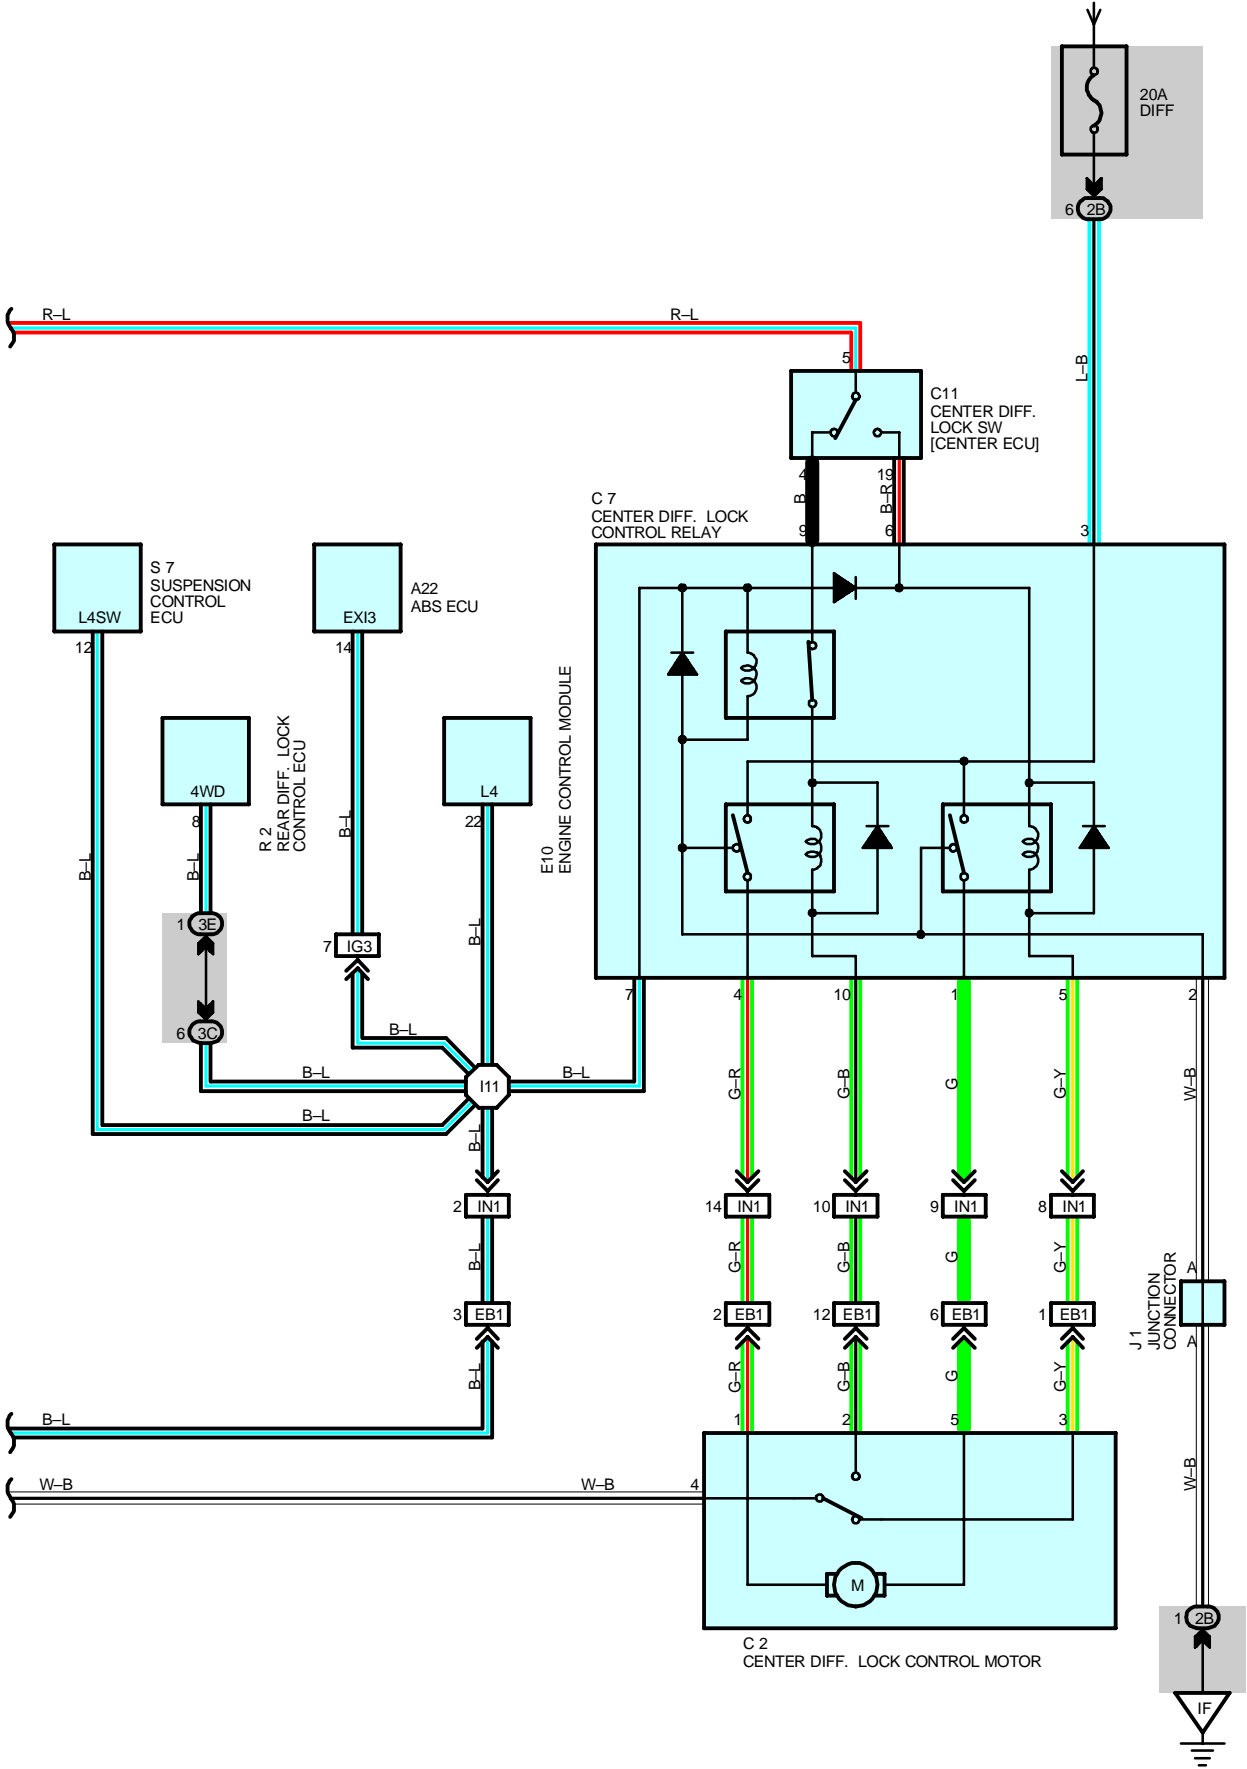


FROM POWER SOURCE SYSTEM (SEE PAGE 62)



CENTER DIFFERENTIAL LOCK

SERVICE HINTS

C7 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

7-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position and transfer lever at **L** position

2-GROUND : Always continuity

○ : PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| A22 | 38 | C16 | C | J14 | 39 |
| C2 | 36 | D4 | 36 | J17 | 39 |
| C7 | 38 | D5 | 36 | J19 | 39 |
| C11 | 38 | D6 | 36 | P1 | 37 |
| C14 | A | E10 | 38 | R2 | 39 |
| C15 | B | J1 | 39 | S7 | 39 |

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|--|
| 2B | 24 | Dash Wire and Cowl Side J/B LH (Left Kick Panel) |
| 2D | | |
| 2P | 26 | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel) |
| 3C | 30 | Dash Wire and Cowl Side J/B RH (Right Kick Panel) |
| 3E | 30 | Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel) |

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

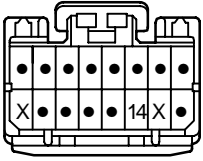
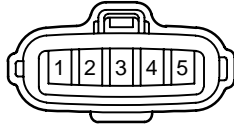
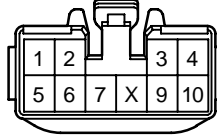
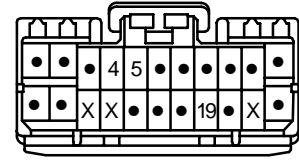
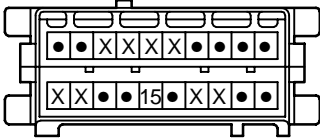
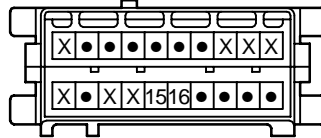
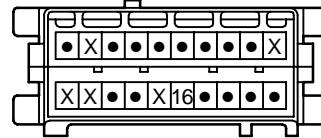
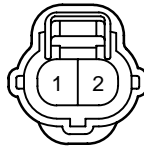
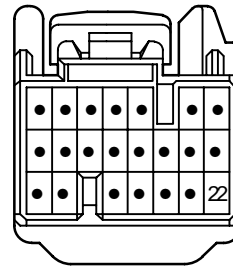
 
| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|--|
| EB1 | 44 | Engine Wire and Transmission Wire (On the Transmission) |
| IG3 | 48 | Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter) |
| IN1 | 50 | Engine Wire and Dash Wire (Behind the Glove Box) |
| IX1 | 52 | Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box) |

▽ : GROUND POINTS

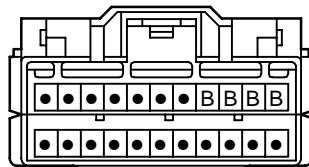
| Code | See Page | Ground Points Location |
|------|----------|----------------------------------|
| EC | 44 | Rear Bank of Right Cylinder Head |
| IF | 46 | Set Bolt of Cowl Side J/B LH |

○ : SPLICE POINTS

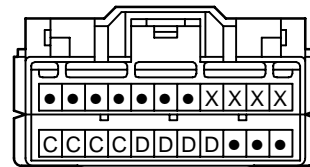
| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| E4 | 44 | Engine Wire | I5 | 48 | Dash Wire |
| E5 | 44 | Transmission Wire | I11 | | |

A22**C2**
BLACK**C7****C11****C14 (A)**
GRAY**C15 (B)****C16 (C)**
GRAY**D4**
GRAY**D5**
GRAY**D6**
GRAY**E10****J1**

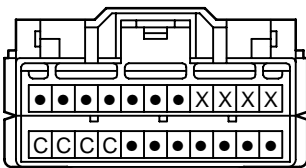
(Hint : See Page 7)

J14

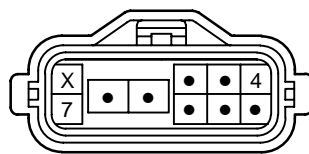
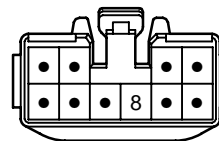
(Hint : See Page 7)

J17

(Hint : See Page 7)

J19

(Hint : See Page 7)

P1
GRAY**R2****S7**