


# CHARGING

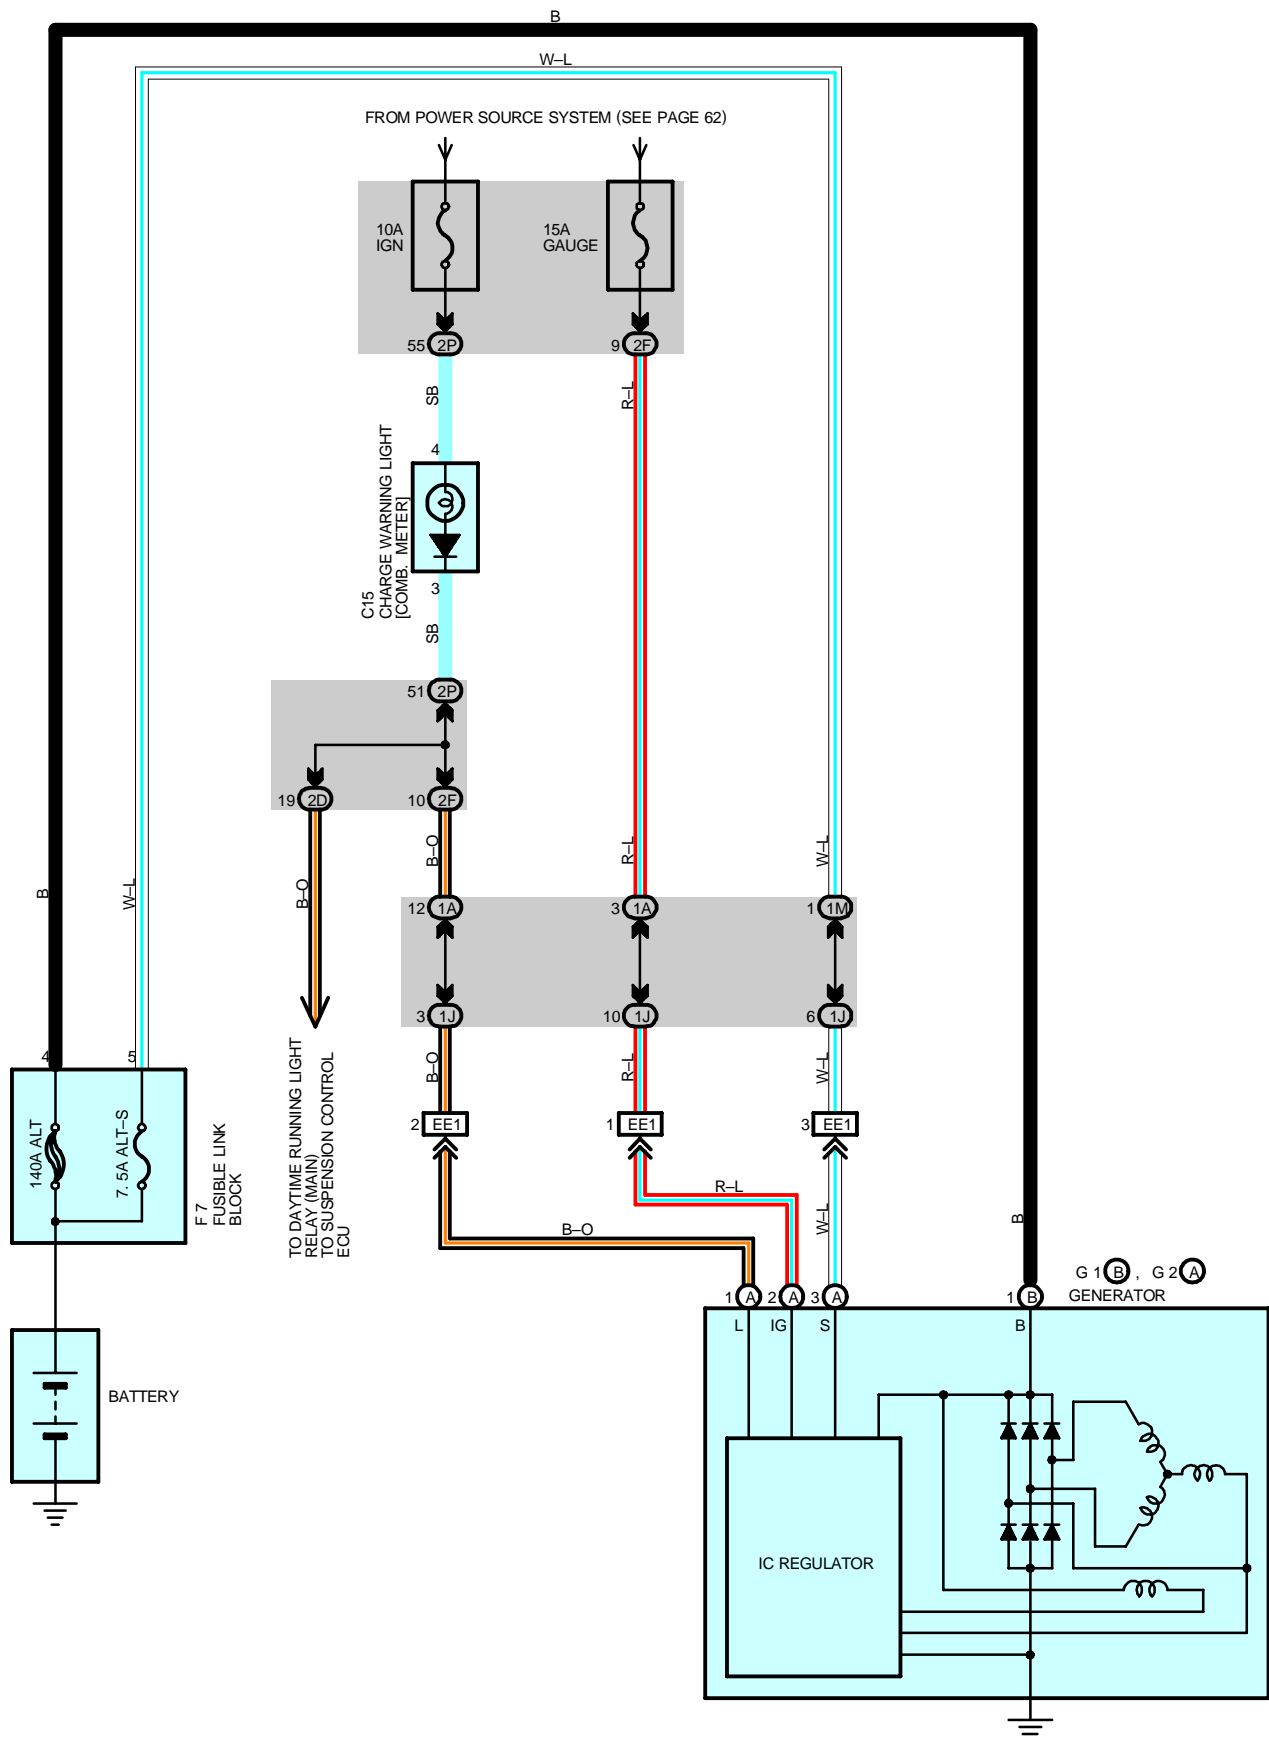

## SERVICE HINTS

### G2 GENERATOR

1-GROUND : 13.2–14.0 volts with engine running at 5000 rpm and 115°C (239°F)

### ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C15	38	G1	B	36	
F7	36	G2	A	36	


### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1J	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1M	21	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
2D	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	44	Engine Room Main Wire and Alternator Wire (Near the Battery)


C15

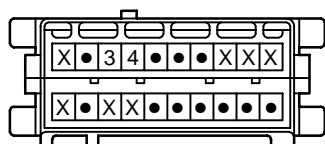

F7

(See Page 34)

 G1 (B)



G2 (A)  
BLACK

