





F RELAY LOCATIONS

[Engine Compartment]

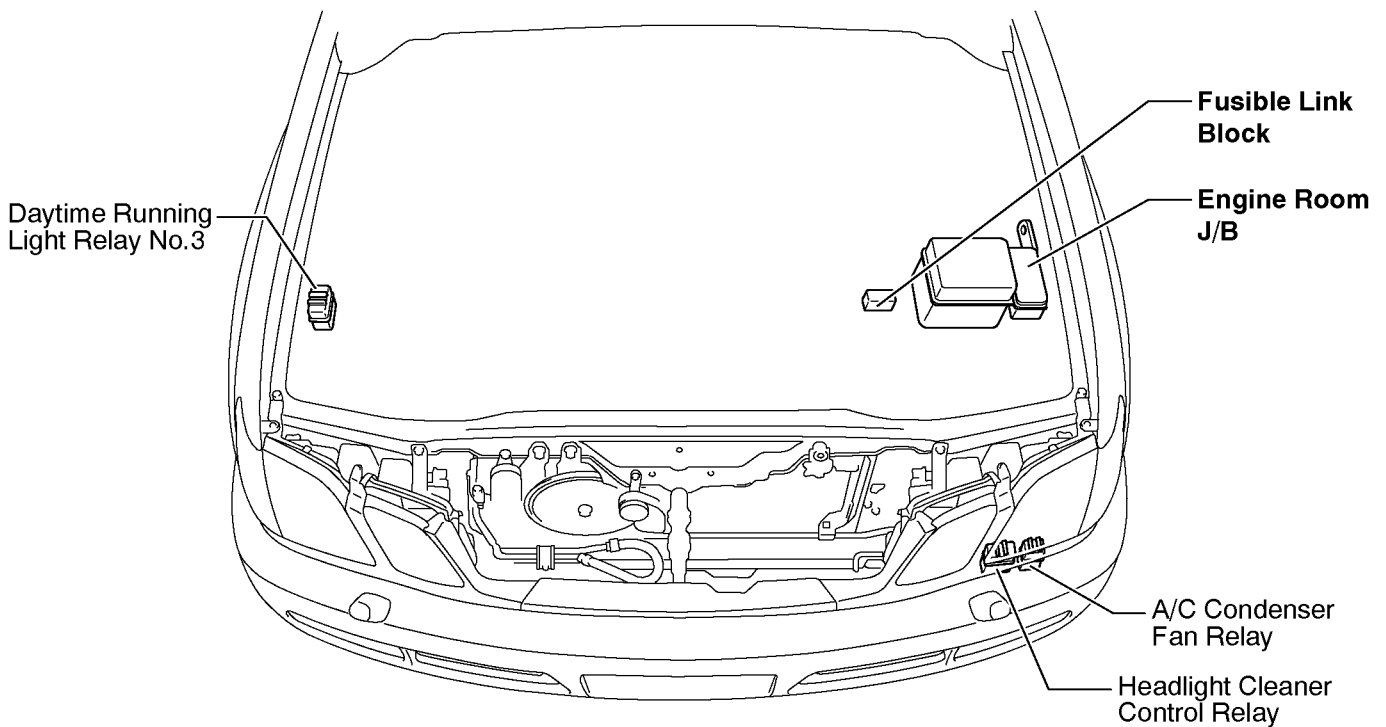


[Instrument Panel]

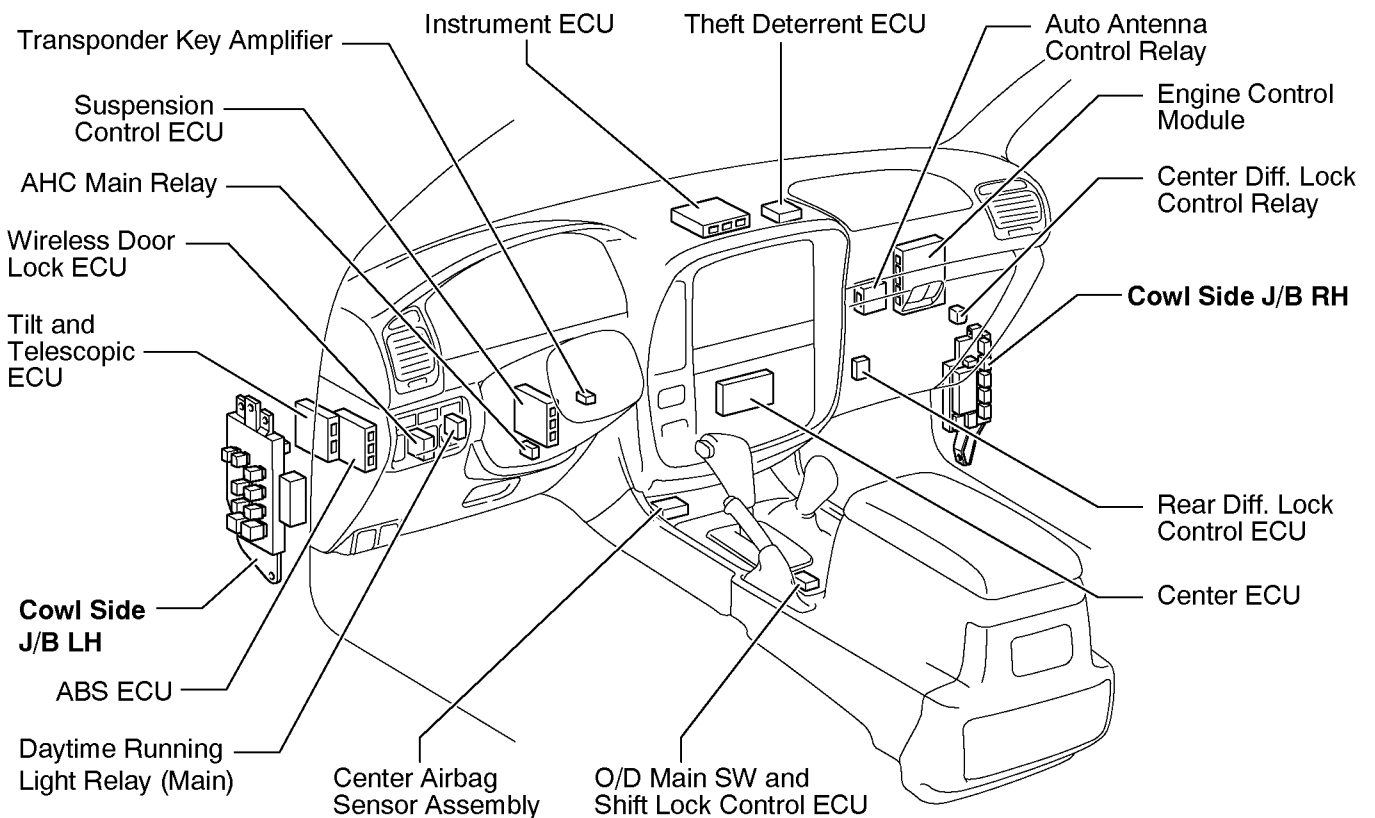


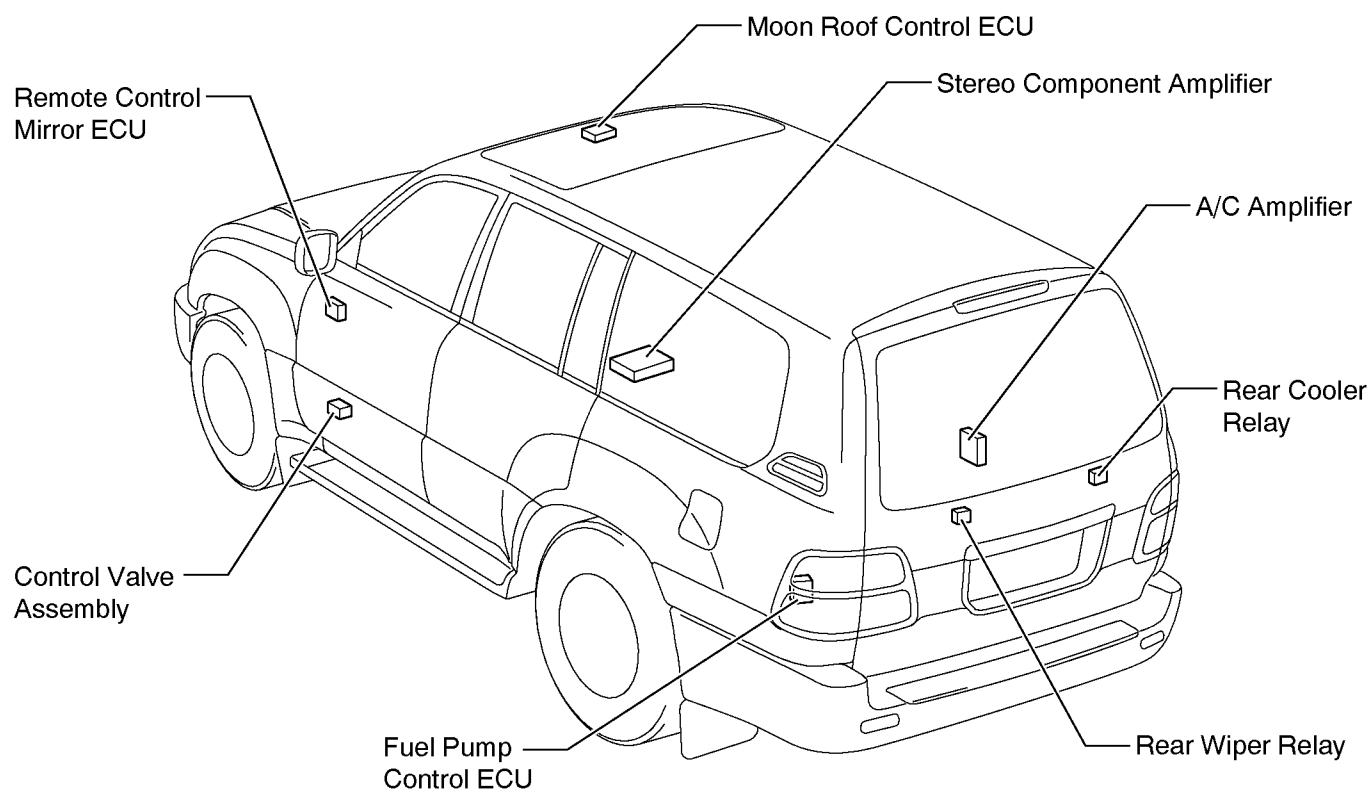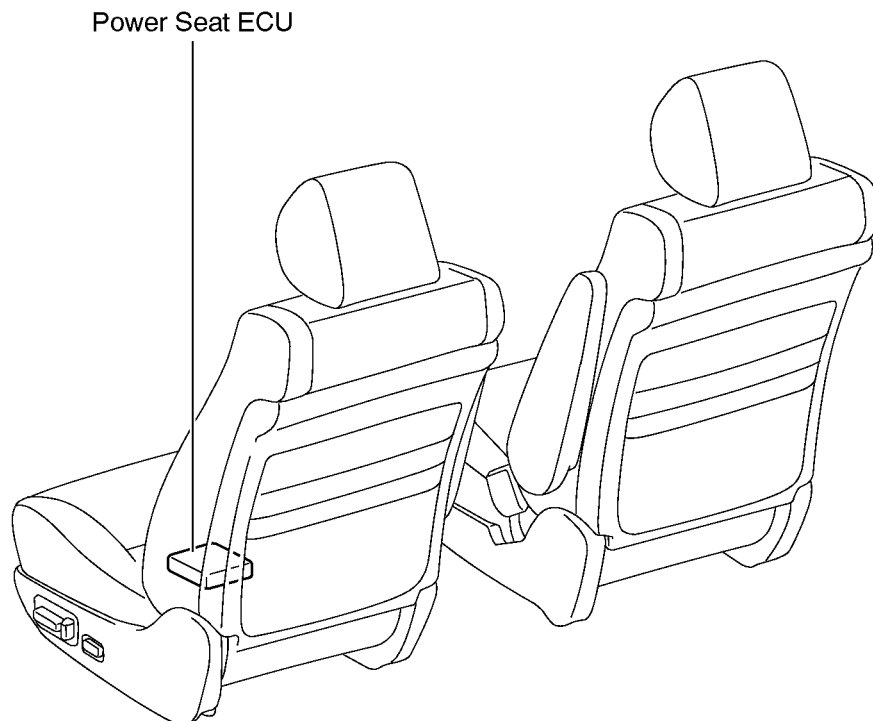[Body]**[Seat]**

F RELAY LOCATIONS


 : Engine Room J/B	Engine Compartment Left (See Page 18)
---	---------------------------------------

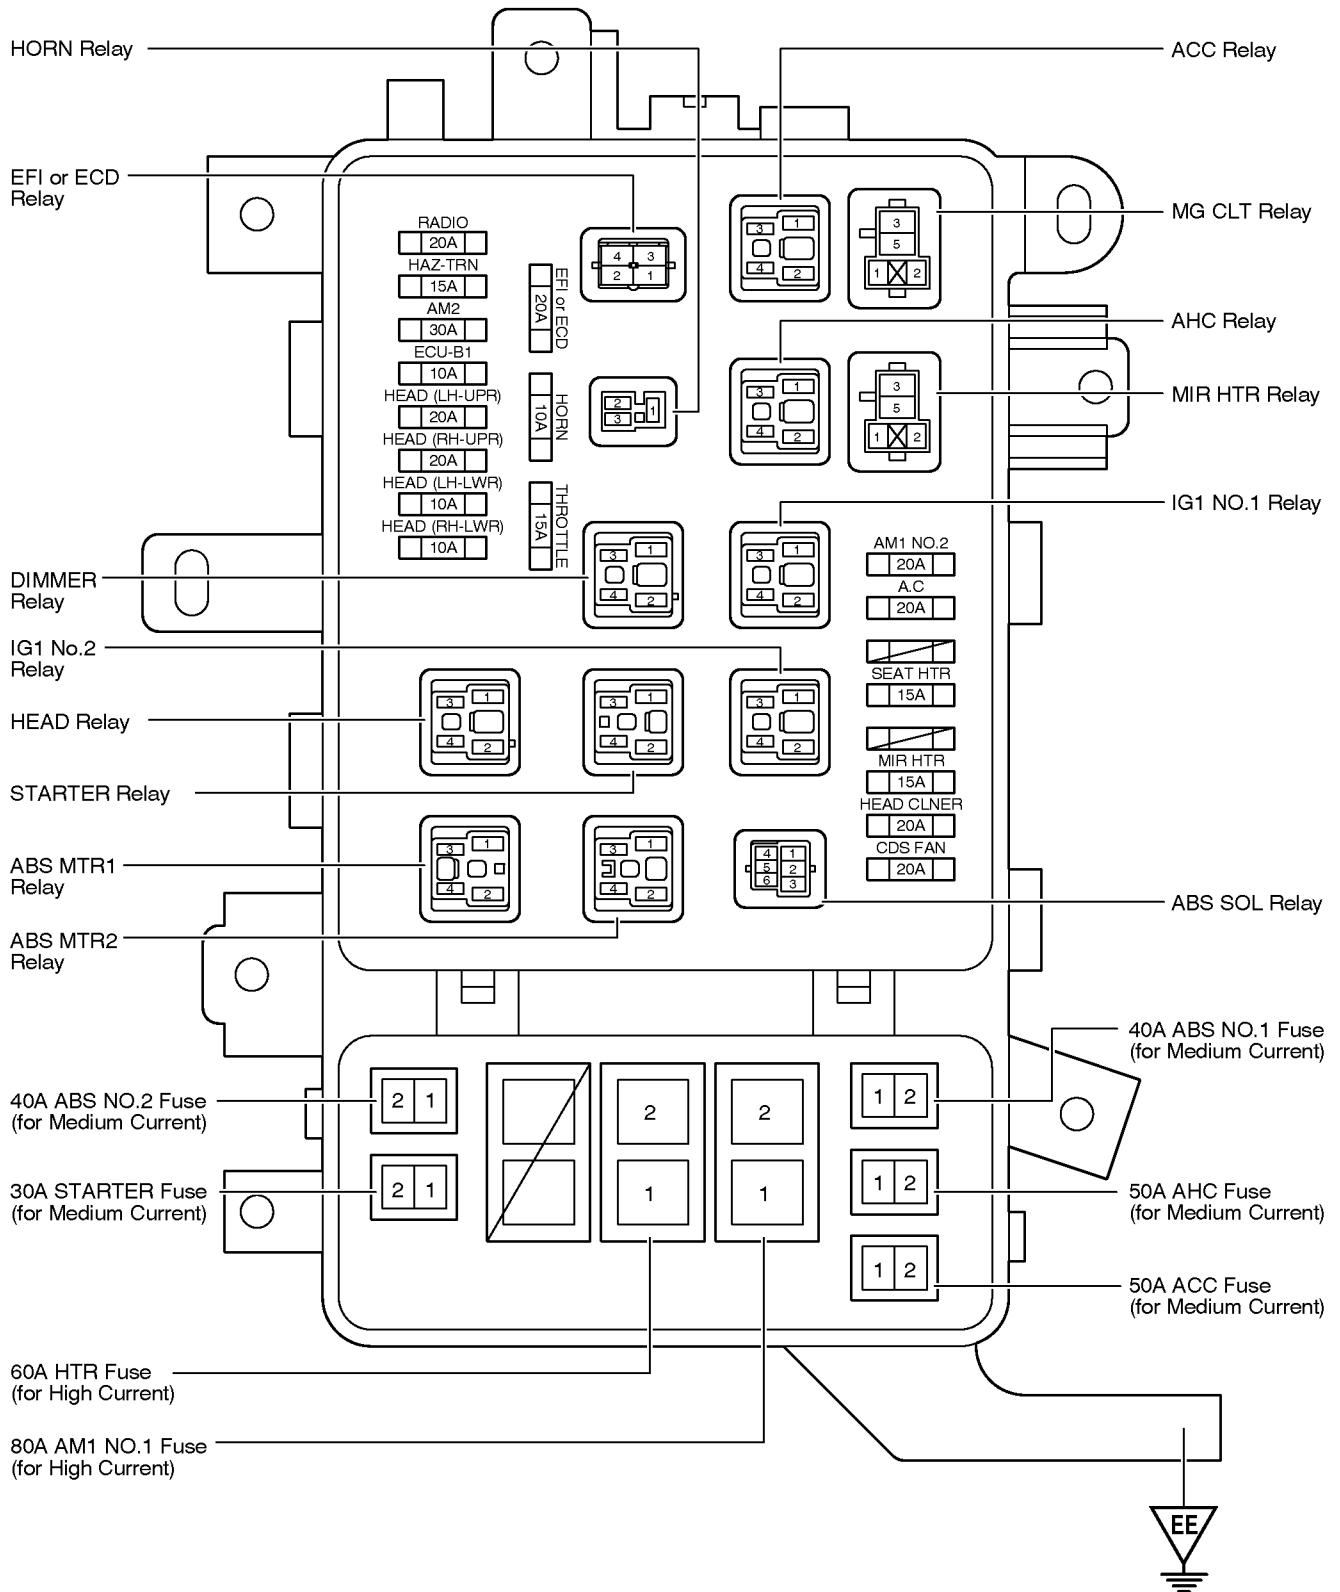

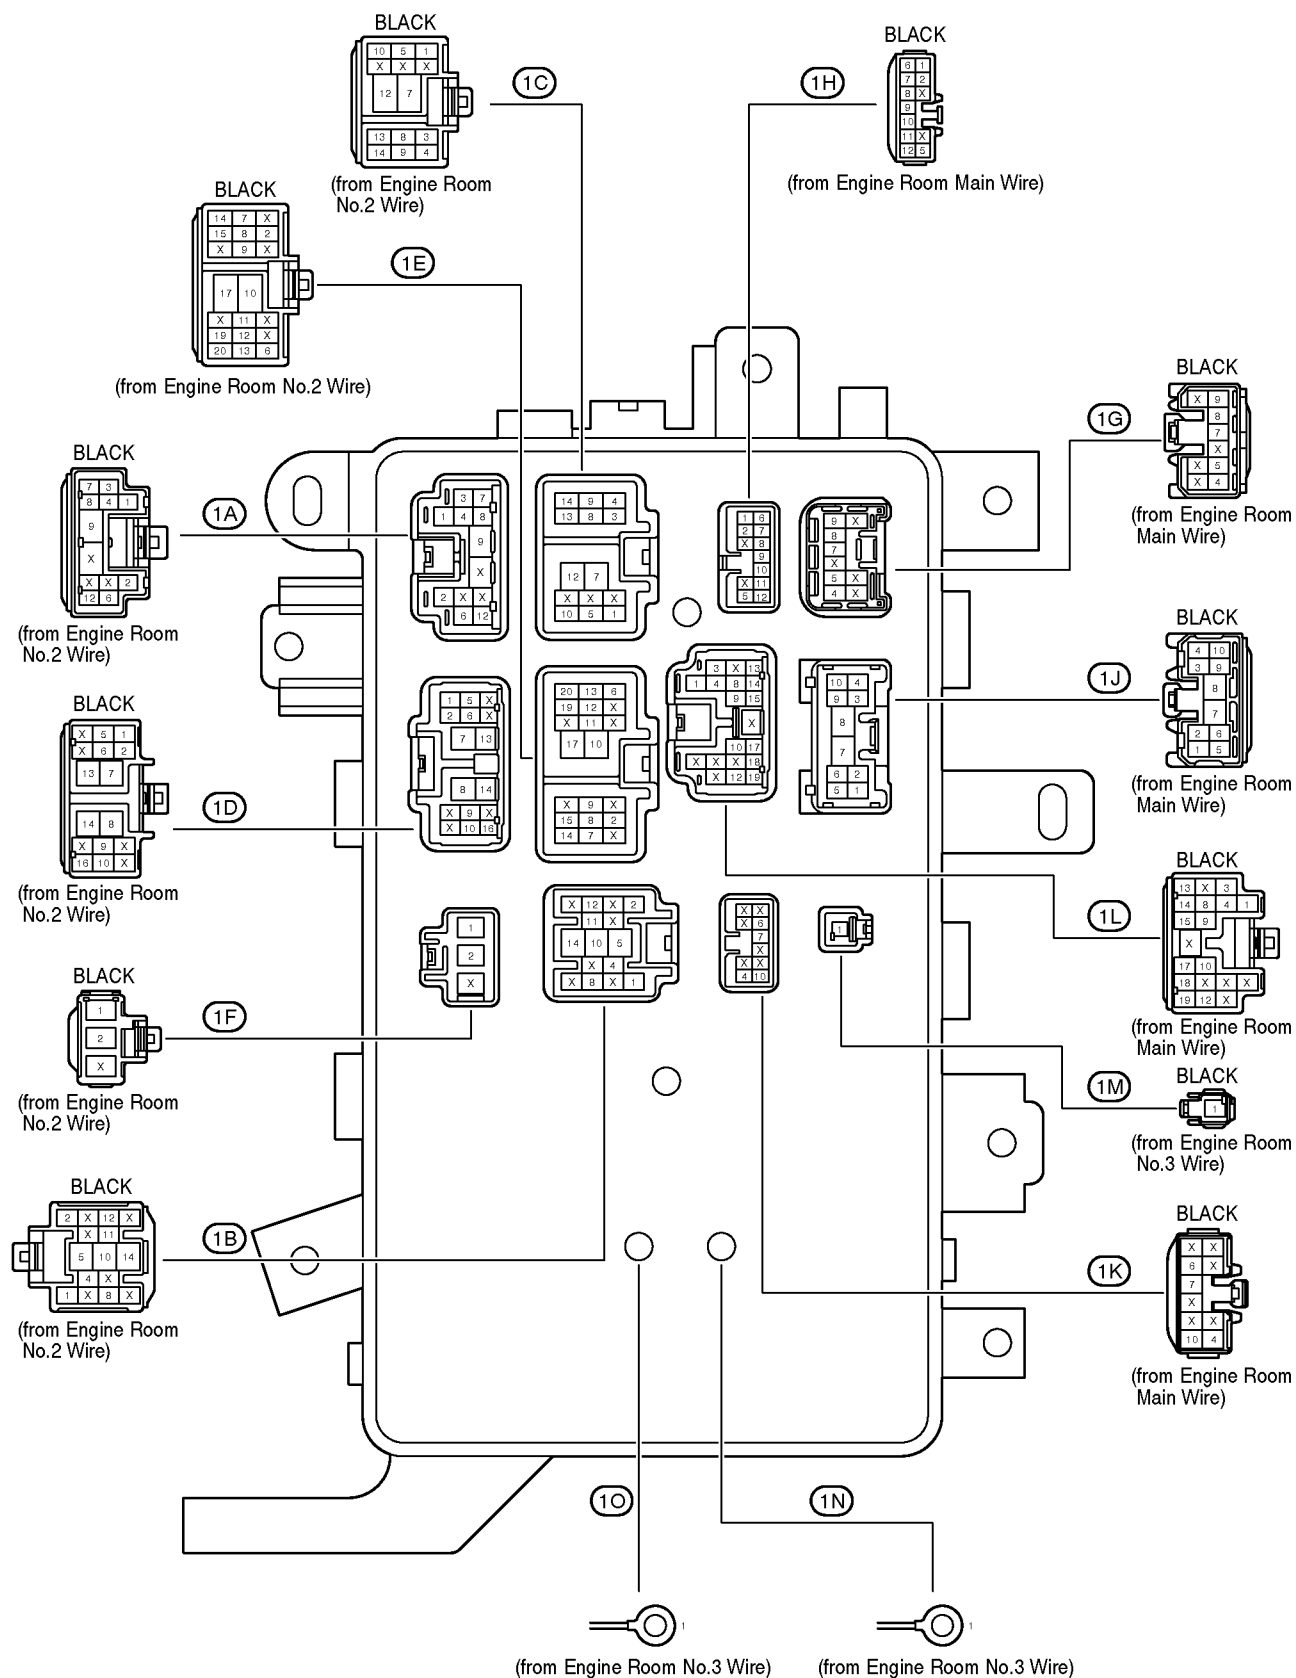


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

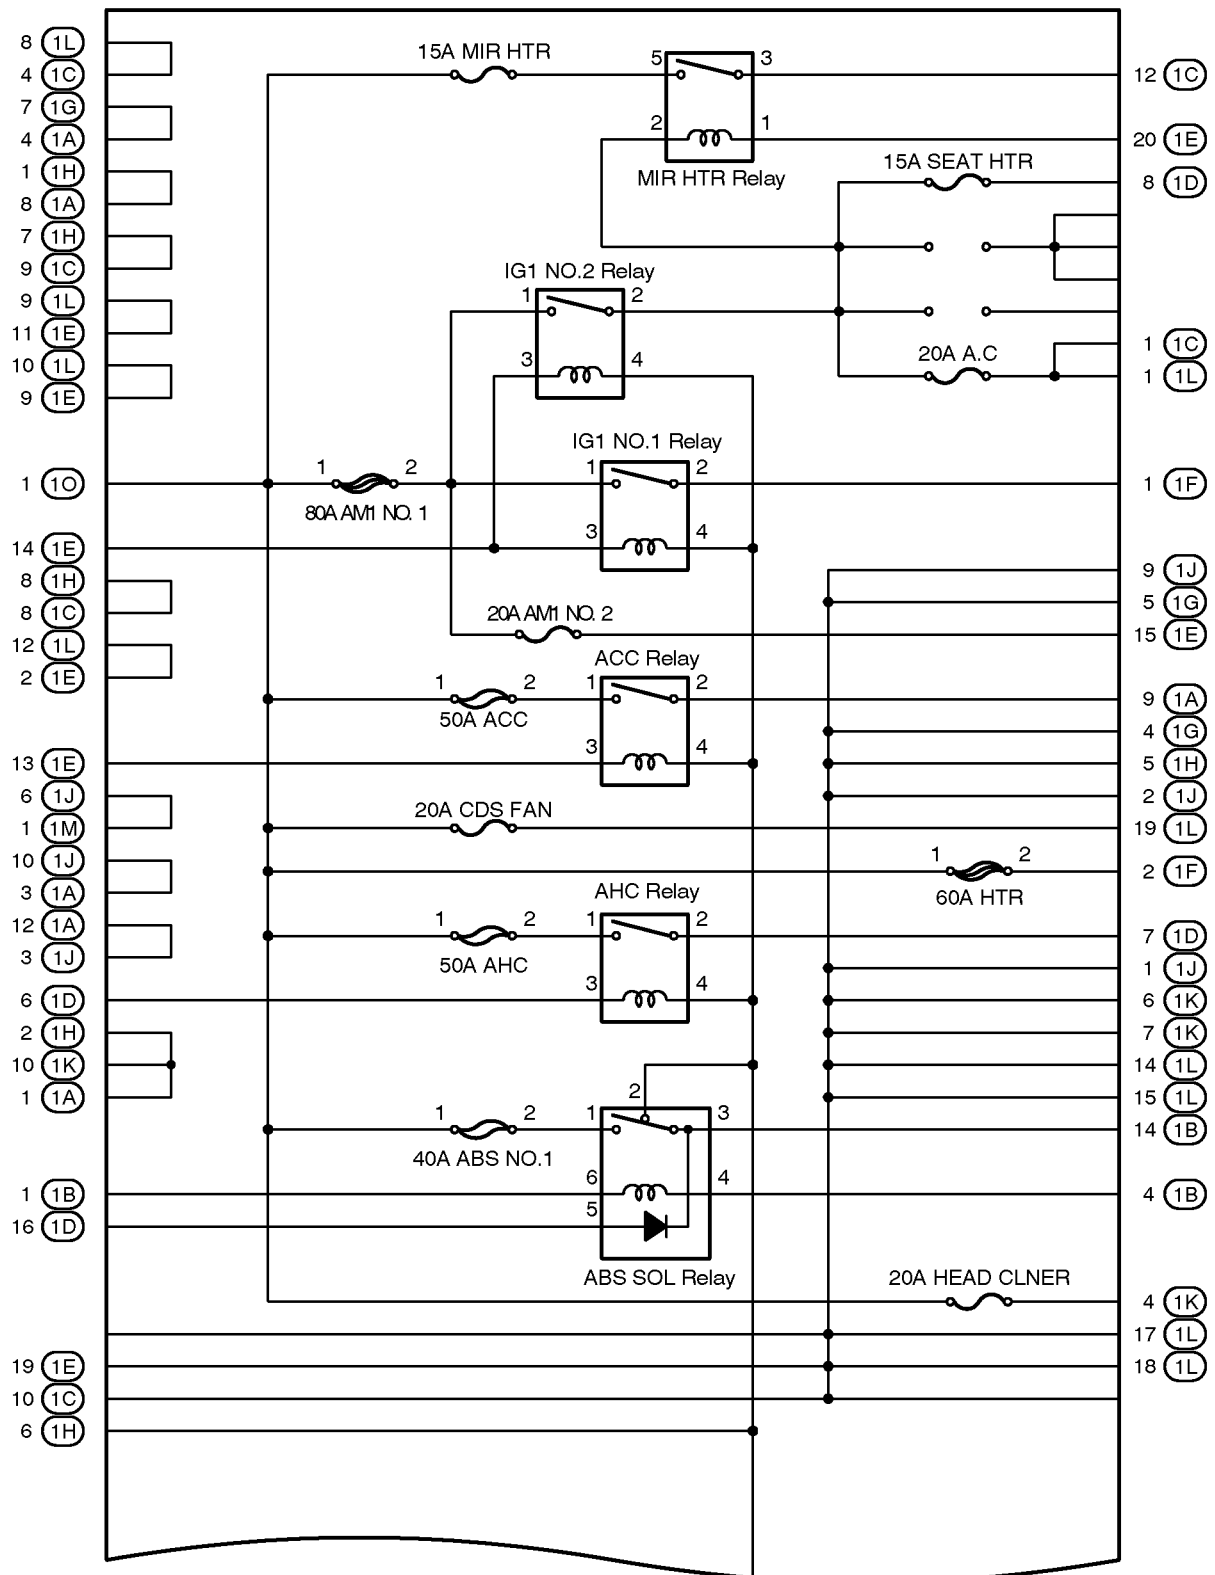


Cont. Next Page


Cont'd

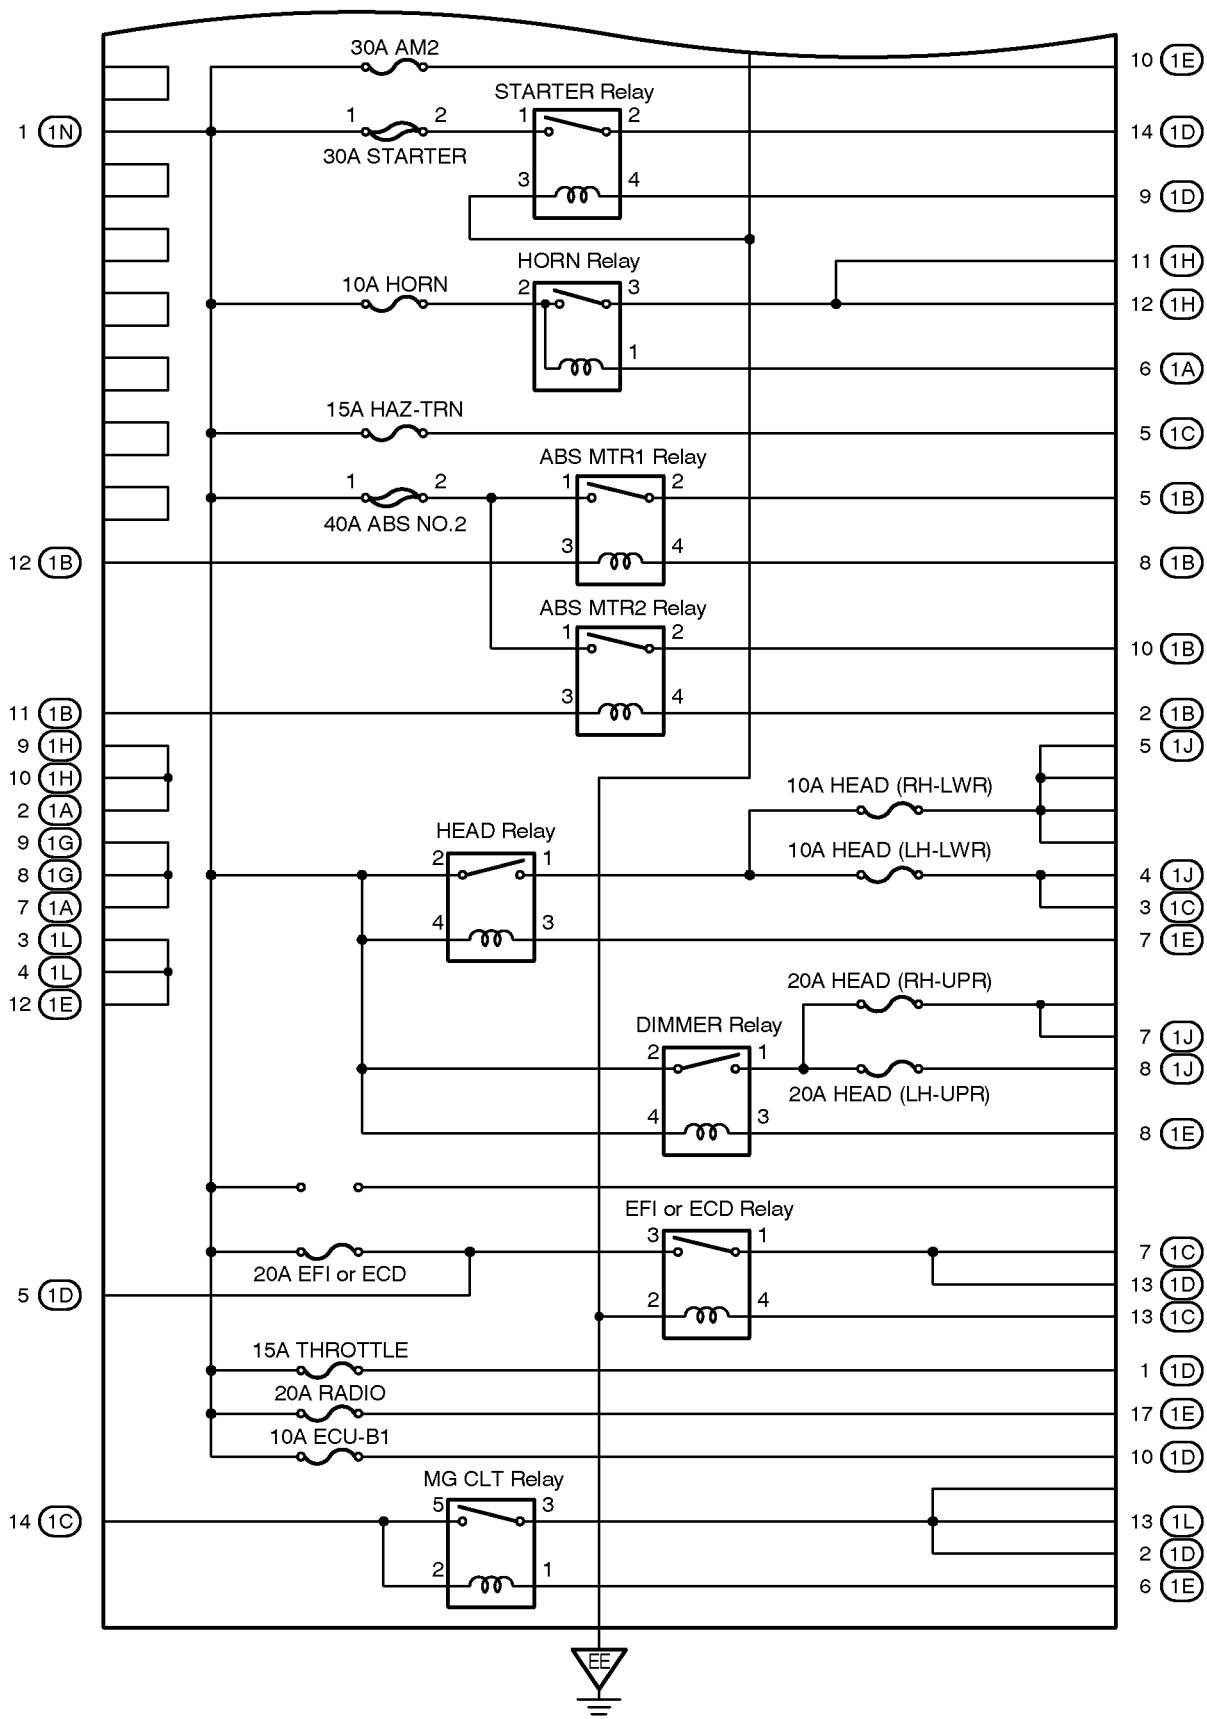

F RELAY LOCATIONS


 : Cowl Side J/B LH

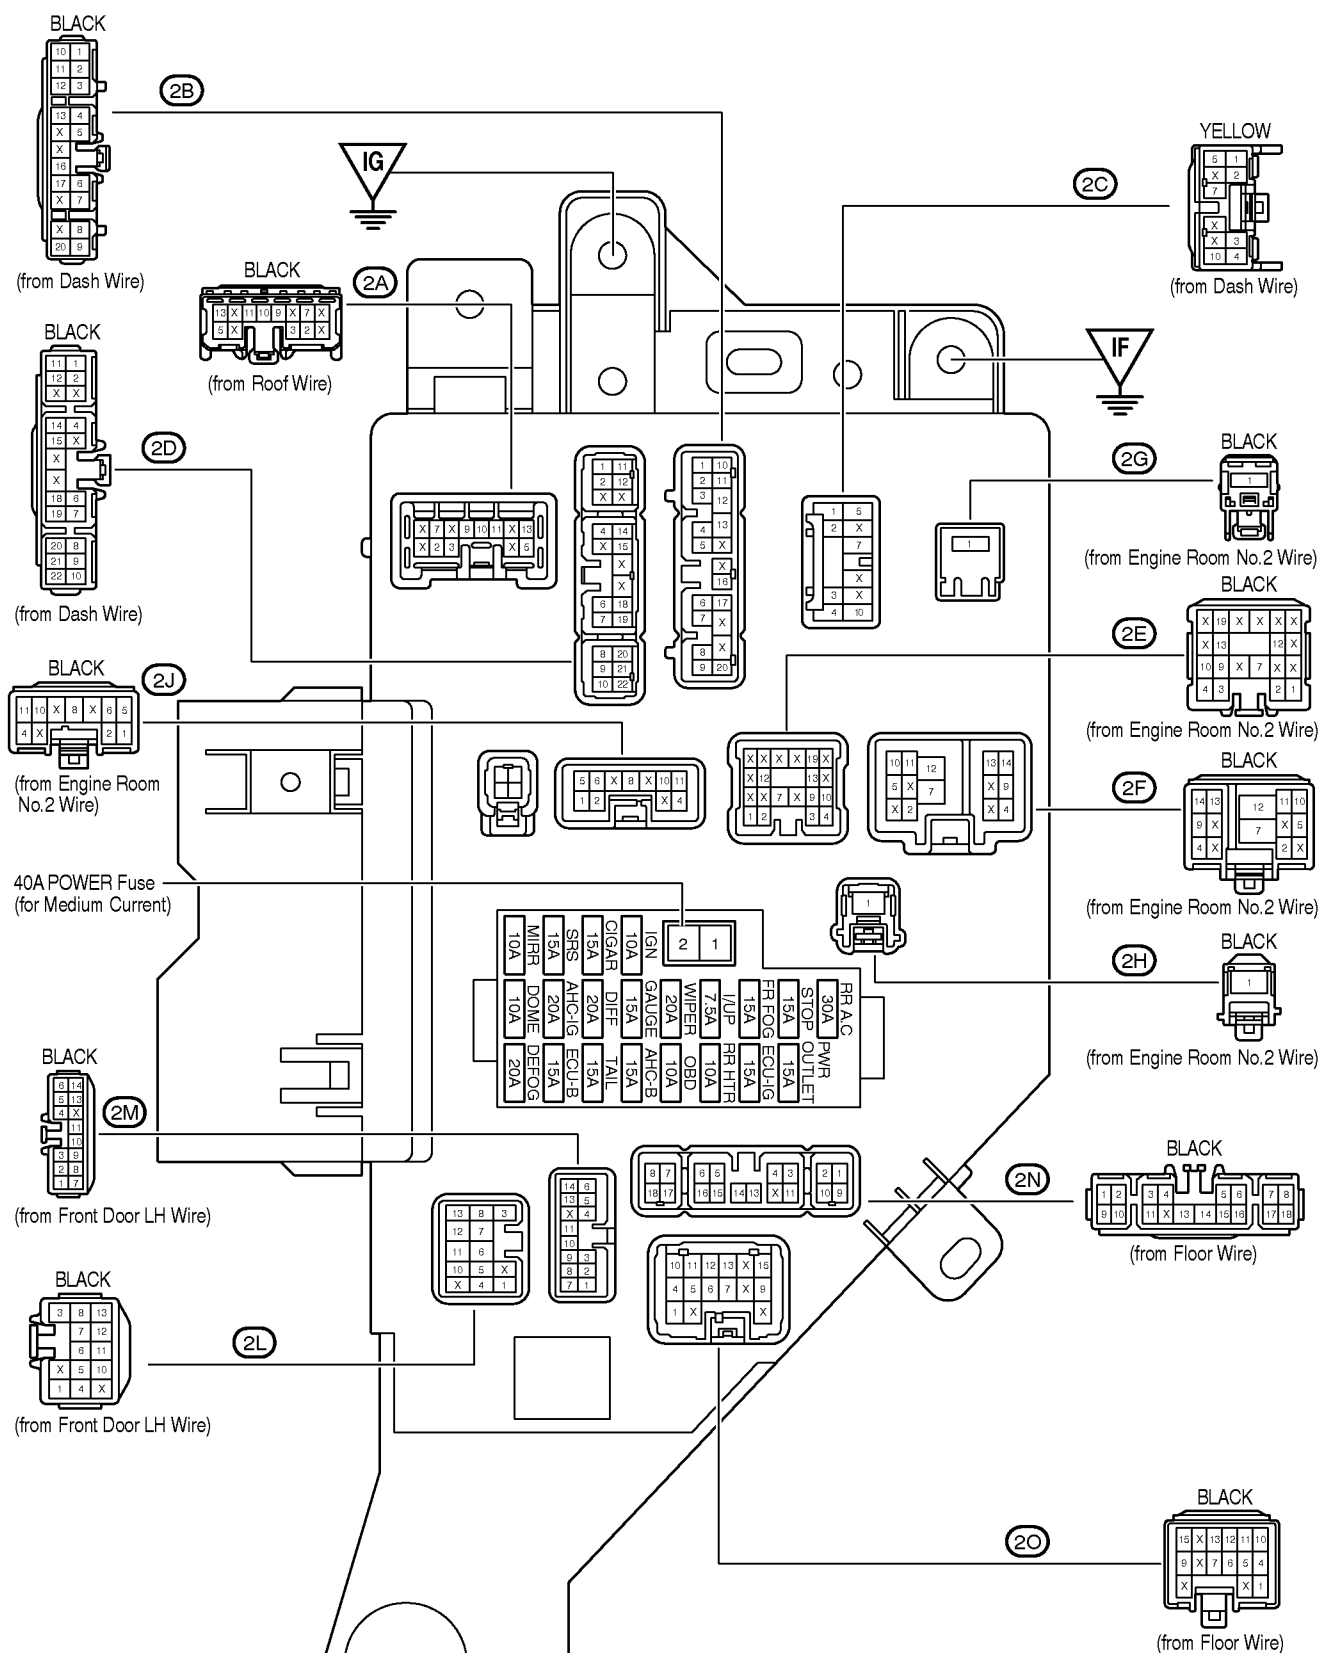
Left Kick Panel (See Page 18)

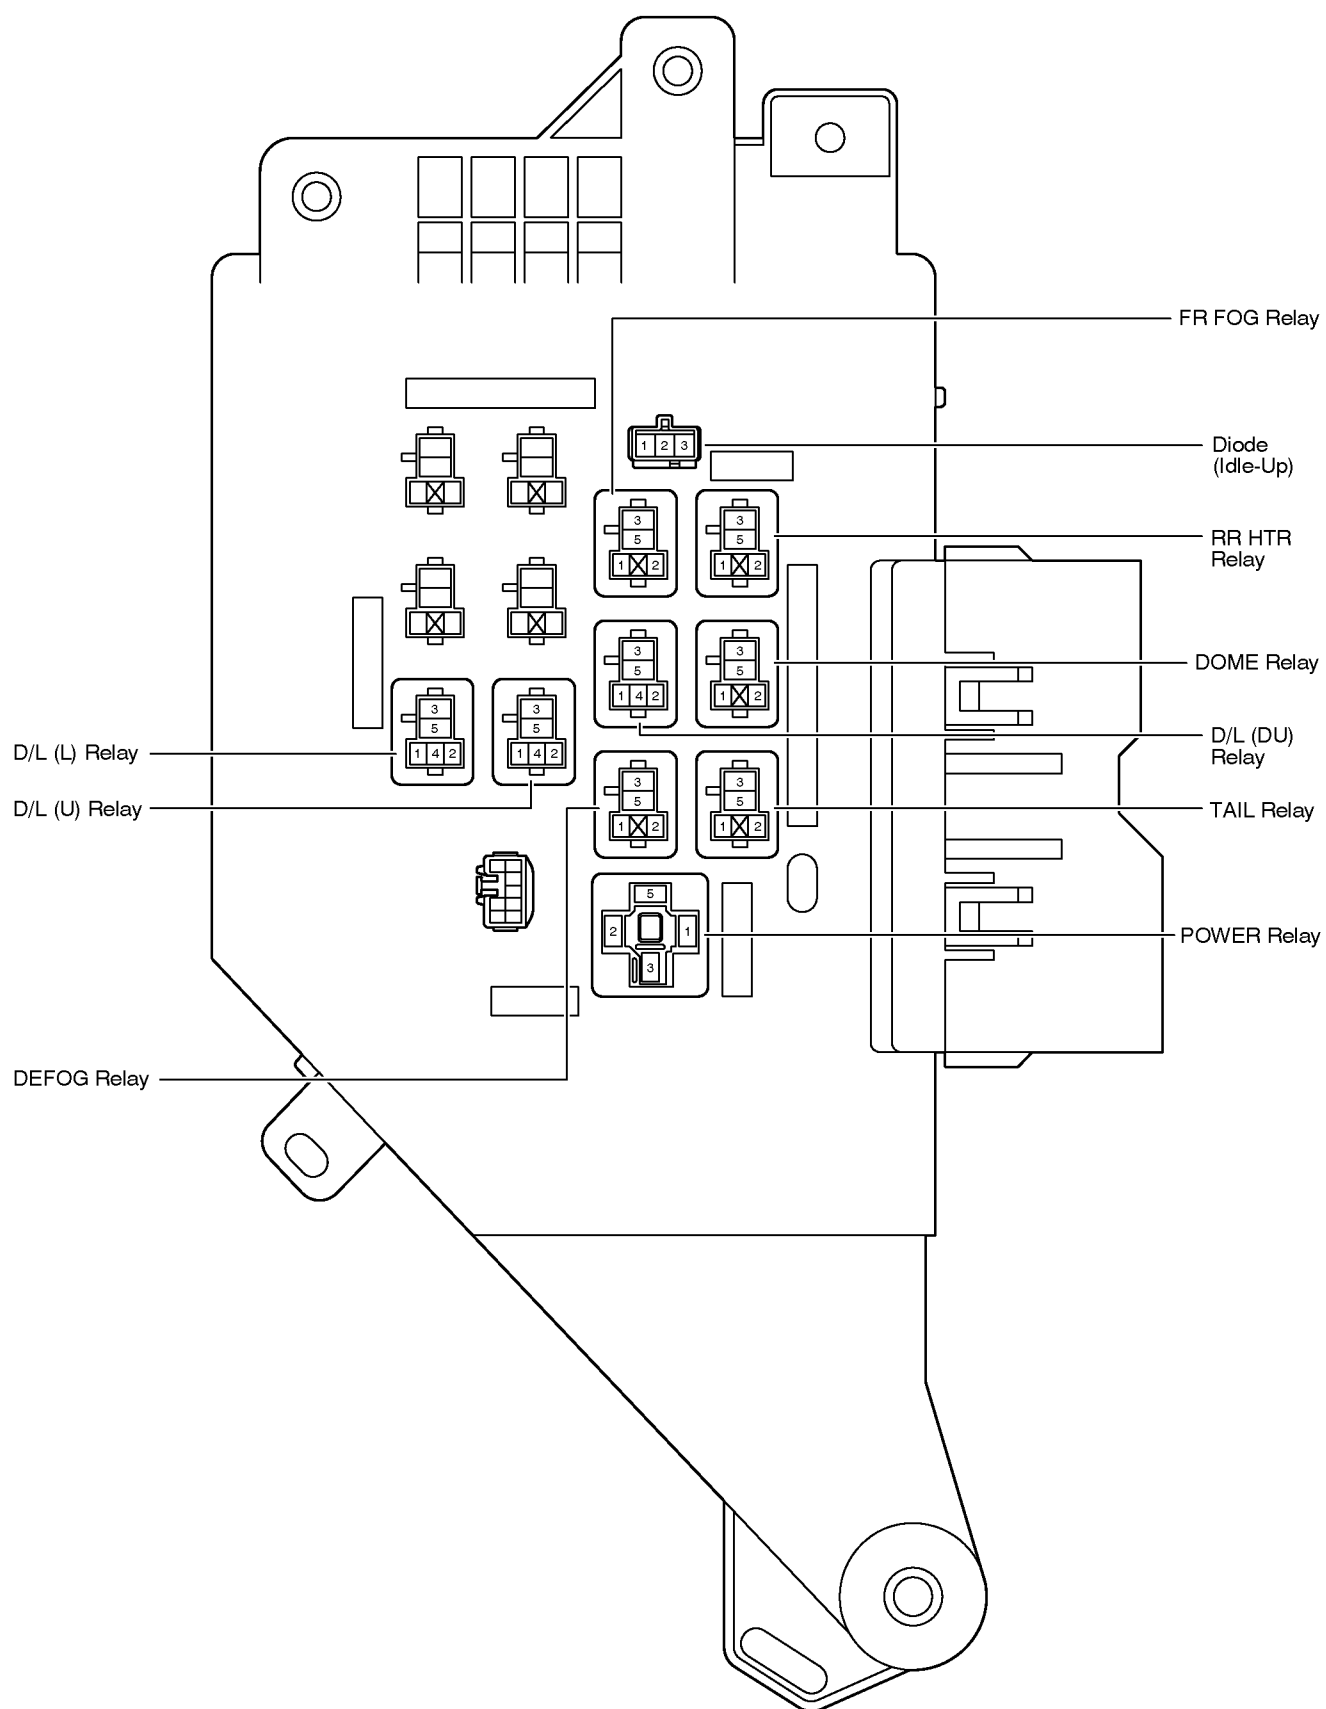

F RELAY LOCATIONS

 : Cowl Side J/B LH	Left Kick Panel (See Page 18)
--	-------------------------------

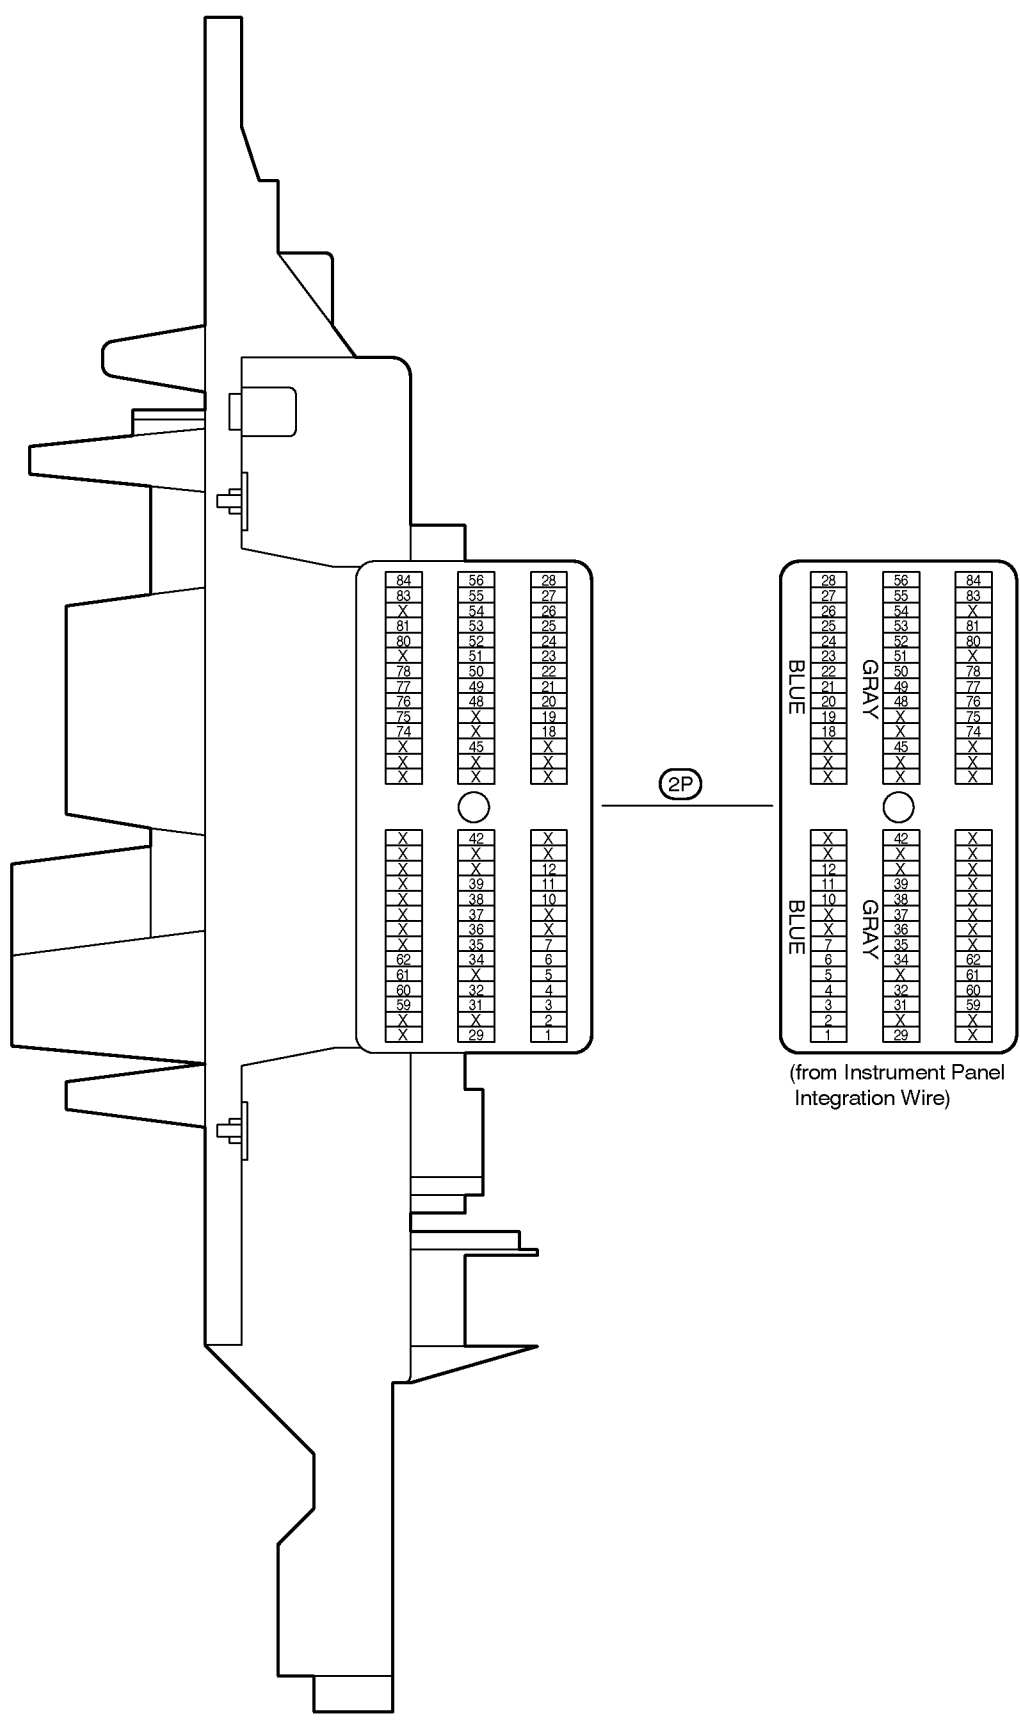

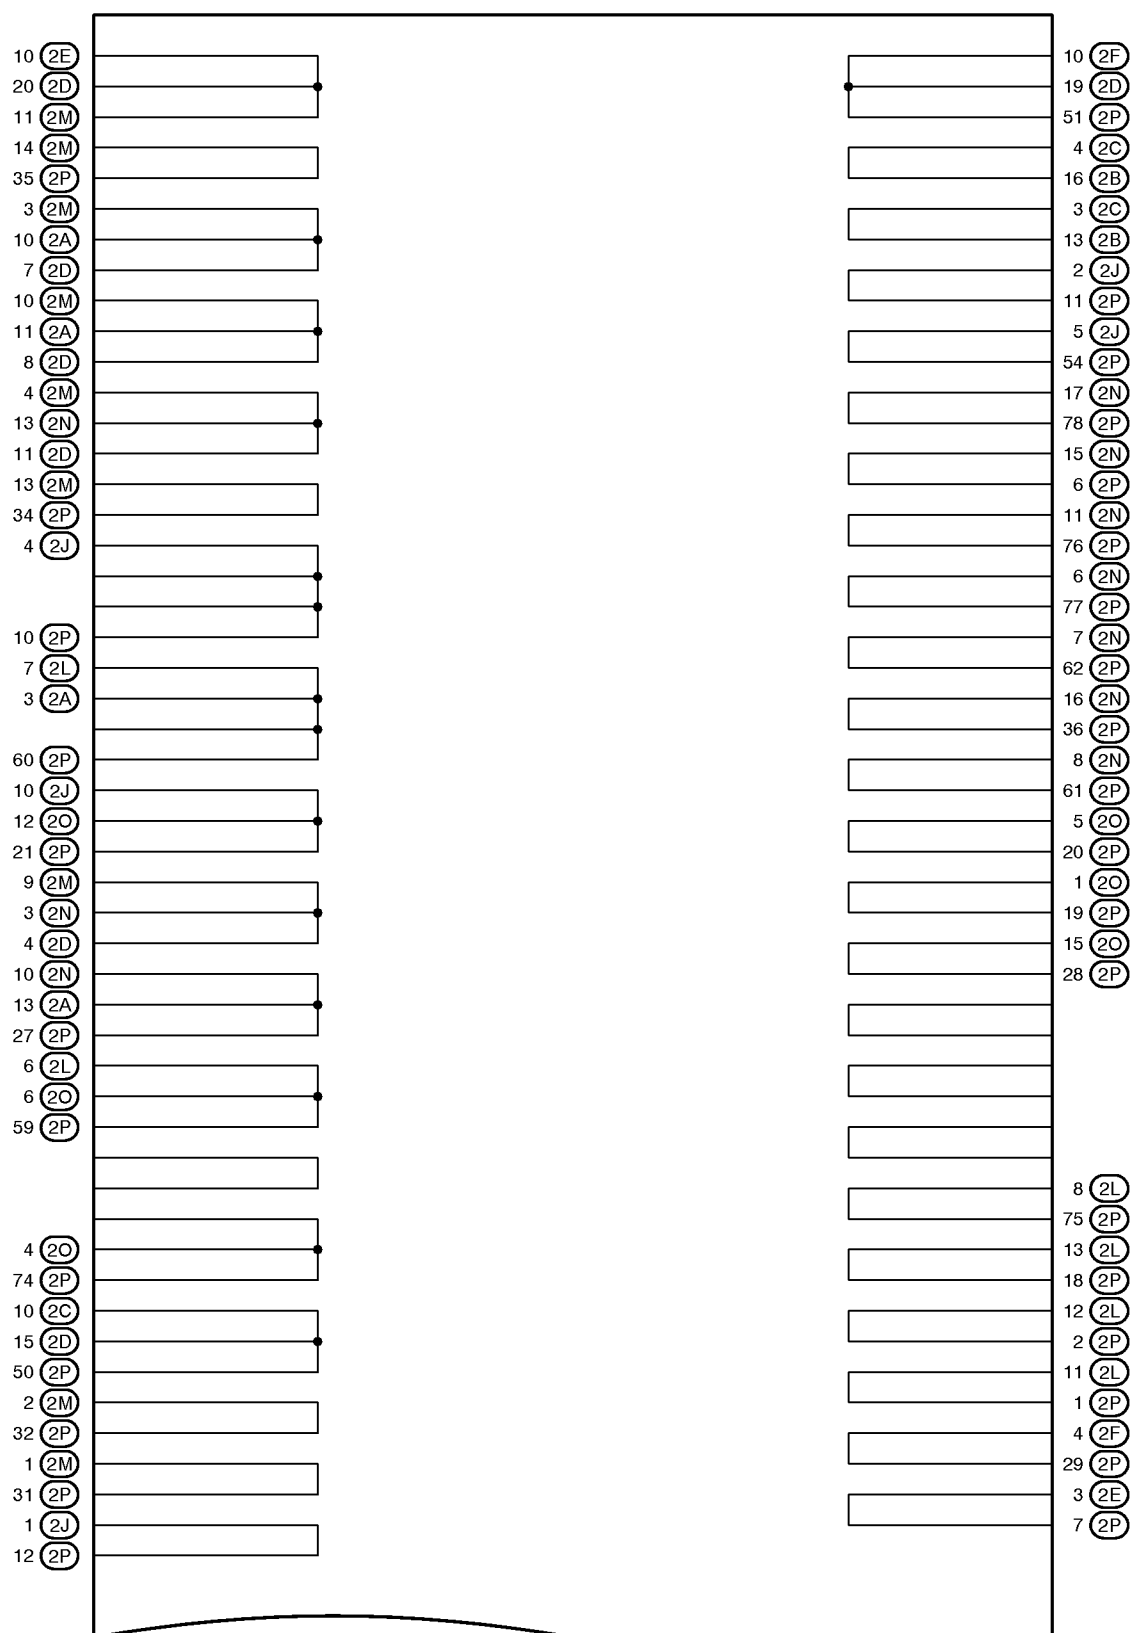
[Cowl Side J/B LH Inner Circuit]

Cont. Next Page

F RELAY LOCATIONS


[Cowl Side J/B LH Inner Circuit]

Cont'd

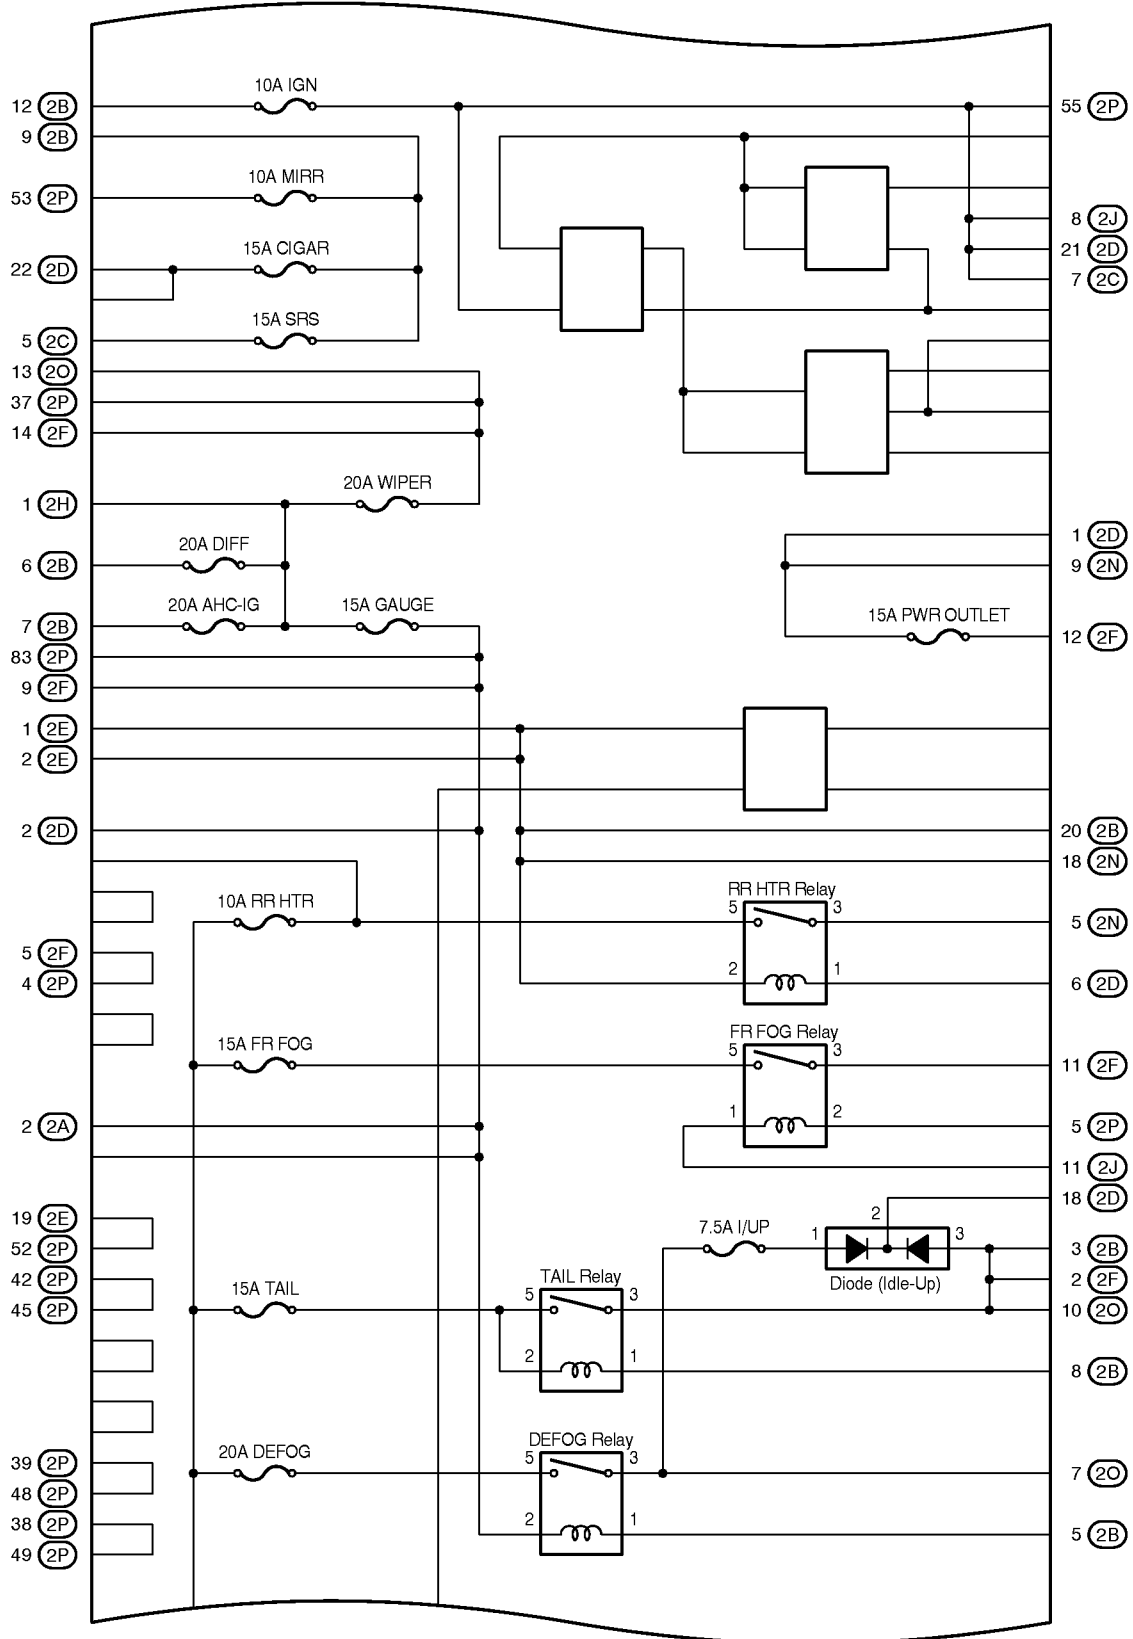

Cont. Next Page


Cont'd

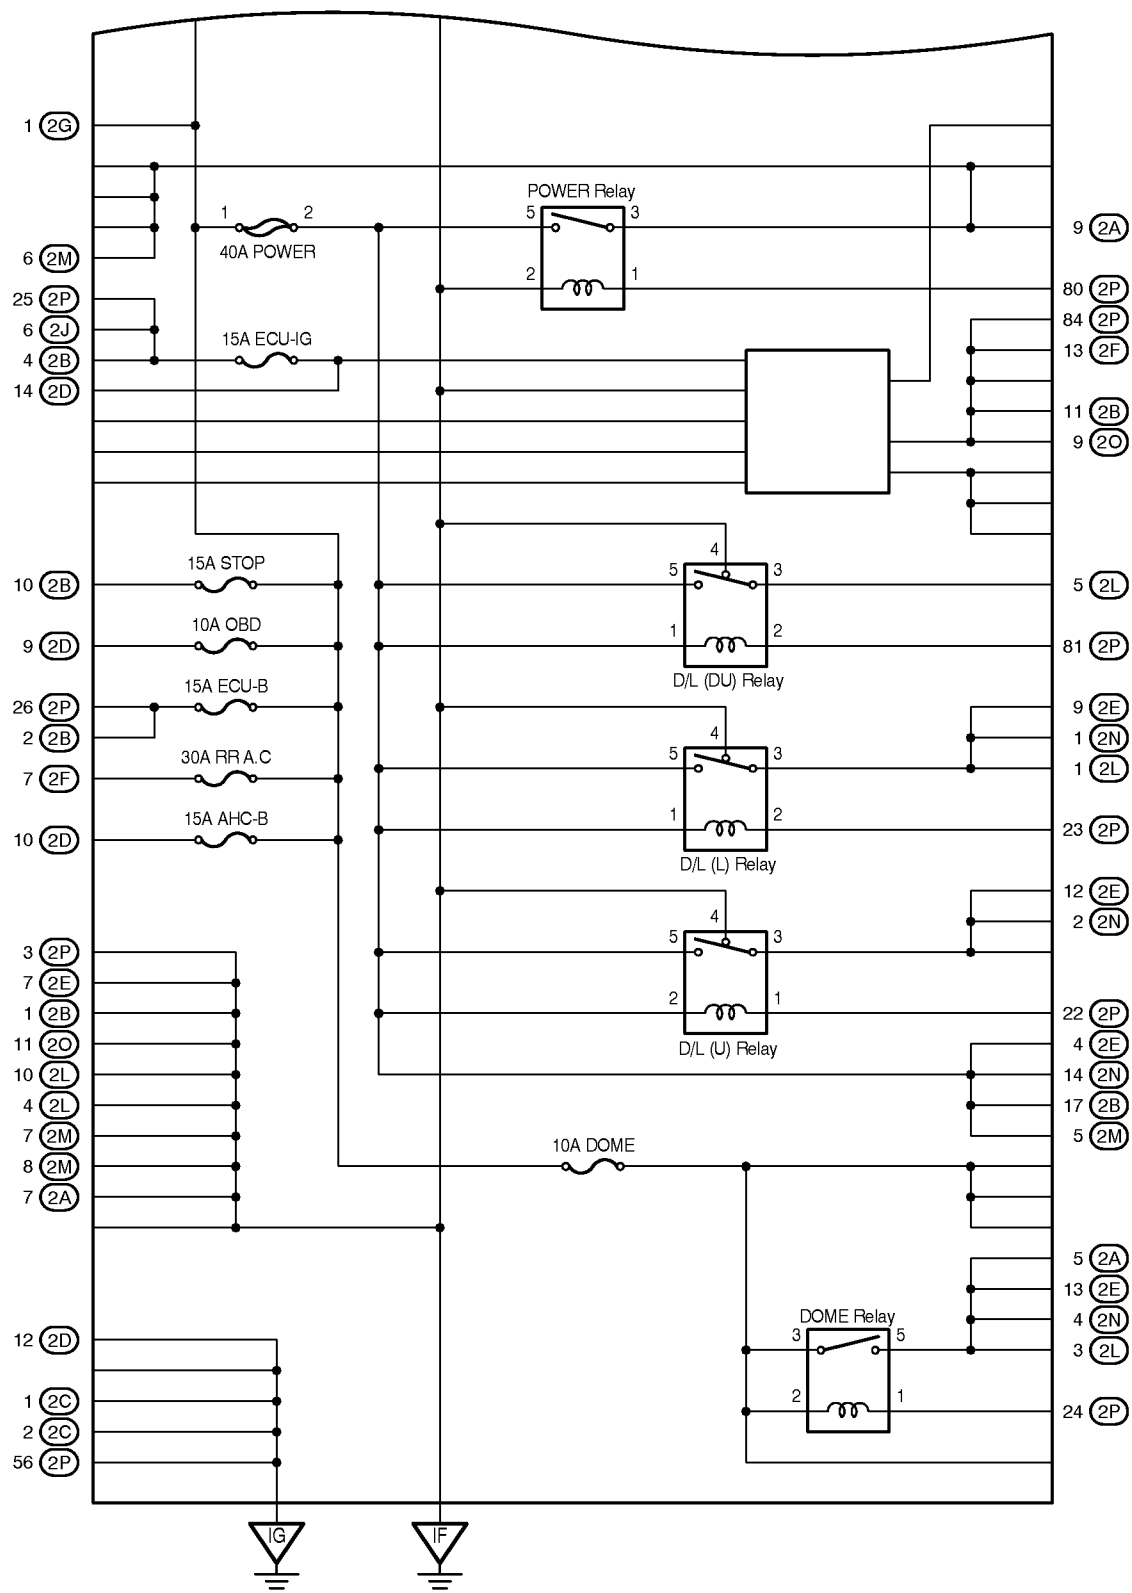


F RELAY LOCATIONS

○ : Cowl Side J/B RH


Right Kick Panel (See Page 18)

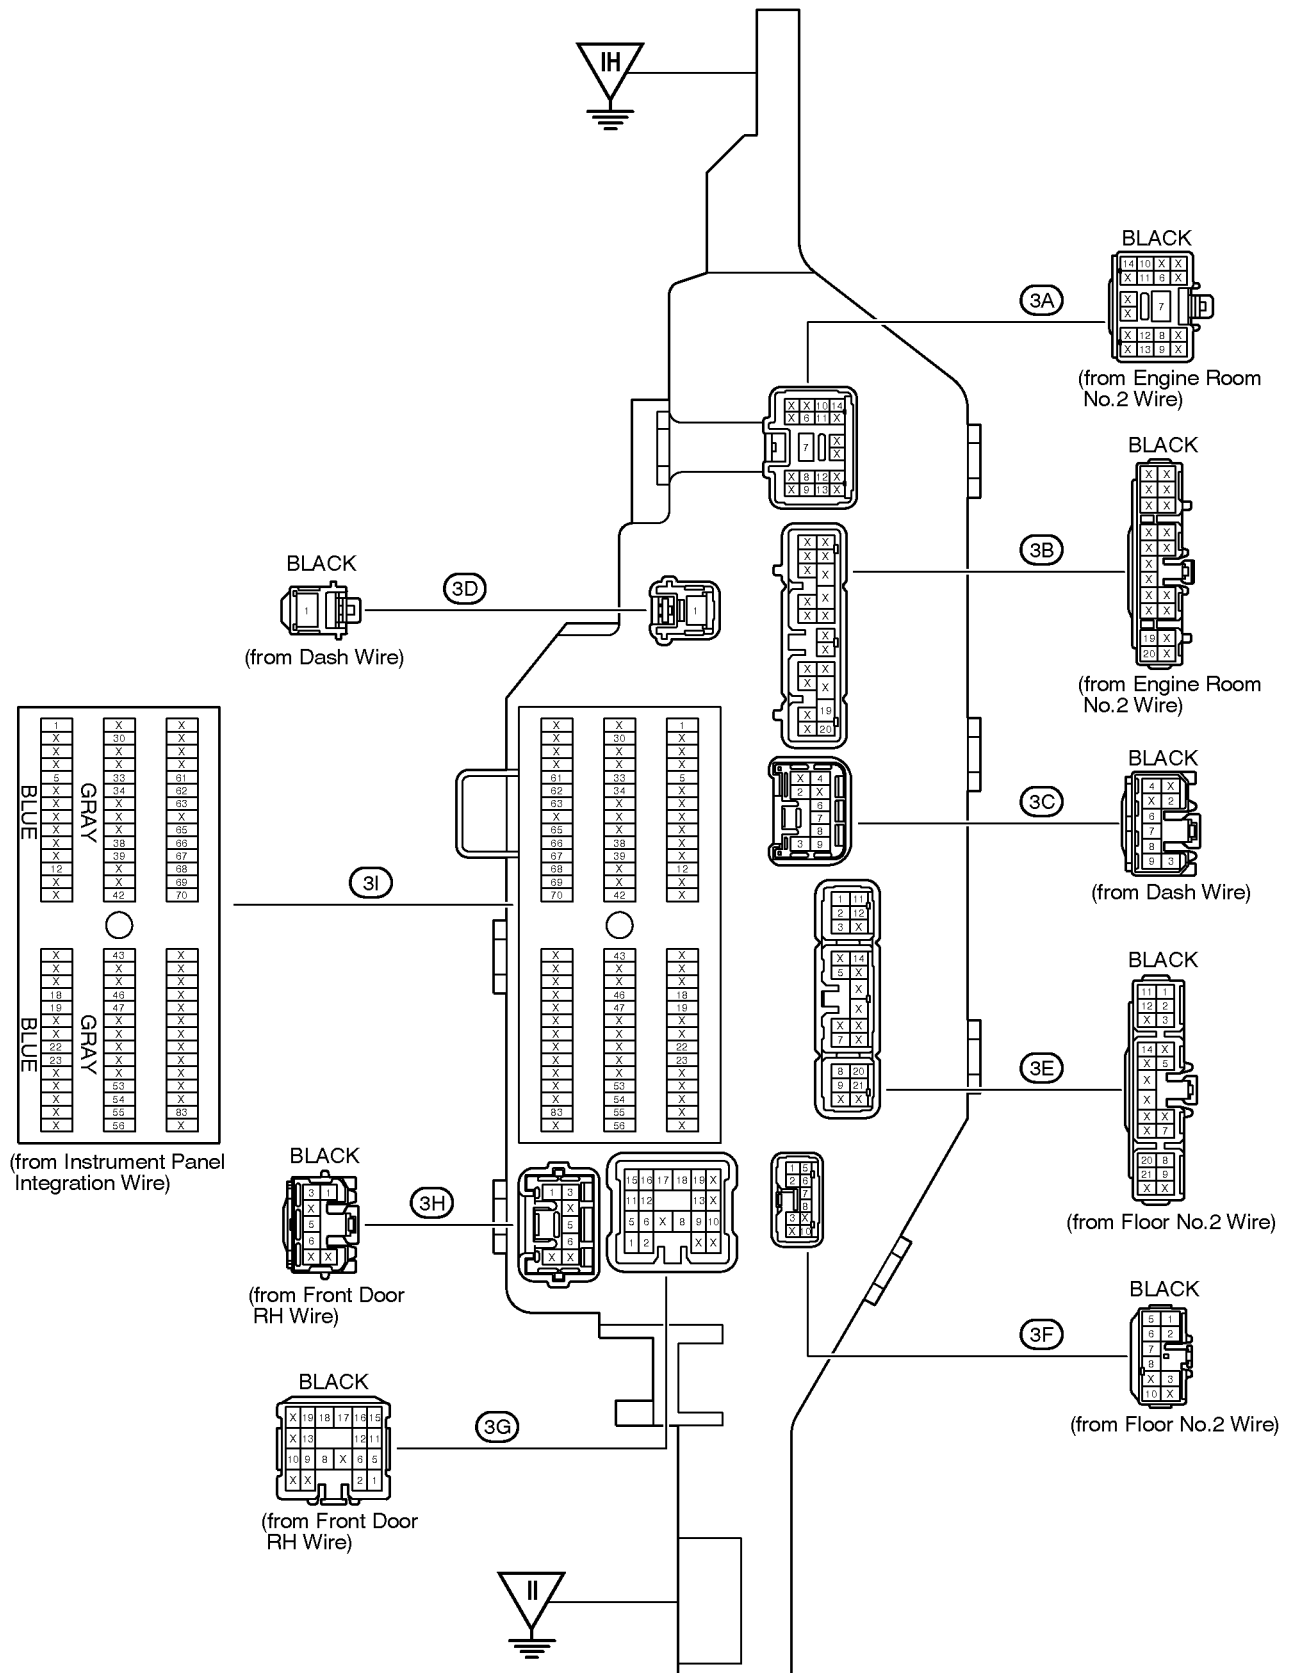

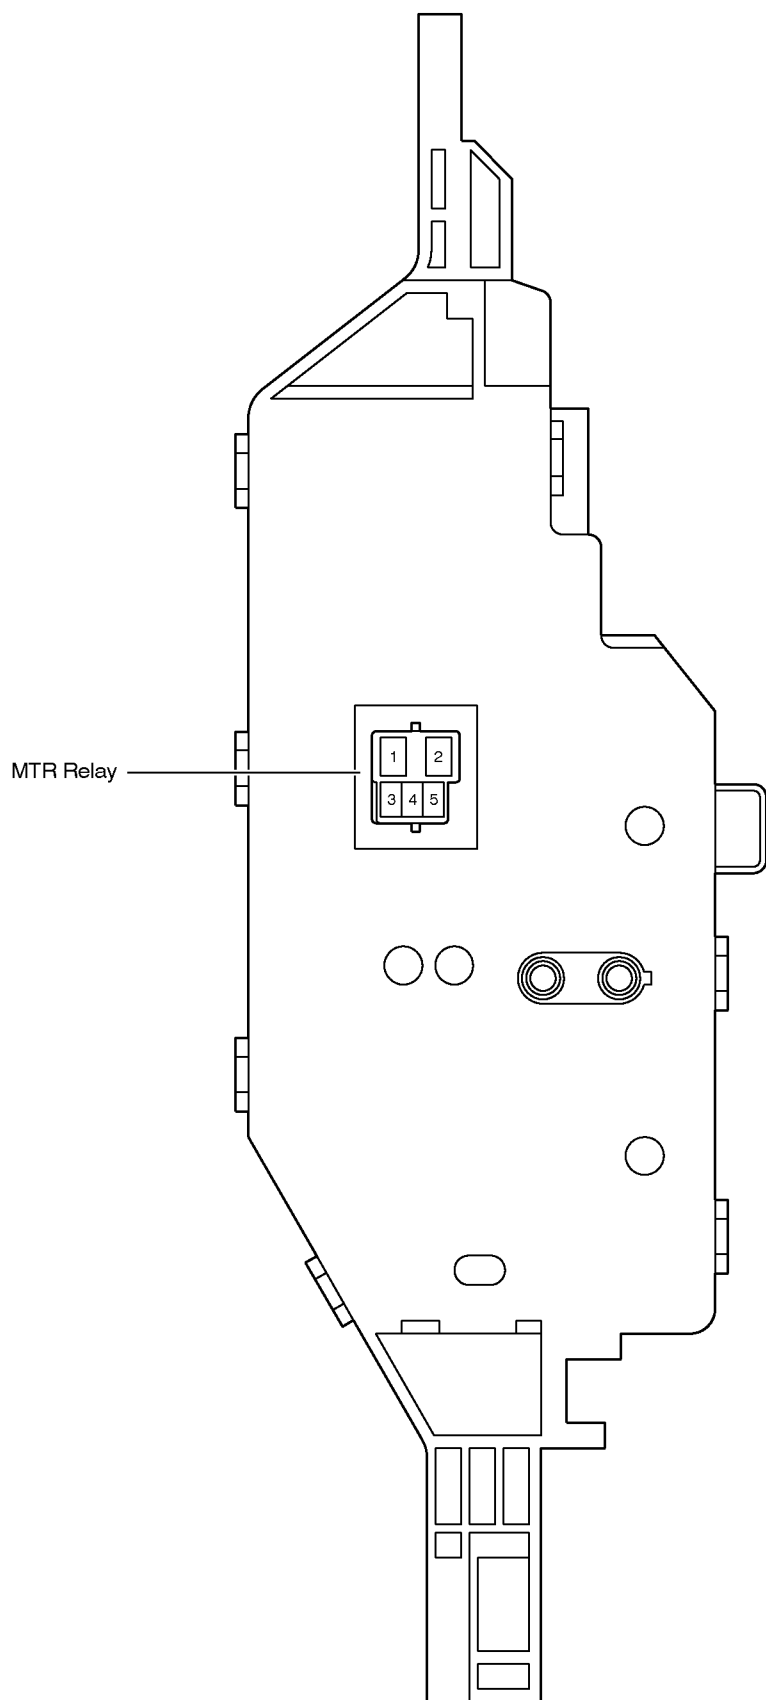


F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

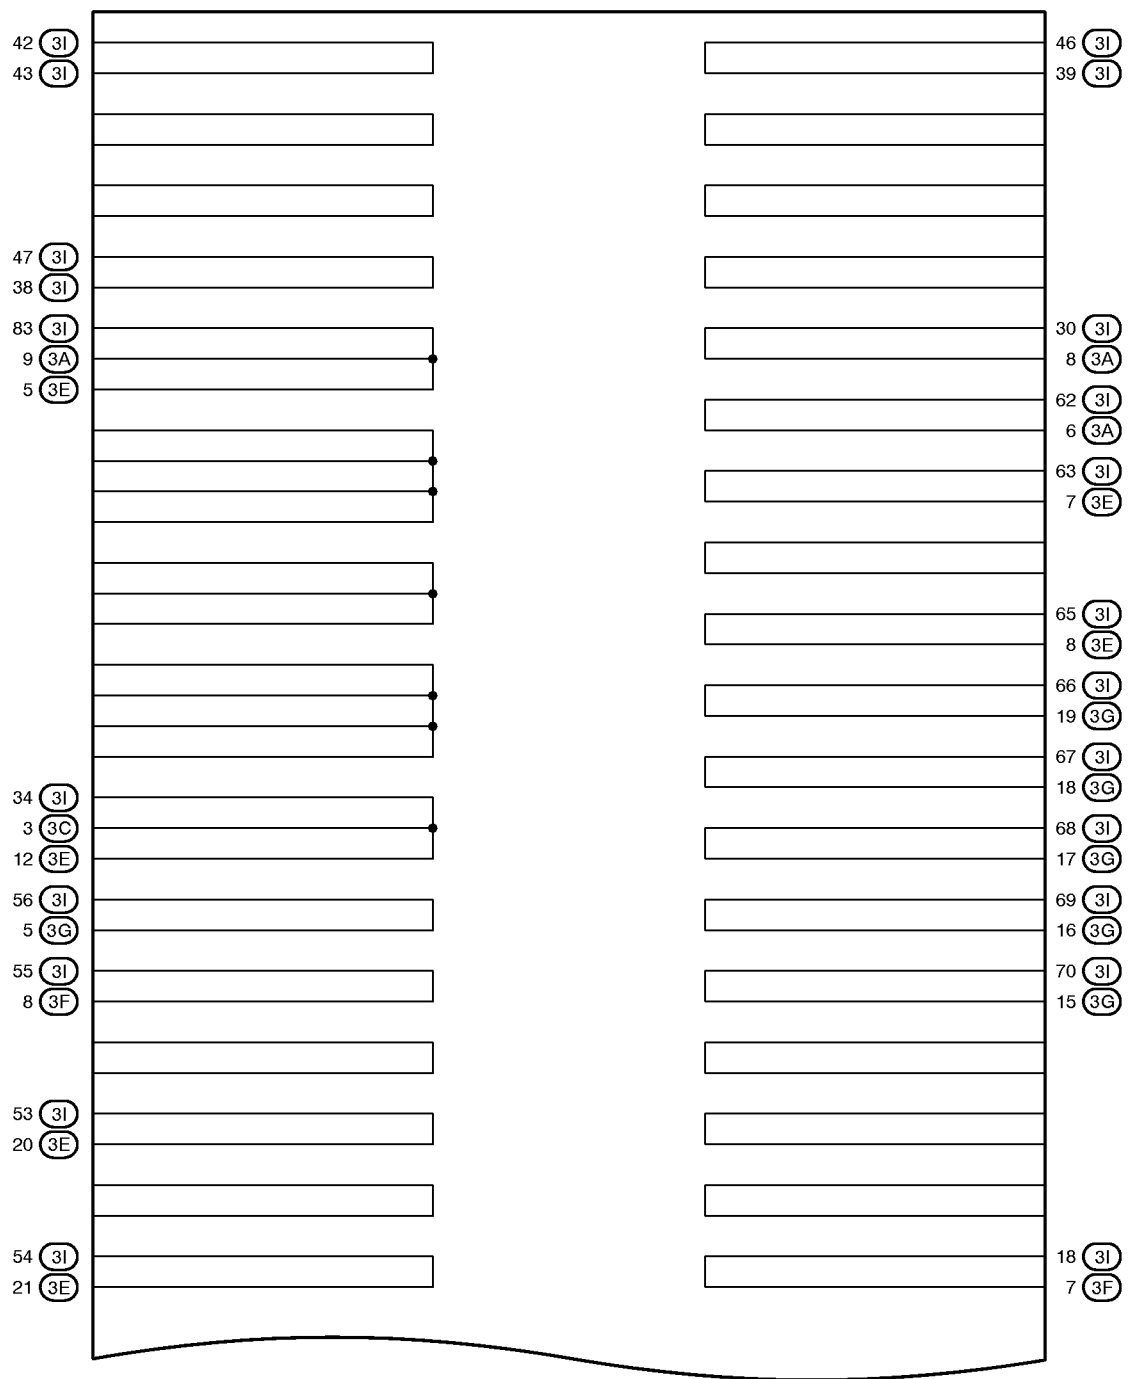

Cont. Next Page

Cont'd

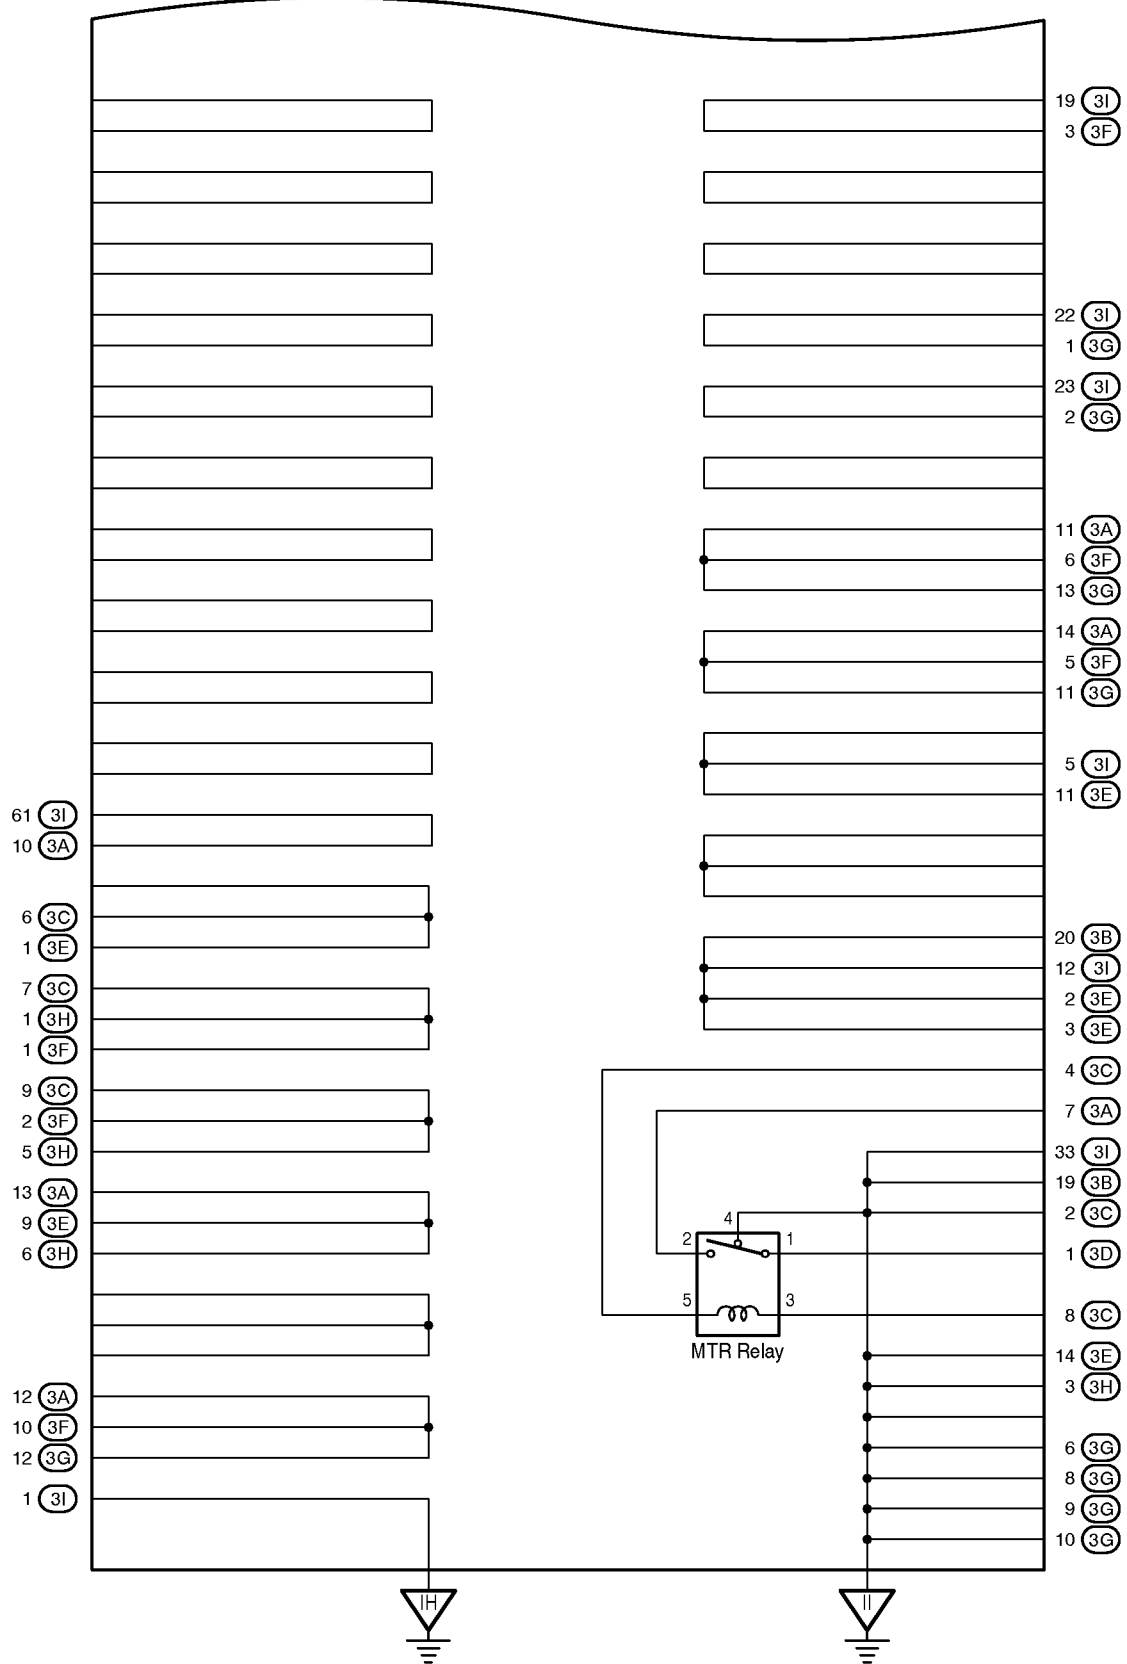

F RELAY LOCATIONS

Fusible Link Block

Near the Battery (See Page 18)

