

<b>DTC</b>	<b>P1566/54</b>	<b>Input Signal Circuit</b>
------------	-----------------	-----------------------------

## CIRCUIT DESCRIPTION

See page [DI-670](#).

DTC No.	Detection Item	Trouble Area
P1566/ 54	• Input signal abnormal.	• ECM

## INSPECTION PROCEDURE

Check and replace ECM (See page <a href="#">IN-33</a> ).
--