


## CRUISE MAIN Indicator Light Circuit

### CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.


### WIRING DIAGRAM

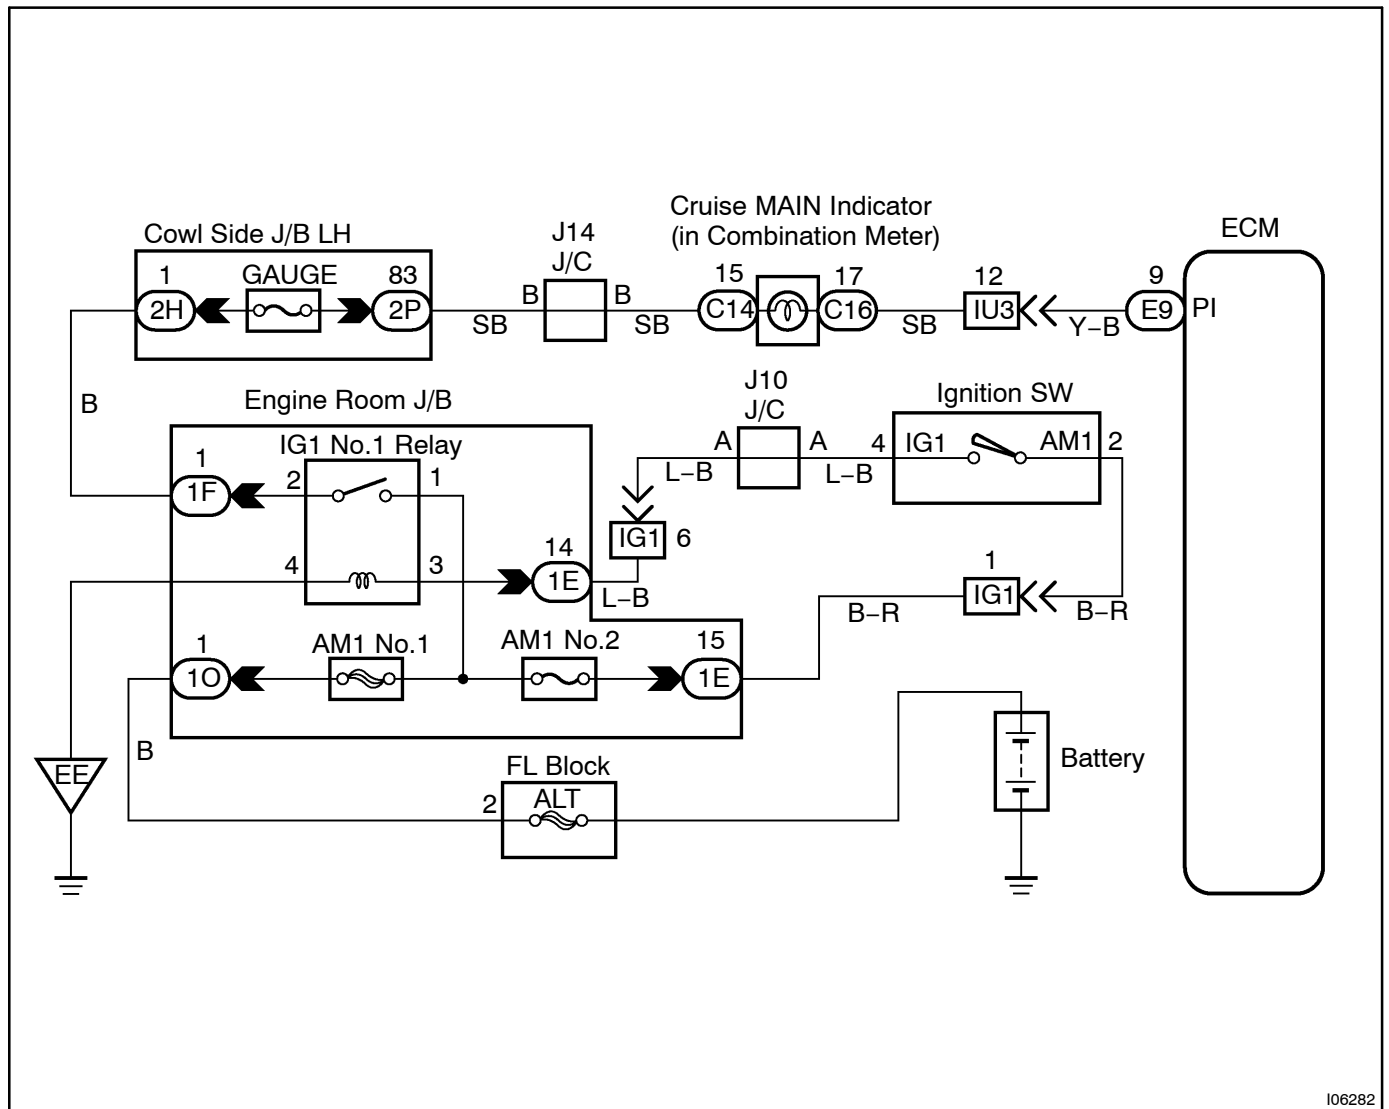

I06282

# INSPECTION PROCEDURE

1	Check voltage between terminals PI and GND of ECM connector.
---	--

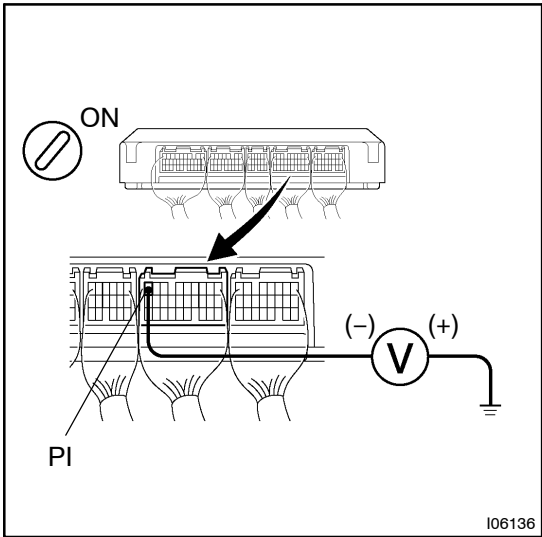

## PREPARATION:

Tun ignition switch ON.

## CHECK:

Measure voltage between terminals PI and GND of ECM connector when main switch on and off.

## OK:

Switch position	Voltage
OFF	10 - 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-668](#)).

NG

2	Check combination meter (See page <a href="#">BE-72</a> ).
---	--

NG

Replace combination meter.

OK

Check and replace ECM (See page [IN-33](#)).