

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Circuit Inspection	Trouble Area
P0500/ 21,23 (DI-669)	Vehicle Speed Signal Abnormal	<ul style="list-style-type: none"> • Harness or connector between ECM and vehicle speed sensor • Vehicle speed sensor • ECM
P1520/ 52 (DI-670)	Short in Stop Light Switch Circuit	<ul style="list-style-type: none"> • Stop light switch • Harness or connector between ECM and stop light switch circuit • ECM
P1565/ 32 (DI-674)	Short in Cruise Control Switch Circuit	<ul style="list-style-type: none"> • Cruise control switch • Harness or connector between ECM and cruise control switch circuit • ECM
P1566/ 54 (DI-677)	Input Signal Circuit	<ul style="list-style-type: none"> • ECM