



## INSTALLATION

### 1. INSTALL FUEL PRESSURE REGULATOR

- Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.
- While turning the pressure regulator left and right, install it to the delivery pipe.
- Install the pressure regulator with the 2 bolts.

**Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)**

- Connect these hoses to the pressure regulator:
  - Vacuum sensing hose to intake air resonator
  - Fuel return hose

### 2. CHECK FOR FUEL LEAKS (See page [SF-1](#))

### 3. INSTALL V-BANK COVER