

## REMOVAL


### 1. REMOVE V-BANK COVER

### 2. REMOVE FUEL PRESSURE REGULATOR

- (a) Disconnect these hoses from the pressure regulator:
- Vacuum sensing hose from intake air resonator
  - Fuel return hose

### CAUTION:

**Put a shop towel under the pressure regulator.**

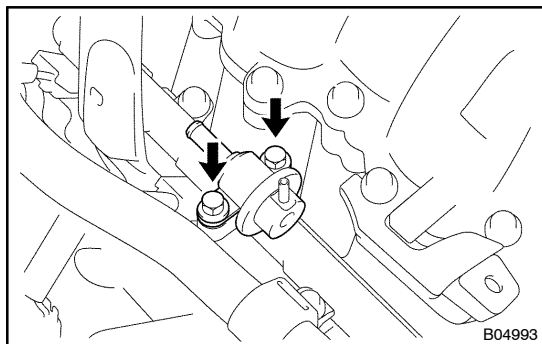

- (b) Remove the 2 bolts, and pull out the pressure regulator.  
(c) Remove the O-ring from the pressure regulator.