


## INSTALLATION

### 1. INSTALL STARTER

- (a) Install the engine wire protector to the starter with the bolt.  
**Torque: 9.81 N·m (100 kgf·cm, 84 in·lbf)**
- (b) Connect the starter wire with the nut.  
**Torque: 9.81 N·m (100 kgf·cm, 84 in·lbf)**
- (c) Connect the starter connector.
- (d) Connect the starter to the cylinder block.
- (e) Connect the engine wire with the bolt.

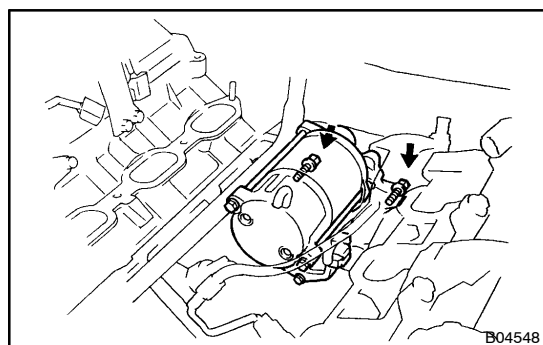

- (f) Install the starter with the 2 bolts.  
**Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)**
2. **INSTALL INTAKE MANIFOLD ASSEMBLY**  
(See page [EM-57](#))
3. **INSTALL INTAKE AIR CONNECTOR**
4. **CONNECT ACCELERATOR CABLE**
5. **INSTALL V-BANK COVER**