

## PROBLEM SYMPTOMS TABLE

### IGNITION SWITCH:

This system uses the body control system, so check the body control system before you proceed with troubleshooting(See page [DI-696](#)).

Symptom	Suspect Area	See page
Ignition switch is not set to each position.	3. Ignition switch 4. Power source circuit	<a href="#">BE-26</a> –

### IGNITION KEY ILLUMINATION:

This system uses the body control system, so check the body control system before you proceed with troubleshooting(See page [DI-696](#)).

Symptom	Suspect Area	See page
Ignition key illumination does not lights up.	1. Bulb 2. Instrument Panel ECU 3. Wire Harness	– <a href="#">DI-696</a> –

### KEY UNLOCK WARNING SWITCH:

This system uses the body control system, so check the body control system before you proceed with troubleshooting(See page [DI-696](#)).

Symptom	Suspect Area	See page
Key unlock warning system does not operate. (The buzzer does not sound when the driver's door is opened with the ignition OFF and key inserted)	1. Key Unlock Warning Switch 2. Door Courtesy Switch 3. Wire Harness	<a href="#">BE-26</a> <a href="#">BE-50</a> –
Key unlock warning system does not operate. (The buzzer sounds when the ignition key is ACC or ON)	1. Ignition Switch 2. Wire Harness	<a href="#">BE-26</a> –

### HEADLIGHT AND TAILLIGHT SYSTEM:

This system uses the body control system, so check the body control system before you proceed with troubleshooting(See page [DI-696](#)).

Symptom	Suspect Area	See page
"Automatic light control system" does not operate.	1. Automatic Light Control Sensor 2. Light Control Switch 3. Door Courtesy Switch 4. Wire Harness	<a href="#">BE-32</a> <a href="#">BE-32</a> <a href="#">BE-50</a> –
Auto turn-off system does not operate when the driver's door is opened.	1. Drivers Door Courtesy Switch	<a href="#">BE-50</a>
Auto turn-off system: Headlight and taillight do not come on.	1. Instrument Panel ECU 2. Wire Harness	<a href="#">DI-696</a> –
Auto turn-off system: Headlight and taillight stay on.	1. Instrument Panel ECU 2. Wire Harness	<a href="#">DI-696</a> –
Only one headlight comes on.	1. Daytime Running Light No.2, 3, 4 Relay 2. Daytime Running Light Main Relay 3. Bulb 4. Wire Harness	<a href="#">BE-32</a> <a href="#">BE-32</a> – –
"LO-Beam" does not light (All).	1. Headlight Control Relay 2. Wire Harness	<a href="#">BE-32</a> –
"LO-Beam" does not light (One side).	1. Bulb 2. H-LP L-LWR Fuse 3. H-LP R-LWR Fuse 4. Wire Harness	– – – –
"HI-Beam" does not light (All).	1. Headlight Dimmer Switch 2. Daytime Running Light Main Relay 3. Wire Harness	<a href="#">BE-32</a> <a href="#">BE-32</a> –

## BODY ELECTRICAL – BODY ELECTRICAL SYSTEM

"HI-Beam" does not light (One side).	1. Bulb 2. H-LP L-UPR Fuse 3. H-LP R-UPR Fuse 4. Daytime Running Light No.3 Relay 5. Wire Harness	- - - <a href="#">BE-32</a> -
"Flash" does not light.	1. Headlight Dimmer Switch 2. Daytime Running Light Main Relay 3. Wire Harness	<a href="#">BE-32</a> <a href="#">BE-32</a> -
Headlight does not come on.	1. Headlight Control Relay 2. Daytime Running Light Main Relay 3. Daytime Running Light No.2, 3, 4 Relay 4. Headlight Dimmer Switch 5. Light Control Switch 6. Wire Harness 7. Bulb	<a href="#">BE-32</a> <a href="#">BE-32</a> <a href="#">BE-32</a> <a href="#">BE-32</a> <a href="#">BE-32</a> - -
Headlight does not come on with light control switch in HEAD.	1. Light Control Switch 2. Wire Harness	<a href="#">BE-32</a> -
Headlight does not go out with light control switch in OFF.	1. Headlight Control Relay 2. Wire Harness	<a href="#">BE-32</a> -
Headlight flickers.	1. Bulb 2. Wire Harness	- -
Headlight is dark.	1. Bulb 2. Wire Harness	- -
Taillight does not come on with light control switch in TAIL.	1. Taillight Control Relay 2. Light Control Switch 3. Wire Harness	<a href="#">BE-32</a> <a href="#">BE-32</a> -
Taillight does not go out with light control switch in OFF.	1. Taillight Control Relay 2. Light Control Switch 3. Wire Harness	<a href="#">BE-32</a> <a href="#">BE-32</a> -
Headlight does not come on with engine running and light control switch in OFF.	1. ECU-B Fuse 2. GAUGE Fuse 3. Daytime Running Light Main Relay 4. Daytime Running Light No.2, 3, 4 Relay 5. Generator L Terminal 6. Parking Brake Switch 7. Wire Harness	- - <a href="#">BE-32</a> <a href="#">BE-32</a> <a href="#">CH-12</a> <a href="#">BE-79</a> -

**FOG LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Fog light does not light up with light control SW HEAD (Headlight is normal.)	1. FOG Fuse 2. Fog Light Relay 3. Fog Light Switch 4. Wire Harness	- <a href="#">BE-42</a> <a href="#">BE-42</a> -
Fog light does not light up with light control SW HEAD (Headlight does not light).	1. *1 Other Parts 2. Wire Harness	- -
Only one light does not light up.	1. Bulb 2. Wire Harness	- -

\*1: Inspect Headlight System

**TURN SIGNAL AND HAZARD WARNING SYSTEM:**

Symptom	Suspect Area	See page
"Hazard" and "Turn" do not light up.	1. GAUGE Fuse 2. TURN HAZ Fuse 3. Ignition Switch 4. Turn Signal Flasher Relay 5. Wire Harness	– – <a href="#">BE-26</a> <a href="#">BE-46</a> –
Hazard warning light does not light up. (Turn is normal)	1. Hazard Warning Switch 2. Wire Harness	<a href="#">BE-46</a> –
Turn signal does not light up. (Hazard is normal)	1. Turn Signal Switch 2. Wire Harness	<a href="#">BE-46</a> –
Turn signal does not light up in one direction.	1. Turn Signal Switch 2. Wire Harness	<a href="#">BE-46</a> –
Only one bulb does not light up.	1. Bulb 2. Wire Harness	– –

**INTERIOR LIGHT SYSTEM:**

This system uses the body control system, so check the body control system before you proceed with troubleshooting (See page [DI-696](#)).

Symptom	Suspect Area	See page
All the lights do not come ON.	1. DOME Fuse 2. Instrument Panel ECU 3. DOME Relay (Driver Side J/B)	– <a href="#">DI-696</a> <a href="#">BE-12</a>
The light does not come ON when the driver's door is opened.	1. Driver's Door Courtesy Switch 2. Wire Harness	<a href="#">BE-50</a> –
The light does not come ON when the passenger's door is opened.	1. Passenger's Door Courtesy Switch 2. Wire Harness	<a href="#">BE-50</a> –
The light does not come on when the rear-right door is opened.	1. Rear-Right Door Courtesy Switch 2. Wire Harness	<a href="#">BE-50</a> –
The light does not come on when the rear-left door is opened.	1. Rear-Left Door Courtesy Switch 2. Wire Harness	<a href="#">BE-50</a> –
Only one of the bulbs comes ON.	1. Bulb	–
The illumination does not fade out when all the doors are closed.	1. Courtesy Switch 2. Wire Harness 3. Instrument Panel ECU	<a href="#">BE-50</a> – <a href="#">DI-696</a>
The illumination does not fade out immediately when the ignition switch is turned to ACC or ON within 15 seconds after all the doors are closed.	1. Ignition Switch 2. RADIO NO.2 Fuse 3. GAUGE Fuse 4. Instrument Panel ECU 5. Wire Harness	<a href="#">BE-26</a> – – <a href="#">DI-696</a> –
The illumination does not fade out immediately when all the doors are locked within 15 seconds after they are closed.	1. Door Unlock Detection Switch 2. Wire Harness	<a href="#">BE-116</a> –
Room light does not light up. (w/o Sliding Roof)	1. Bulb 2. Room Light 3. Rear Parcel Light 4. Wire Harness	– <a href="#">BE-50</a> <a href="#">BE-50</a> –
Room light does not light up. (w/ Sliding Roof)	1. Bulb 2. Room Light 3. Rear Parcel Light 4. Wire Harness	– <a href="#">BE-50</a> <a href="#">BE-50</a> –

## BODY ELECTRICAL – BODY ELECTRICAL SYSTEM

Front personal light does not light up. (w/o Sliding Roof)	1. Bulb 2. Front Personal Light 3. Room Light 4. Wire Harness	– BE-50 BE-50 –
Front personal light does not light up. (w/ Sliding Roof)	1. Bulb 2. Front Personal Light 3. Room Light 4. Wire Harness	– BE-50 BE-50 –
Rear Room light does not light up.	1. Bulb 2. Rear Room Light 3. Wire Harness	– BE-50 –
Vanity light does not light up.	1. Bulb 2. Vanity Light 3. Wire Harness	– BE-50 –
Glove compartment light does not light up.	1. Bulb 2. Glove Compartment Courtesy Switch 3. Wire Harness	– BE-50 –
Courtesy light does not light up.	1. Bulb 2. Door Courtesy Switch 3. Wire Harness	– BE-50 –

**BACK-UP LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Back-Up Light does not light up.	1. GAUGE Fuse 2. Ignition Switch 3. Wire Harness 4. Bulb	– BE-26 – –
Back-Up Light remains always on.	1. Park/ Neutral Position Switch 2. Wire Harness	DI-213 –
Only one light does not light up.	1. Bulb 2. Wire Harness	– –

**STOP LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Stop light does not light up.	1. STOP Fuse 2. Stop Light Switch 3. Wire Harness	BE-60 –
Stop light always lights up.	1. Stop Light Switch 2. Wire Harness	BE-60 –
Only one light always lights up.	1. Wire Harness	–
Only one light does not light up.	1. Bulb 2. Wire Harness	– –

**HEADLIGHT CLEANER SYSTEM:**

Symptom	Suspect Area	See page
"Headlight Cleaner System" does not operate (All)	1. HEAD CLEANER Fuse 2. WIPER Fuse 3. Ignition Switch 4. Headlight Cleaner Switch 5. Headlight Cleaner Relay 6. Headlight Cleaner Motor 7. Headlight Cleaner Nozzle and Hose 8. Wire Harness	– – BE-26 BE-63 BE-63 BE-63 – –
Washer fluid does not spray.	1. Headlight Cleaner Nozzle and Hose	–

**WIPER AND WASHER SYSTEM:**

This system uses the body control system, so check the body control system before you proceed with troubleshooting (See page [DI-696](#)).

Symptom	Suspect Area	See page
Front wiper and washer do not operate.	1. WIPER Fuse 2. Wiper Switch 3. Wiper Motor 4. Wire Harness	– <a href="#">BE-66</a> <a href="#">BE-66</a> –
Front wiper does not operate in LO, HI or MIST.	1. Wiper Switch 2. Wiper Motor 3. Wire Harness	<a href="#">BE-66</a> <a href="#">BE-66</a> –
Front wiper does not operate in INT.	1. Wiper Switch 2. Wiper Motor 3. Wire Harness	<a href="#">BE-66</a> <a href="#">BE-66</a> –
Front washer motor does not operate.	1. WASHER Fuse 2. Washer Switch 3. Washer Motor 4. Wire Harness	– <a href="#">BE-66</a> <a href="#">BE-66</a> –
Front wiper does not operate when washer switch ON.	1. WASHER Fuse 2. Washer Switch 3. Wiper Motor 4. Wire Harness	– <a href="#">BE-66</a> <a href="#">BE-66</a> –
Rear wiper does not operate.	1. WIPER Fuse 2. Rear Wiper Motor 3. Rear Wiper Switch 4. Rear Wiper Relay 5. Instrument Panel ECU 6. Wire Harness	– <a href="#">BE-66</a> <a href="#">BE-66</a> <a href="#">BE-66</a> <a href="#">DI-696</a> –
Rear wiper does not operate in INT or ON position.	1. Rear Wiper Switch 2. Instrument Panel ECU 3. Wire Harness	<a href="#">BE-66</a> <a href="#">DI-696</a> –
Rear wiper does not return to OFF position.	1. Rear Wiper Motor 2. Wire Harness	<a href="#">BE-66</a> –
Rear Washer Motor does not operate.	1. Rear Washer Motor 2. Rear Washer Switch 3. Wire Harness	<a href="#">BE-66</a> <a href="#">BE-66</a> –
Washer fluid does not operate.	1. Washer Hose and Nozzle	–

\*1: Inspect wiper arm and blade set positions.

**Meter gauges and illumination:****COMBINATION METER**

Symptom	Suspect Area	See page
Tachometer, Fuel Gauge and Engine Coolant Temperature Gauge do not operate.	1. GAUGE Fuse 2. Meter Circuit Plate 3. Wire Harness	– <a href="#">BE-74</a> –
Speedometer does not operate.	1. Speed Sensor 2. Meter Circuit Plate 3. Wire Harness	<a href="#">BE-79</a> <a href="#">BE-74</a> –
Tachometer does not operate.	1. Igniter 2. Meter Circuit Plate 3. Wire Harness	<a href="#">IG-1</a> <a href="#">BE-74</a> –

## BODY ELECTRICAL – BODY ELECTRICAL SYSTEM

Fuel Gauge does not operate or abnormal operation.	1. Fuel Receiver Gauge 2. Fuel Sender Gauge 3. Meter Circuit Plate 4. Wire Harness	BE-79 BE-79 BE-74 –
Oil Pressure Gauge does not operate.	1. Oil Pressure Receiver Gauge 2. Oil Pressure Sender Gauge 3. Meter Circuit Plate 4. Wire Harness	BE-79 BE-79 BE-74 –
Voltmeter does not operate.	1. Voltmeter 2. Meter Circuit Plate 3. Wire Harness	BE-79 BE-74 –
Engine Coolant Temperature Gauge does not operate or abnormal operation	1. Engine Coolant Temperature Receiver Gauge 2. Engine Coolant Temperature Sender Gauge 3. Meter Circuit Plate 4. Wire Harness	BE-79 BE-79 BE-74 –
All illumination lights do not light up.	1. Light Control Rheostat 2. Wire Harness	BE-79 –
Brightness does not change even when rheostat turned.	1. Bulb 2. Wire Harness	– –
Only one illumination light does not light up.	1. Bulb 2. Wire Harness	– –

**Warning lights:****COMBINATION METER**

Symptom	Suspect Area	See page
Warning lights do not light up. (Except Discharge, Open Door and SRS)	1. GAUGE Fuse 2. Meter Circuit Plate 3. Wire Harness	– BE-74 –
Fuel Level warning light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Fuel Sender Gauge 4. Wire Harness	– BE-74 BE-79 –
ABS warning light does not light up.	1. Bulb 2. ABS ECU 3. Wire Harness	– DI-324 –
Seat Belt warning light does not light up.	1. Bulb 2. Seat Belt Buckle Switch 3. Wire Harness 4. Body ECU	– BE-79 BE-79 DI-696
Discharge warning light does not light up.	1. IGN Fuse 2. Bulb 3. Wire Harness 4. Generator	– – – CH-2
Brake warning light does not light up.	1. Bulb 2. Parking Brake Switch 3. Brake Fluid Level Warning Switch 4. Bulb Check Relay 5. Meter Circuit Plate 6. Wire Harness	– BE-79 BE-79 BE-79 BE-74 –
SRS Warning light does not light up.	1. ECU-B Fuse 2. Bulb 3. Airbag Sensor Assembly 4. Meter Circuit Plate 5. Wire Harness	– – DI-447 BE-74 –

Open Door warning light does not light up.	1. DOME Fuse 2. Bulb 3. Door Courtesy Switch 4. Meter Circuit Plate 5. Wire Harness	– – <a href="#">BE-50</a> <a href="#">BE-74</a> –
A/T Oil Temperature warning light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Wire Harness 4. ECM	– <a href="#">BE-79</a> <a href="#">BE-74</a> <a href="#">DI-1</a>
Washer Level warning light does not light up.	1. Bulb 2. Washer Fluid Level Warning Switch 3. Meter Circuit Plate 4. Wire Harness	– <a href="#">BE-79</a> <a href="#">BE-74</a>

**Indicator lights:****COMBINATION METER**

Symptom	Suspect Area	See page
O/D OFF indicator light does not light up.	1. Bulb 2. O/D OFF Switch 3. Meter Circuit Plate 4. Wire Harness	– <a href="#">DI-217</a> <a href="#">BE-74</a> –
Cruise Control indicator light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Wire Harness 4. ECM	– <a href="#">BE-74</a> <a href="#">DI-1</a>
High beam indicator light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Wire Harness 4. Headlight System	– <a href="#">BE-74</a> – <a href="#">BE-28</a>
Turn indicator light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Wire Harness 4. Turn Signal and Hazard Warning System	– <a href="#">BE-74</a> – <a href="#">BE-45</a>
Shift indicator lights do not light up.	1. Bulb 2. Meter Circuit Plate 3. Park/Neutral Position Switch 4. Wire Harness	– <a href="#">BE-74</a> <a href="#">DI-213</a> –
Only one shift indicator does not light up.	1. Bulb 2. Meter Circuit Plate	– <a href="#">BE-74</a>
Malfunction indicator light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Wire Harness 4. ECM	– <a href="#">BE-74</a> – <a href="#">DI-1</a>
ECT PWR indicator light does not light up.	1. Bulb 2. ECT Pattern Select Switch 3. Meter Circuit Plate 4. Wire Harness 5. ECT System	– – <a href="#">BE-74</a> – <a href="#">DI-162</a>
2nd Start ETCS indicator light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Wire Harness 4. ECM	– <a href="#">BE-74</a> – <a href="#">DI-1</a>

## BODY ELECTRICAL – BODY ELECTRICAL SYSTEM

Rear Diff. Lock indicator light does not light up.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Meter Circuit Plate</li> <li>3. Rear Diff. Lock Detection Switch</li> <li>4. Wire Harness</li> </ol>	<p>–</p> <p><a href="#">BE-74</a></p> <p><a href="#">SA-160</a></p> <p>–</p>
Center Diff. Lock indicator light does not light up.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Meter Circuit Plate</li> <li>3. Transfer 4WD Position Detection Switch</li> <li>4. Wire Harness</li> </ol>	<p>–</p> <p><a href="#">BE-74</a></p> <p><a href="#">TR-49</a></p> <p>–</p>
Indicator lights do not light up. (Except Turn, Hi-beam and security)	<ol style="list-style-type: none"> <li>1. GAUGE Fuse</li> <li>2. Wire Harness</li> </ol>	<p>–</p> <p>–</p>

**DEFOGGER SYSTEM:**

Symptom	Suspect Area	See page
All defogger systems do not operate.	<ol style="list-style-type: none"> <li>1. DEFOG M-Fuse</li> <li>2. Defogger Relay</li> <li>3. Defogger Switch (Integration Control Panel Assembly)</li> <li>4. Wire Harness</li> </ol>	<p>–</p> <p><a href="#">BE-91</a></p> <p><a href="#">BE-91</a></p> <p>–</p>
Rear window defogger does not operate.	<ol style="list-style-type: none"> <li>1. Defogger Wire</li> <li>2. Choke Coil</li> <li>3. Wire Harness</li> </ol>	<p><a href="#">BE-91</a></p> <p>–</p> <p>–</p>
Mirror defogger does not operate.	<ol style="list-style-type: none"> <li>1. MIR/HTR Fuse</li> <li>2. Mirror Heater Relay</li> <li>3. Mirror Defogger</li> <li>4. Wire Harness</li> </ol>	<p>–</p> <p><a href="#">BE-91</a></p> <p><a href="#">BE-91</a></p> <p>–</p>

**POWER WINDOW CONTROL SYSTEM:**

Symptom	Suspect Area	See page
Power window abnormal operation	TROUBLESHOOTING	<a href="#">BE-94</a>

**POWER DOOR LOCK CONTROL SYSTEM:**

Symptom	Suspect Area	See page
All the doors cannot be locked or unlocked. (Power Window Control System is normal.)	<ol style="list-style-type: none"> <li>1. POWER Fuse</li> <li>2. Door Lock Control Switch</li> <li>3. Door Relay (L), (U)</li> <li>4. Wire Harness</li> <li>5. Body ECU</li> </ol>	<p>–</p> <p><a href="#">BE-116</a></p> <p><a href="#">BE-116</a></p> <p>–</p> <p><a href="#">DI-696</a></p>
Only one side door lock control does not operate.	<ol style="list-style-type: none"> <li>1. Door Lock Motor</li> <li>2. Wire Harness</li> </ol>	<p><a href="#">BE-116</a></p> <p>–</p>
Door key related function does not operate.	<ol style="list-style-type: none"> <li>1. Door Key Lock and Unlock Switch</li> <li>2. Wire Harness</li> <li>3. Body ECU</li> </ol>	<p><a href="#">BE-116</a></p> <p>–</p> <p><a href="#">DI-696</a></p>
Key confinement prevention function does not operate.	<ol style="list-style-type: none"> <li>1. Key Unlock Warning Switch</li> <li>2. Door Courtesy Switch</li> <li>3. Wire Harness</li> </ol>	<p><a href="#">BE-26</a></p> <p><a href="#">BE-50</a></p> <p>–</p>

**POWER SEAT CONTROL SYSTEM:**

Symptom	Suspect Area	See page
Both Driver and Passenger Power seats do not operate. (Door lock does not operate.)	<ol style="list-style-type: none"> <li>1. ALT M-Fuse</li> <li>2. Wire Harness</li> </ol>	<p>–</p> <p>–</p>
Driver's seat does not operate.	<ol style="list-style-type: none"> <li>1. POWER Fuse</li> <li>2. Power Seat Switch (D)</li> <li>3. Wire Harness</li> </ol>	<p>–</p> <p><a href="#">BE-126</a></p> <p>–</p>
Passenger's seat does not operate.	<ol style="list-style-type: none"> <li>1. POWER Fuse</li> <li>2. Power Seat Switch (P)</li> <li>3. Wire Harness</li> </ol>	<p>–</p> <p><a href="#">BE-126</a></p> <p>–</p>



"Slide operation" does not operate.	1. Power Seat Switch (D, P) 2. Wire Harness 3. Slide Motor (D, P)	BE-126 – BE-126
"Front Vertical Operation" does not operate.	1. Power Seat Switch (D, P) 2. Wire Harness 3. Front Vertical Motor (D, P)	BE-126 – BE-126
"Lifter Operation" does not operate.	1. Power Seat Switch (D, P) 2. Wire Harness 3. Lifter Motor (D, P)	BE-126 – BE-126
"Reclining Operation" does not operate.	1. Power Seat Switch (D, P) 2. Wire Harness 3. Reclining Motor (D, P)	BE-126 – BE-126
"Lumbar Support Operation" does not operate.	1. Power Seat Switch (D) 2. Wire Harness 3. Lumbar Support Motor (D)	BE-126 – BE-126

(D): Driver's Seat

(P): Passenger's Seat

**POWER MIRROR CONTROL SYSTEM:**

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

Symptom	Suspect Area	See page
Both right and left mirrors do not operate.	1. MIRR Fuse 2. Mirror Switch 3. CIGAR Fuse 4. ECU-IG Fuse 5. Body ECU 6. Wire Harness	BE-17 BE-133 BE-17 BE-17 DI-696 –
Only one side of mirror does not operate.	1. Mirror Motor 2. Wire Harness 3. Body ECU	BE-133 – DI-696
The mirror does not return to the memorized position.	1. Mirror Position Sensor (Position is not set) 2. Wire Harness 3. Body ECU	BE-133 – DI-696
The memorized position is moved.	1. Mirror Position Sensor (Position is not set) 2. Wire Harness	BE-133 –

**ELECTRO CHROMIC MIRROR SYSTEM:**

Symptom	Suspect Area	See page
Electro Chromic Inner Mirror does not operate.	1. ECU-IG Fuse 2. Electro Chromic Inner Mirror 3. Wire Harness	BE-17 BE-140 –
Electro Chromic Outer Mirror does not operate.	1. ECU-IG Fuse 2. Electro Chromic Outer Mirror 3. Electro Chromic Inner Mirror 4. Wire Harness	BE-17 BE-140 BE-140 –

**SEAT HEATER SYSTEM:**

Symptom	Suspect Area	See page
Seat heaters do not operate. (Driver's and Passenger's)	1. SEAT HTR Fuse 2. Seat Heater Switch (D, P) 3. Wire Harness 4. Seat Heater	– BE-143 – BE-143
Driver's seat heater does not operate.	1. Seat Heater Switch (D, P) 2. Wire Harness	BE-143 –

Passenger's seat heater does not operate.	1. Seat Heater Switch (D, P) 2. Wire Harness	BE-143 –
Seat heater temperature is too hot.	1. Seat Heater	BE-143

**AUDIO SYSTEM:**

Symptom	Suspect Area	See page
Audio system abnormal operation.	TROUBLESHOOTINGS	BE-148

**CLOCK SYSTEM:**

Symptom	Suspect Area	See page
Passenger seat belt warning system does not light up.	TROUBLESHOOTING NO.1	BE-176
Clock will not operate.	TROUBLESHOOTING NO.1	BE-176
Clock loses or gains time.	TROUBLESHOOTING NO.2	BE-176

**GARAGE DOOR OPENER SYSTEM:**

Symptom	Suspect Area	See page
The equipment of which code has been registered does not operate.	1. Garage Door Opener Switch 2. Wire Harness 3. *	BE-183 – –
LED does not light up. (Even though either switch is pressed.)	1. Garage Door Opener Switch 2. Wire Harness	BE-183 –
LED does not light up. (Only one switch is pressed.)	1. Garage Door Opener Switch	BE-183

\* As the GARAGE DOOR OPENER on the vehicle side seems to be normal, check the OPENER on the equipment side, of which code has been registered.

**ENGINE IMMOBILIZER SYSTEM:**

Symptom	Suspect Area	See page
Engine immobilizer system does not operate.	See DIAGNOSIS SYSTEM	DI-682

**HORN SYSTEM:**

Symptom	Suspect Area	See page
Horn system does not operate.	1. HORN Fuse 2. Horn Relay 3. Horn Switch 4. Horn 5. Wire Harness	– BE-197 BE-197 BE-197 –
Horns blow all the time.	1. Horn Relay 2. Horn Switch 3. Wire Harness	BE-197 BE-197 –
One horn operates but the other horn does not operate.	1. Horn 2. Wire Harness	BE-197 –
Horns operate abnormally.	1. Horn Relay 2. Horn 3. Wire Harness	BE-197 BE-197 –