


ENGINE INSPECTION

HINT:

Inspect these items when the engine is cold.

1. **REPLACE TIMING BELT**
(See page [EM-15](#))
2. **INSPECT VALVE CLEARANCE**
(See page [EM-4](#))
3. **INSPECT DRIVE BELT**
(See page [CH-2](#))
4. **REPLACE ENGINE OIL AND OIL FILTER**
(See page [LU-2](#))
5. **REPLACE ENGINE COOLANT**
(See page [CO-2](#))
6. **INSPECT EXHAUST PIPES AND MOUNTINGS**

Visually inspect the pipes, hangers and connections for severe corrosion, leaks or damage.

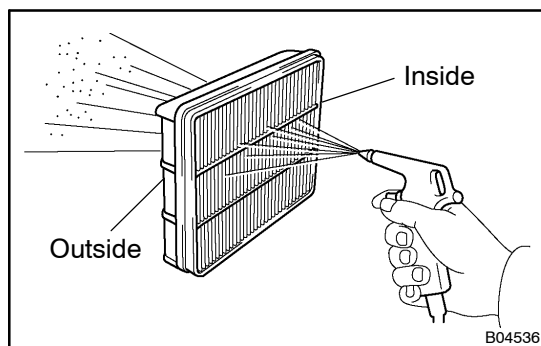

7. **Canada:**
INSPECT AIR CLEANER FILTER
 - (a) Remove the air cleaner case and air cleaner filter.
 - (b) Visually check that the air cleaner filter is not excessively damaged or oily.If necessary, replace the air cleaner filter.
 - (c) Clean the filter with compressed.
First blow from the inside thoroughly, then blow off the outside of the filter.
 - (d) Reinstall the air cleaner filter and air cleaner case.
8. **REPLACE AIR CLEANER FILTER**
Replace the air cleaner filter with a new one.
9. **INSPECT FUEL LINES, CONNECTIONS AND FUEL VAPOR CONTROL VALVE**
(See page [EC-5](#))
Visually inspect the fuel lines for cracks, leakage loose connections, deformation or tank band looseness.
10. **INSPECT GASKET IN FUEL TANK CAP**
(See page [EC-5](#))
11. **REPLACE SPARK PLUGS**
(See page [IG-1](#))
12. **California, Massachusetts and New York**
INSPECT CHARCOAL CANISTER
(See page [EC-5](#))