


CONDENSER FAN RELAY INSPECTION

AC1LX-02

- 1. REMOVE CONDENSER FAN RELAY**
- (a) Remove the front bumper cover (See page [BO-4](#)).
 - (b) Disconnect the connector.
 - (c) Release the claw and remove the condenser fan relay.

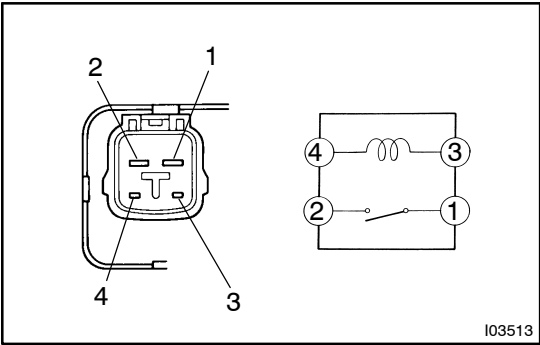

2. INSPECT CONDENSER FAN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 – 4	Continuity
Apply B+ between terminals 3 and 4.	1 – 2	Continuity

If continuity is not as specified, replace the condenser fan relay.

3. INSTALL CONDENSER FAN RELAY