

DTC	B1272 / 72	Power seat ECU communication stop (w/ Seat memory vehicle only)
------------	-------------------	--

CIRCUIT DESCRIPTION

This DTC is output when communication stops between power seat ECU and Body No.1 ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1272/72	No communication from seat ECU more than 10 seconds.	<ul style="list-style-type: none">• Power seat ECU• Wireharness

WIRING DIAGRAM

See page [DI-755](#).

INSPECTION PROCEDURE

1	Check power seat ECU.
----------	------------------------------

CHECK:

Check that the operation of front vertical and rear vertical is normal.

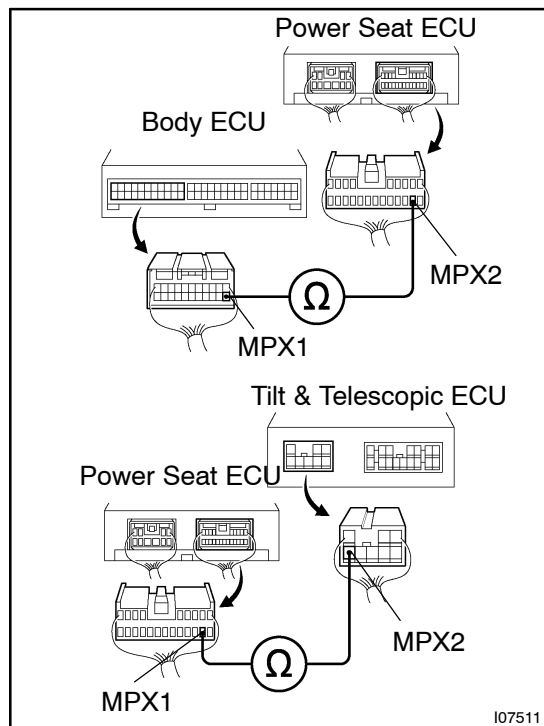
HINT:

With this inspection, the power seat ECU CPU can be diagnosed if it works normally or not.

NG

Replace the power seat ECU.

OK

2**Check wireharness.****PREPARATION:**

Disconnect connector body ECU, power seat ECU and tilt & telescopic ECU.

CHECK:

- (a) Check continuity between terminals MPX1 of body ECU and MPX2 of power seat ECU.
- (b) Check continuity between terminals MPX1 of power seat ECU and MPX2 of tilt & telescopic ECU.

OK:

There is a continuity in wireharness.

NG**Repair or replace wireharness.****OK****Replace power seat ECU.**