


<b>DTC</b>	<b>C1794 / 94, C1795 / 95</b>	<b>Vehicle Speed Sensor Circuit</b>
------------	-------------------------------	-------------------------------------

## CIRCUIT DESCRIPTION

This circuit receiving the speed detected by the speed sensor from the ABS ECU.

DTC No.	DTC Detecting Condition	Trouble Area
C1794 / 94 C1795 / 95	Vehicle speed 12 mph (20 km/h) or higher signal does not input	<ul style="list-style-type: none"> <li>• Right front, left front speed sensor</li> <li>• Each speed sensor circuit</li> <li>• ABS ECU</li> <li>• ECU</li> </ul>

## WIRING DIAGRAM

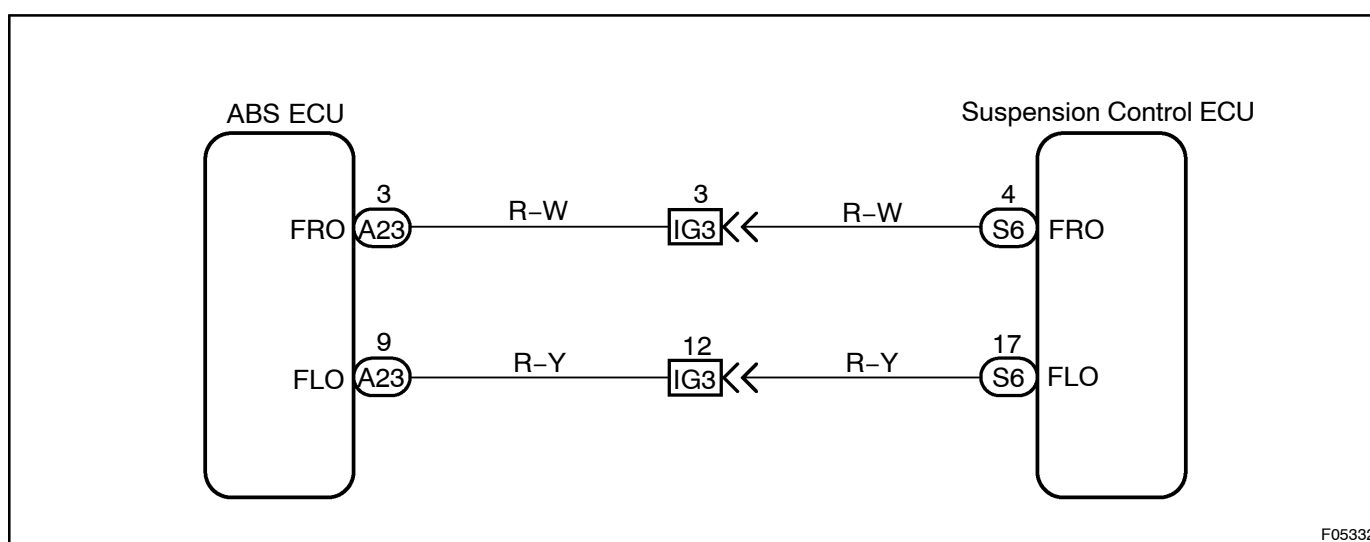

F05332

## INSPECTION PROCEDURE

<b>1</b>	<b>Check whether or not the ABS ECU outputs DTC 31 or 32.</b>
----------	---

Check DTC on page [DI-326](#).

**YES**

**Check ABS speed sensor circuit (See page [DI-338](#)).**

**NO**

2	<b>Check for open and short circuit in harness and connector between ABS ECU and suspension control ECU (See page <a href="#">IN-33</a>).</b>
---	---

**NG****Repair or replace harness or connector.****OK****Check and replace suspension control ECU.**