

## CIRCUIT DESCRIPTION

Connect the terminals Tc and E<sub>1</sub> of the DLC1 to make the height control OFF indicator light flashed and DTC output.

Troubleshooting in accordance with the chart below for each trouble symptom.

Height control OFF indicator light does not light up	Go to step 1
Height control OFF indicator light flushes	Go to step 3

**1 Check height control OFF indicator light.**

See combination meter troubleshooting on page [BE-79](#).

**NG****Repair bulb or combination meter assembly.****OK****2 Check for open circuit in harness and connector between height control OFF indicator light and suspension control ECU (See page [IN-33](#)).****NG****Repair or replace harness or connector.****OK****Check and replace suspension control ECU.****3 Check that the ECU connectors are securely connected to the ECU.****NO****Connect the connector to the ECU.****YES****4 Is DTC output?**

Check DTC on page [DI-232](#).

**YES****Repair circuit indicated by the code output.****NO**

5	<b>Check for short circuit in harness and connector between height control OFF indicator light and suspension control ECU (See page <a href="#">IN-33</a>).</b>
---	---

NG

**Repair or replace harness or connector.**

OK

**Check and replace suspension control ECU.**