

## REMOVAL

### 1. DRAIN SUSPENSION FLUID AHC

- (a) Connect the hose to the bleeder plug for damping force control actuator and loosen the bleeder plug.

#### CAUTION:

**While the fluid is being discharged, vehicle height is lowered suddenly.**


- (b) After the fluid pressure has dropped and oil has drained out, tighten the bleeder plug and remove the hose.

**Torque: 8.3 N·m (84 kgf·cm, 73 in·lbf)**

### 2. REMOVE FRONT WHEEL

**Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)**


### 3. REMOVE FRONT FENDER APRON

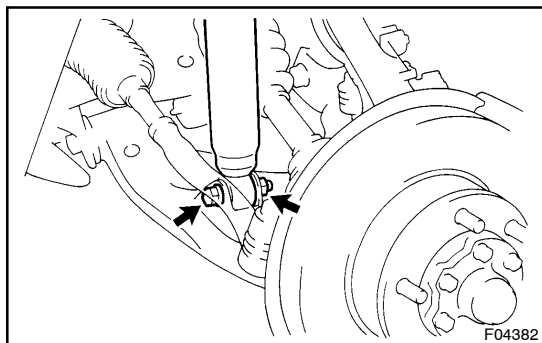

### 4. REMOVE SHOCK ABSORBER

- (a) Remove the bolt, nut and disconnect the shock absorber from the lower suspension arm.

**Torque: 135 N·m (1,400 kgf·cm, 101 ft·lbf)**

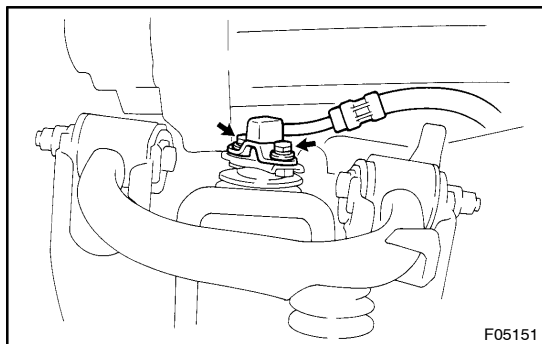

- (b) Remove the 2 bolts and disconnect the pressure hose.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

- (c) Remove the O-ring and back up ring from the pressure hose.

#### HINT:

At the time of installation, replace the used O-ring and back up ring with new ones.

- (d) While holding the cushion, remove the nut, cushion, retainer and shock absorber.

**Torque: 68 N·m (700 kgf·cm, 51 ft·lbf)**

- (e) Remove the cushion and retainer from the shock absorber.