

## INSTALLATION

Installation is in the reverse order of removal (See page [SA-67](#)).

HINT:

After installation, check the front wheel alignment. (See page [SA-5](#))