



## REMOVAL

1. **REMOVE REAR WHEEL**  
Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)
2. **SUPPORT REAR AXLE HOUSING WITH JACK**

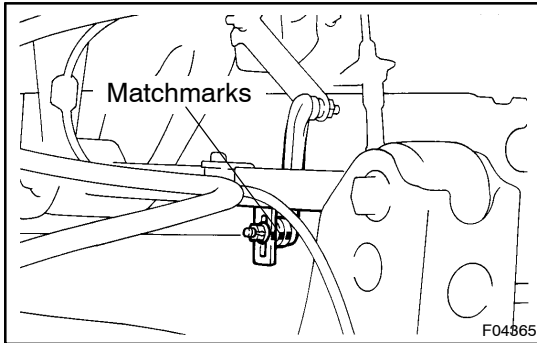

3. **LH Side:**  
**DISCONNECT HEIGHT CONTROL SENSOR LINK**
  - (a) Place matchmarks on the height control sensor link and upper control arm.
  - (b) Remove the nut and disconnect the height control sensor link.  
Torque: 5.6 N·m (57 kgf·cm, 49 in·lbf)
4. **REMOVE UPPER CONTROL ARM**
  - (a) Disconnect the ABS speed sensor wire harness.
  - (b) RH side:  
Remove the bolt from the heat insulator.  
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

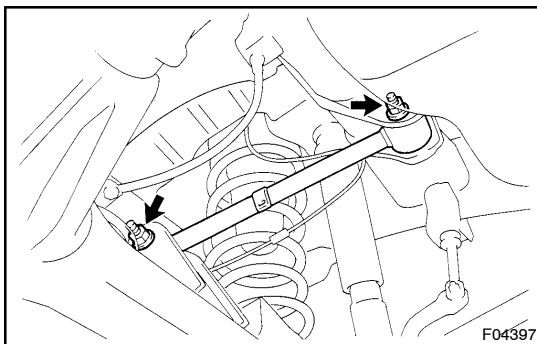


- (c) Remove the 2 nuts, washers, bolts, and upper control arm.  
Torque: 150 N·m (1,530 kgf·cm, 111 ft·lbf)

### HINT:

At the time of installation, please refer to the following items.

- Replace the used 2 nuts with new ones.
- After stabilizing the suspension, torque the nuts.

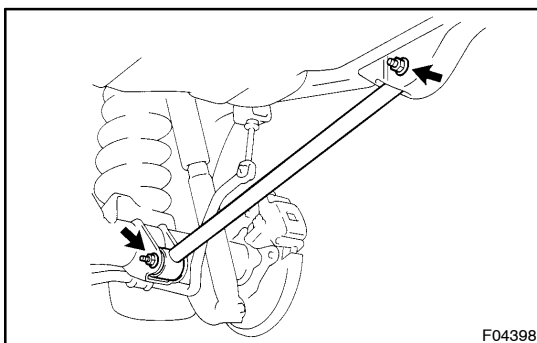

5. **REMOVE LOWER CONTROL ARM**  
Remove the 2 nuts, washers, bolts and lower control arm.  
Torque: 150 N·m (1,530 kgf·cm, 111 ft·lbf)

### HINT:

At the time of installation, please refer to the following items.

- Replace the used 2 nuts with new ones.
- After stabilizing the suspension, torque the nuts.