


## ADJUSTMENT

### 1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Using SST, loosen the body side hinge bolts to adjust.

SST 09812-00010

**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

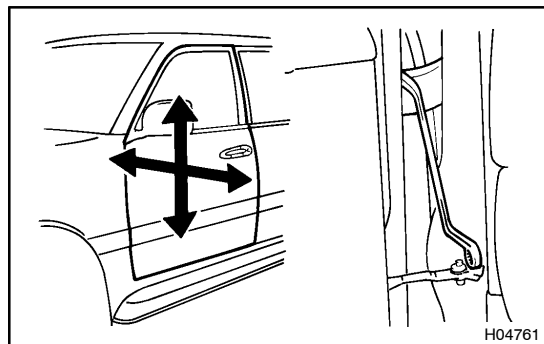


### 2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

HINT:

Substitute the bolt with washer for the centering bolt.

**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

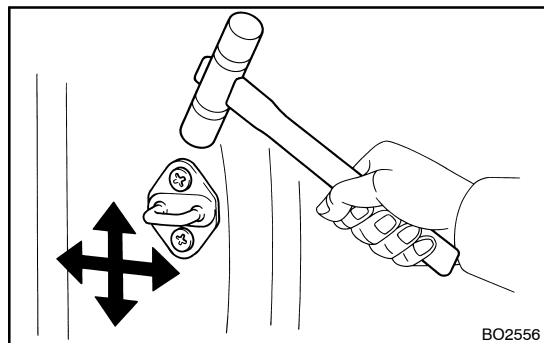

### 3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Loosen the striker mounting screws.

**Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)**

(c) Using a plastic hammer, tap the striker to adjust it.