


REMOVAL


1. REMOVE THESE PARTS:

- (a) Rear No.2 seat
- (b) Rear door scuff plate
- (c) Rear No.2 seat outer belt floor anchor
- (d) Rear No.1 seat outer belt floor anchor
- (e) Opening trim
- (f) Rear mat set plate

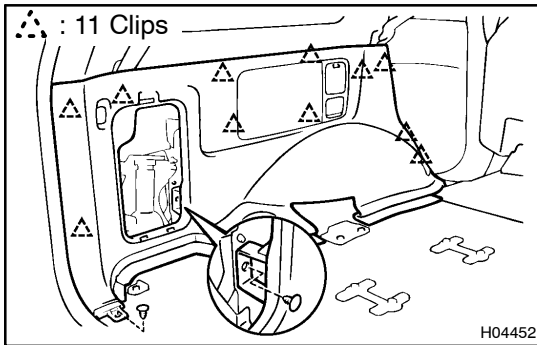


2. REMOVE LH QUARTER TRIM PANEL

- (a) Remove the quarter trim jack cover.
- (b) Using a clip remover, remove the 2 clips.
- (c) Remove the quarter trim panel, then disconnect the connector.

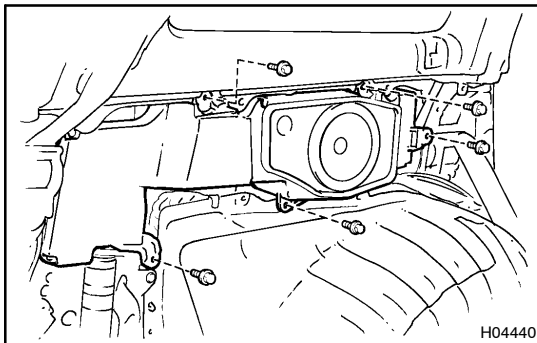


3. REMOVE SPEAKER

- (a) Remove the 5 bolts, then disconnect the connector.
- (b) Remove the speaker.

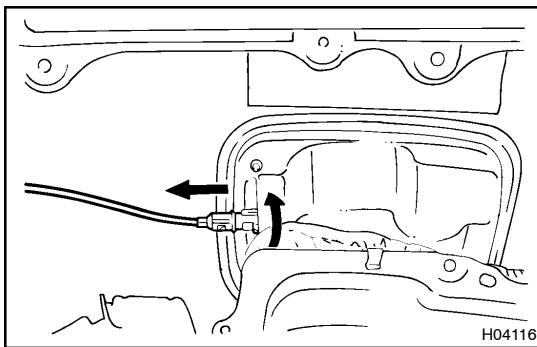


4. REMOVE FUEL FILLER OPENING LID LOCK

- (a) Turn the fuel filler opening lid lock to remove it.
- (b) Remove the fuel filler opening lid lock.

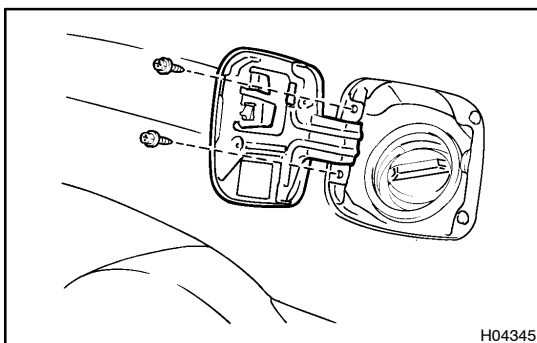

5. REMOVE FUEL FILLER OPENING LID

- (a) Open the opening lid.
- (b) Remove the 2 screws and opening lid.

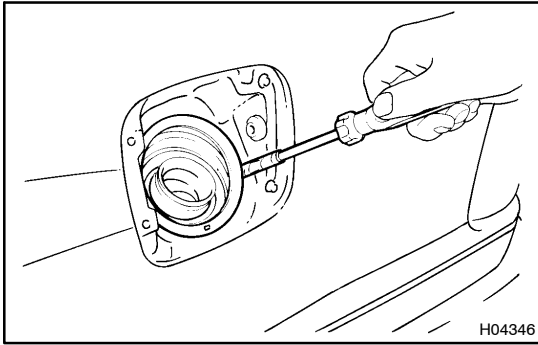**6. REMOVE FUEL TANK FILLER PIPE SHIELD**

- (a) Remove the fuel filler opening lid lock retainer.
- (b) Using a screwdriver, remove the 2 fuel tank filler pipe shield rings.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the fuel tank filler pipe shield.

CAUTION:

- **Always keep the tank cap closed when it is not required to be opened.**
- **Keep all fire away during the operation.**