


## REMOVAL

### 1. REMOVE THESE PARTS:

- (a) Rear No.2 seat
- (b) Rear door scuff plate
- (c) Rear mat set plate

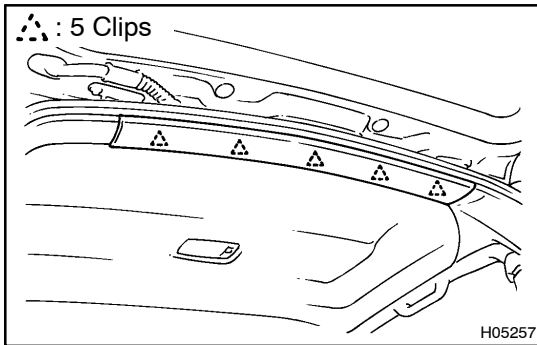

### 2. REMOVE ROOF HEADLINING REAR TRIM


Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape the screwdriver tip before use.

### 3. REMOVE THESE PARTS:

- (a) Rear No.2 seat outer belt floor anchor  
**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**
- (b) Rear No.1 seat outer belt floor anchor  
**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**
- (c) Rear door opening trim
- (d) Rear mat set plate

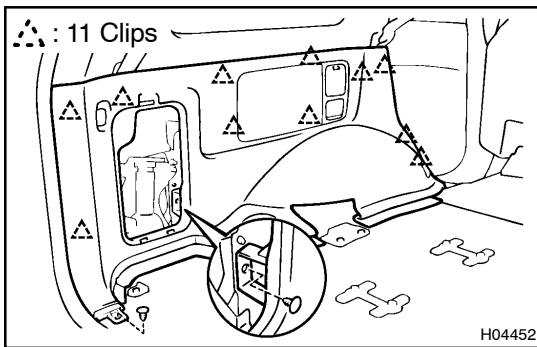


### 4. REMOVE QUARTER TRIM PANEL

- (a) Remove the quarter trim jack cover.
- (b) Using a clip remover, remove the 2 clips.
- (c) Remove the quarter trim panel, then disconnect the connector.

### 5. REMOVE THESE PARTS:

- (a) Anchor cover
- (b) Rear No.2 seat outer belt shoulder anchor  
**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**
- (c) Rear No.1 seat outer belt shoulder anchor  
**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**

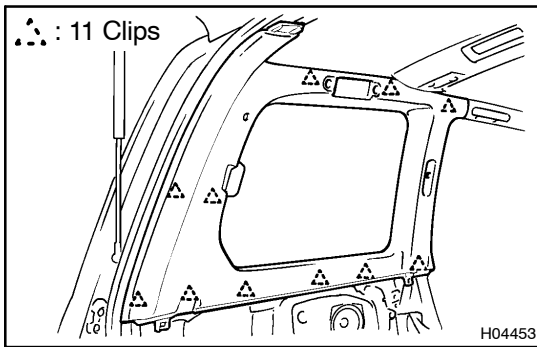

## 6. REMOVE UPPER ROOF SIDE INNER GARNISH

- (a) Using a screwdriver, remove the assist grip plugs, then remove the 4 screws and assist grip.


HINT:

Tape the screwdriver tip before use.

- (b) Using a screwdriver, remove the upper roof side inner garnish.


HINT:

Tape the screwdriver tip before use.

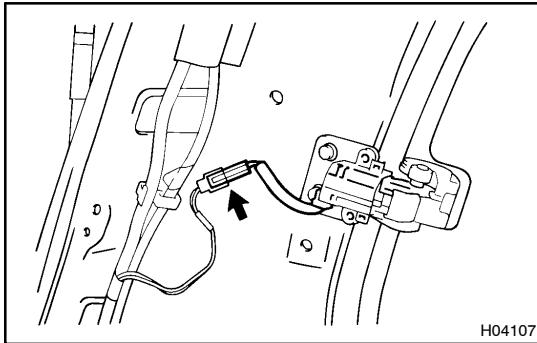


## 7. REMOVE QUARTER WINDOW GLASS ASSEMBLY

- (a) Disconnect the connector.

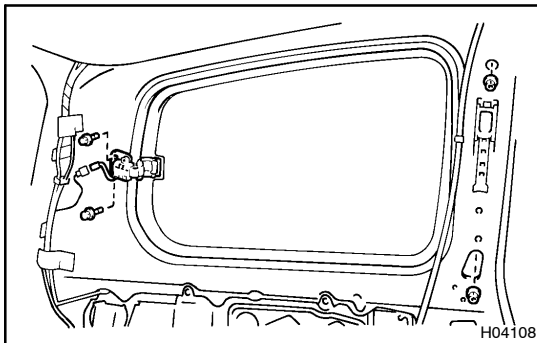


- (b) Remove the 2 nuts and 2 bolts.  
 (c) Remove the quarter window glass.  
 (d) Remove the quarter window weatherstrip.

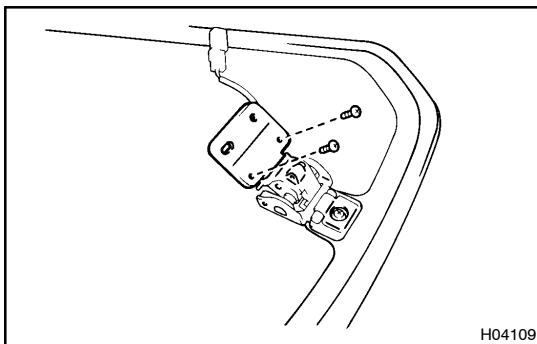


## 8. REMOVE POWER VENT MOTOR ASSEMBLY

- (a) Remove the 2 screws, then remove the bracket.

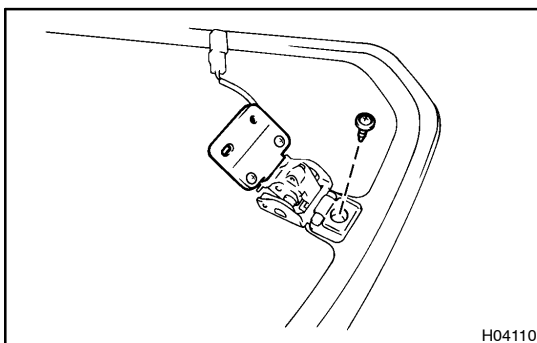

- (b) Remove the screw and the power vent motor assembly.

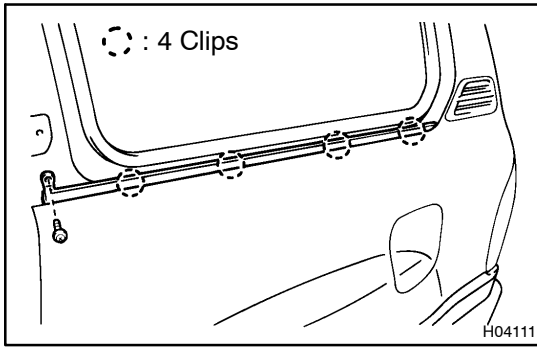**9. REMOVE QUARTER BELT MOULDING**

- (a) Remove the screw.
- (b) Using a screwdriver, remove the quarter belt moulding.

**HINT:**

Tape the screwdriver tip before use.