



REMOVAL

REMOVE A/C CONTROL ASSEMBLY

- (a) Using a moulding remover, remove the center cluster in order "A", "B", "C", "D".
- (b) Disconnect the connector.