


# AIR OUTLET SERVOMOTOR INSPECTION

AC1LL-02


## 1. REMOVE LOWER NO. 1 PANEL(See page AC-85)

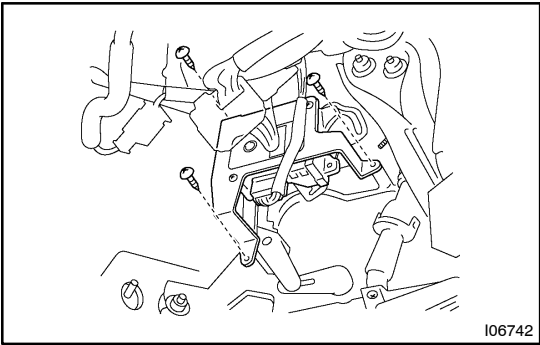

I06742

## 2. REMOVE AIR OUTLET SERVOMOTOR

- Disconnect the connector.
- Remove the 3 screws and air outlet servomotor.

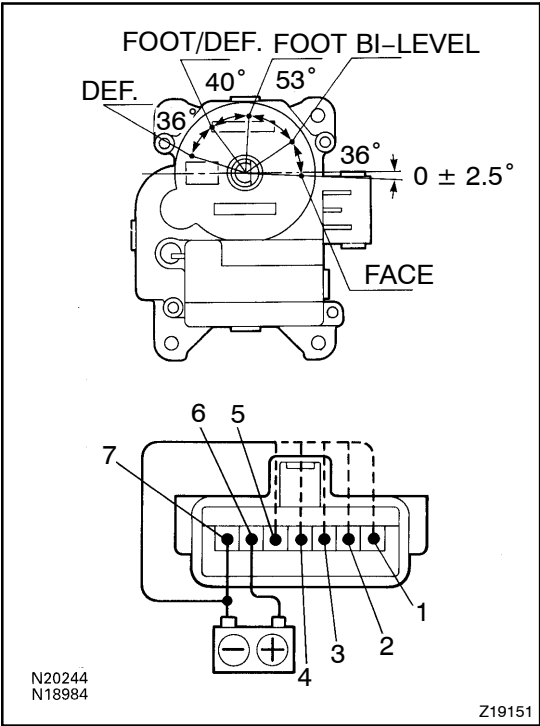

N20244  
N18984

Z19151

## 3. INSPECT AIR OUTLET SERVOMOTOR OPERATION

- Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7.
- Connect the negative (-) lead from the battery to each terminal and check that the shaft rotates at each position, as shown in the chart.

Connected terminal	Position
5	DEF.
4	FOOT/DEF.
3	FOOT
2	B/L
1	FACE

If operation is not as specified, replace the servomotor.

## 4. INSTALL AIR OUTLET SERVOMOTOR

- Install the air outlet servomotor with the 3 screws.
- Connect the connector.