


## REMOVAL

### 1. REMOVE FRONT COOLING UNIT (See page [AC-24](#))

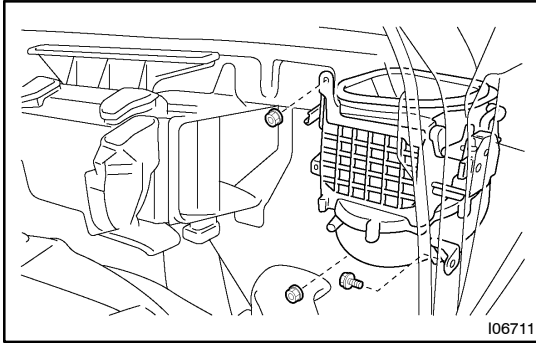

### 2. REMOVE BLOWER UNIT

- (a) Disconnect the connectors.
- (b) Remove the bolt, 2 nuts and blower unit.