

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.


Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 1,050 ± 50 g (37.03 ± 1.76 oz.)


2. DISCONNECT LIQUID AND SUCTION TUBES FROM FRONT COOLING UNIT (See page [AC-24](#))

3. REMOVE INSTRUMENT PANEL (See page [BO-96](#))

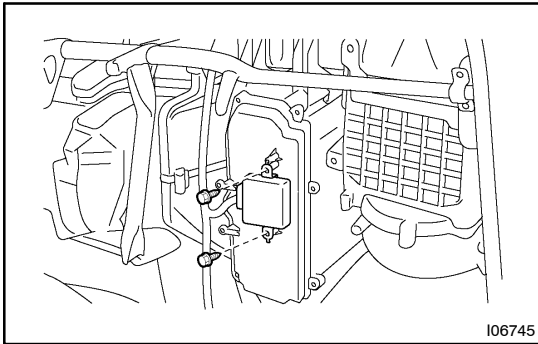

4. REMOVE ANTENNA RELAY

- Disconnect the connector.
- Remove the 2 screws and antenna relay.

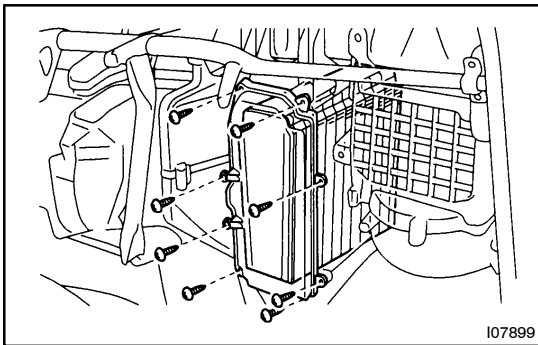

5. REMOVE EVAPORATOR

- Disconnect the connector.
- Disconnect the connector clamp.
- Remove the 8 screws and No .1 cooler cover.
- Pull out the evaporator.